

Submersible Pump in Discharge Tube

Amacan S

50 Hz

Amacan S 650 - 364

Amacan S 650 - 365

Amacan S 650 - 404

Amacan S 650 - 405

Amacan S 800 - 505

Installation/Operating Manual



Mat. No.: 05152104

Legal information/Copyright

Installation/Operating Manual Amacan S

Original operating manual

All rights reserved. The contents provided herein must neither be distributed, copied, reproduced, edited or processed for any other purpose, nor otherwise transmitted, published or made available to a third party without the manufacturer's express written consent.

Subject to technical modification without prior notice.

© KSB SE & Co. KGaA, Frankenthal 2023-10-10

Contents

Glossary	6
1 General.....	7
1.1 Principles	7
1.2 Installation of partly completed machinery.....	7
1.3 Target group.....	7
1.4 Other applicable documents.....	7
1.5 Symbols	7
1.6 Key to safety symbols/markings.....	8
2 Safety	9
2.1 General.....	9
2.2 Intended use	9
2.3 Personnel qualification and training.....	9
2.4 Consequences and risks caused by non-compliance with this manual	10
2.5 Safety awareness	10
2.6 Safety information for the operator/user	10
2.7 Safety information for maintenance, inspection and installation	10
2.8 Unauthorised modes of operation	11
3 Transport/Storage/Disposal	12
3.1 Checking the condition upon delivery	12
3.2 Transport.....	12
3.2.1 Transporting the delivered pump set to the place of installation.....	12
3.2.2 Placing the pump set in a vertical or horizontal position	12
3.2.3 Transporting the pump set.....	14
3.3 Storage/preservation	15
3.4 Return to supplier.....	16
3.5 Disposal	17
4 Description of the Pump (Set)	18
4.1 General description	18
4.2 Product information as per Regulation No. 1907/2006 (REACH).....	18
4.3 Designation.....	18
4.4 Name plate.....	19
4.5 Design details.....	19
4.6 Installation types	20
4.7 Configuration and function.....	21
4.8 Scope of supply.....	22
4.9 Dimensions and weights	22
5 Installation at Site	23
5.1 Safety regulations.....	23
5.2 Checks to be carried out prior to installation.....	23
5.2.1 Checking the structural requirements	23
5.2.2 Checking the operating data	23
5.2.3 Checking the lubricant of the mechanical seal	23
5.2.4 Checking the direction of rotation	24
5.3 Lowering the pump set into the discharge tube.....	26
5.3.1 Information for correct installation.....	27
5.3.2 Installing the pump set without support rope.....	27
5.3.3 Installing the pump set with a support rope.....	28
5.3.4 Installing the pump set with a support rope and support spacer.....	31
5.4 Electrical system.....	38
5.4.1 Information for planning the control system.....	38
5.4.2 Electrical connection.....	42

6	Commissioning/Start-up/Shutdown	44
6.1	Commissioning/Start-up	44
6.1.1	Prerequisites for commissioning/start-up	44
6.1.2	Start-up	44
6.2	Operating limits	45
6.2.1	Operation on the power supply mains	45
6.2.2	Frequency of starts	45
6.2.3	Operation on a frequency inverter	45
6.2.4	Fluid handled	46
6.3	Shutdown/storage/preservation	47
6.3.1	Shutdown	47
6.3.2	Measures to be taken for shutdown	47
6.4	Returning to service	48
7	Servicing/Maintenance	49
7.1	Safety regulations	49
7.2	Maintenance/inspection	51
7.2.1	Inspection work	51
7.3	Removing the pump set	53
7.3.1	Removing the pump set	53
7.3.2	Drainage/cleaning	54
7.3.3	Checking the cable bundle	54
7.3.4	Checking the earth conductor	55
7.3.5	Checking the mechanical seal leakage	55
7.3.6	Visually inspecting for corrosion	56
7.4	Lubrication and lubricant change	56
7.4.1	Lubricating the mechanical seal	56
7.4.2	Lubricating the rolling element bearings	61
7.5	Dismantling the pump set	62
7.5.1	General information/Safety regulations	62
7.5.2	Preparing the pump set	63
7.5.3	Removing the bellmouth	64
7.5.4	Removing the impeller	64
7.5.5	Removing the mechanical seal	65
7.5.6	Dismantling the motor section	66
7.6	Reassembling the pump set	68
7.6.1	General information/Safety regulations	68
7.6.2	Installing the replacement cable gland	69
7.6.3	Fitting the motor housing cover	70
7.6.4	Installing the mechanical seal	71
7.6.5	Fitting the impeller	74
7.6.6	Fitting the bellmouth	75
7.6.7	Adjusting the clearance	76
7.6.8	Leak testing	77
7.7	Checking the electrical connection and motor	78
7.8	Tightening torques	78
7.9	Spare parts stock	79
7.9.1	Ordering spare parts	79
7.9.2	Recommended spare parts stock for 2 years' operation to DIN 24296	79
8	Trouble-shooting	81
9	Related Documents	83
9.1	General assembly drawing of pump sets with UAG motors (DKA motor)	83
9.2	Cable bundle	86
9.3	Wiring diagrams	88
9.3.1	Wiring diagram	88
9.3.2	Wiring diagrams for the sensors	89
9.4	Dimensions	91
9.5	General arrangement drawings	93

9.5.1	Installation type BU	93
9.5.2	Installation type BG	96
9.5.3	Installation type CU	99
9.5.4	Installation type CG	102
9.5.5	Installation type DU	105
9.5.6	Installation type DG	108
9.5.7	Dimensions of the flow-straightening vane.....	111
10	UK Declaration of Conformity.....	113
11	Certificate of Decontamination.....	114
	Index	115

Glossary

Certificate of decontamination

A certificate of decontamination is enclosed by the customer when returning the product to the manufacturer to certify that the product has been properly drained to eliminate any environmental and health hazards arising from components in contact with the fluid handled.

Close-coupled design

Motor directly fitted to the pump via a flange or a drive lantern

Submersible pump in discharge tube

A submersible motor pump which is completely submerged and suspended in a discharge tube

1 General

1.1 Principles

This operating manual is valid for the type series and variants indicated on the front cover.

The operating manual describes the proper and safe use of this equipment in all phases of operation.

The name plate indicates the type series and size, the main operating data, the order number and the order item number. The order number and order item number clearly identify the pump set and serve as identification for all further business processes.

In the event of damage, immediately contact your nearest KSB service facility to maintain the right to claim under warranty.

1.2 Installation of partly completed machinery

To install partly completed machinery supplied by KSB refer to the sub-sections under Servicing/Maintenance.

1.3 Target group

This operating manual is aimed at the target group of trained and qualified specialist technical personnel. (⇒ Section 2.3, Page 9)

1.4 Other applicable documents

Table 1: Overview of other applicable documents

Document	Contents
Data sheet	Description of the technical data of the pump (set)
Hydraulic characteristic curve	Characteristic curves showing head, NPSH required, efficiency and power input
General assembly drawing ¹⁾	Sectional drawing of the pump set
Sub-supplier product literature ¹⁾	Operating manuals and other product literature describing accessories and integrated machinery components
Spare parts lists ¹⁾	Description of spare parts

For accessories and/or integrated machinery components, observe the relevant manufacturer's product literature.

1.5 Symbols

Table 2: Symbols used in this manual

Symbol	Description
✓	Conditions which need to be fulfilled before proceeding with the step-by-step instructions
▷	Safety instructions
⇒	Result of an action
⇔	Cross-references
1. 2.	Step-by-step instructions
	Note Recommendations and important information on how to handle the product

¹ If included in agreed scope of supply

1.6 Key to safety symbols/markings

Table 3: Definition of safety symbols/markings

Symbol	Description
	DANGER This signal word indicates a high-risk hazard which, if not avoided, will result in death or serious injury.
	WARNING This signal word indicates a medium-risk hazard which, if not avoided, could result in death or serious injury.
	CAUTION This signal word indicates a hazard which, if not avoided, could result in damage to the machine and its functions.
	General hazard In conjunction with one of the signal words this symbol indicates a hazard which will or could result in death or serious injury.
	Electrical hazard In conjunction with one of the signal words this symbol indicates a hazard involving electrical voltage and identifies information about protection against electrical voltage.
	Machine damage In conjunction with the signal word CAUTION this symbol indicates a hazard for the machine and its functions.



2 Safety

All the information contained in this section refers to hazardous situations.

In addition to the present general safety information the action-related safety information given in the other sections must be observed.

2.1 General

- This operating manual contains general installation, operating and maintenance instructions that must be observed to ensure safe operation of the system and prevent personal injury and damage to property.
- Comply with all the safety instructions given in the individual sections of this operating manual.
- The operating manual must be read and understood by the responsible specialist personnel/operators prior to installation and commissioning.
- The contents of this operating manual must be available to the specialist personnel at the site at all times.
- Information and markings attached directly to the product must always be complied with and kept in a perfectly legible condition at all times. This applies to, for example:
 - Arrow indicating the direction of rotation
 - Markings for connections
 - Name plate
- The operator is responsible for ensuring compliance with all local regulations not taken into account.

2.2 Intended use

- The pump (set) must only be operated in the fields of application and within the use limits specified in the other applicable documents.
- Only operate pumps/pump sets which are in perfect technical condition.
- Do not operate the pump (set) in partially assembled condition.
- Only use the pump to handle the fluids described in the data sheet or product literature of the pump model or variant.
- Never operate the pump without the fluid to be handled.
- Observe the limits for continuous duty specified in the data sheet or product literature ($Q_{\min}$ and $Q_{\max}$) (to prevent damage such as shaft fracture, bearing failure, mechanical seal damage, etc).
- Observe the minimum flow rate and maximum flow rate indicated in the data sheet or product literature (to prevent overheating, mechanical seal damage, cavitation damage, bearing damage, etc).
- Always operate the pump (set) in the direction of rotation it is intended for.

2.3 Personnel qualification and training

All personnel involved must be fully qualified to transport, install, operate, maintain and inspect the machinery this manual refers to.

The responsibilities, competence and supervision of all personnel involved in transport, installation, operation, maintenance and inspection must be clearly defined by the operator.

Deficits in knowledge must be rectified by means of training and instruction provided by sufficiently trained specialist personnel. If required, the operator can commission the manufacturer/supplier to train the personnel.

Training on the pump (set) must always be supervised by technical specialist personnel.

2.4 Consequences and risks caused by non-compliance with this manual

- Non-compliance with these operating instructions will lead to forfeiture of warranty cover and of any and all rights to claims for damages.
- Non-compliance can, for example, have the following consequences:
 - Hazards to persons due to electrical, thermal, mechanical and chemical effects and explosions
 - Failure of important product functions
 - Failure of prescribed maintenance and servicing practices
 - Hazard to the environment due to leakage of hazardous substances

2.5 Safety awareness

In addition to the safety information contained in this operating manual and the intended use, the following safety regulations shall be complied with:

- Accident prevention, health regulations and safety regulations
- Explosion protection regulations
- Safety regulations for handling hazardous substances
- Applicable standards, directives and laws

2.6 Safety information for the operator/user

- Fit protective equipment (e.g. contact guards) supplied by the operator for hot, cold or moving parts, and check that the equipment functions properly.
- Do not remove any protective equipment (e.g. contact guards) during operation.
- Provide the personnel with protective equipment and make sure it is used.
- Contain leakages (e.g. at the shaft seal) of hazardous fluids handled (e.g. explosive, toxic, hot) so as to avoid any danger to persons and the environment. Adhere to all relevant laws.
- Eliminate all electrical hazards. (In this respect refer to the applicable national safety regulations and/or regulations issued by the local energy supply companies.)
- If stopping the pump does not increase potential risk, fit an emergency-stop control device in the immediate vicinity of the pump (set) during pump set installation.

2.7 Safety information for maintenance, inspection and installation

- Modifications or alterations of the pump (set) are only permitted with the manufacturer's prior consent.
- Use only original spare parts or parts/components authorised by the manufacturer. The use of other parts/components can invalidate any liability of the manufacturer for resulting damage.
- The operator ensures that maintenance, inspection and installation are performed by authorised, qualified specialist personnel who are thoroughly familiar with the manual.
- Only carry out work on the pump (set) during standstill of the pump.
- Only perform work on the pump set when it has been disconnected from the power supply (de-energised).
- The pump (set) must have cooled down to ambient temperature.
- Pump pressure must have been released and the pump must have been drained.

- When taking the pump set out of service always adhere to the procedure described in the manual. (⇒ Section 6.3, Page 47)
- Decontaminate pumps which handle fluids posing a health hazard.
- As soon as the work has been completed, re-install and re-activate any safety-relevant devices and protective devices. Before returning the product to service, observe all instructions on commissioning. (⇒ Section 6.1, Page 44)

2.8 Unauthorised modes of operation

Never operate the pump (set) outside the limits stated in the data sheet and in this operating manual.

The warranty relating to the operating reliability and safety of the pump (set) supplied is only valid if the equipment is used in accordance with its intended use.

3 Transport/Storage/Disposal

3.1 Checking the condition upon delivery

1. On transfer of goods, check each packaging unit for damage.
2. In the event of in-transit damage, assess the exact damage, document it and notify KSB or the supplying dealer and the insurer about the damage in writing immediately.

3.2 Transport

	⚠ DANGER Improper transport Danger to life from falling parts! Damage to the pump set! ▷ Use the attachment point provided for attaching the lifting accessory. ▷ Never lift the pump set by the electric cables. ▷ Use the lifting chain/rope included in the scope of supply exclusively for lowering or lifting the pump set into/out of the pump sump. ▷ Securely attach the lifting chain/rope to the pump and crane. ▷ Use tested, marked and approved lifting accessories only. ▷ Observe the regional transport regulations. ▷ Observe the documentation of the lifting accessory manufacturer. ▷ The load-carrying capacity of the lifting accessory must be higher than the weight indicated on the name plate of the pump set to be lifted. Take into account any additional system components to be lifted. ▷ Maintain a safe distance during lifting operations (load may swing when being lifted).
---	---

3.2.1 Transporting the delivered pump set to the place of installation

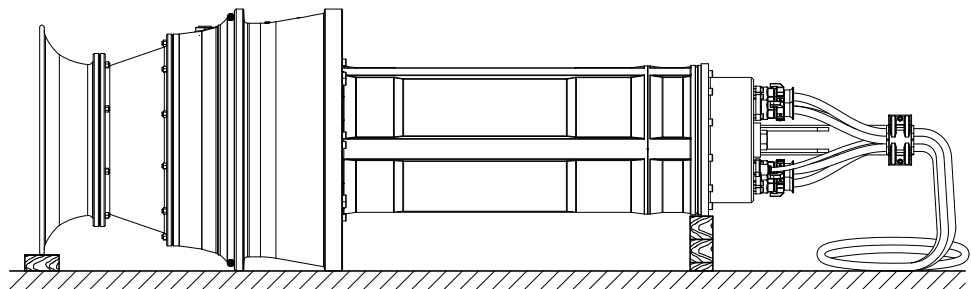


Fig. 1: Transporting the delivered pump set to the place of installation

- The pump set is supplied in a horizontal position on a suitable transport support.
- Use suitable lifting equipment to transport the pump set in its original packaging to its place of installation.
 Observe the marked centres of gravity and/or attachment points on the transport boxes!
 For the weight refer to the name plate or data sheet.

3.2.2 Placing the pump set in a vertical or horizontal position

	⚠ WARNING Pump set tilting Risk of squashing hands and feet! ▷ Suspend or support the pump set.
---	---

	! WARNING Placing the pump set on unsecured and uneven surfaces Personal injury and damage to property! ▷ Always place the pump set on a solid and level surface with the pump set in a vertical position and the motor on top. ▷ Only place the pump set on a surface of sufficient load-carrying capacity. ▷ Use appropriate means to secure the pump set against tilting or tipping over. ▷ Refer to the weights given in the data sheet/on the name plate.
	! WARNING Incorrect handling of the electric cable Personal injury and damage to property! ▷ Secure electric cables against falling down. ▷ Avoid electric cables being laid on surfaces without fastening. ▷ When moving the pump set keep at a safe distance to the electric cables.
	! WARNING Improper handling when placing the pump set in a vertical/horizontal position Personal injury and damage to property! ▷ Use one or two pieces of lifting equipment, depending on the pump (set) size. ▷ Use appropriate means to secure the pump set against tilting, tipping over or rolling off. ▷ Maintain a safe distance during lifting operations (load may swing when being lifted). ▷ Use additional supports for the transport holder to secure it against tilting.
	! WARNING Improper lifting/moving of heavy assemblies or components Personal injury and damage to property! ▷ Use suitable transport devices, lifting equipment and lifting tackle to move heavy assemblies or components.
	CAUTION Improper storage Damage to the electric cables! ▷ Support the electric cables at the cable gland to prevent permanent deformation. ▷ Only remove the protective caps from the electric cables at the time of installation.

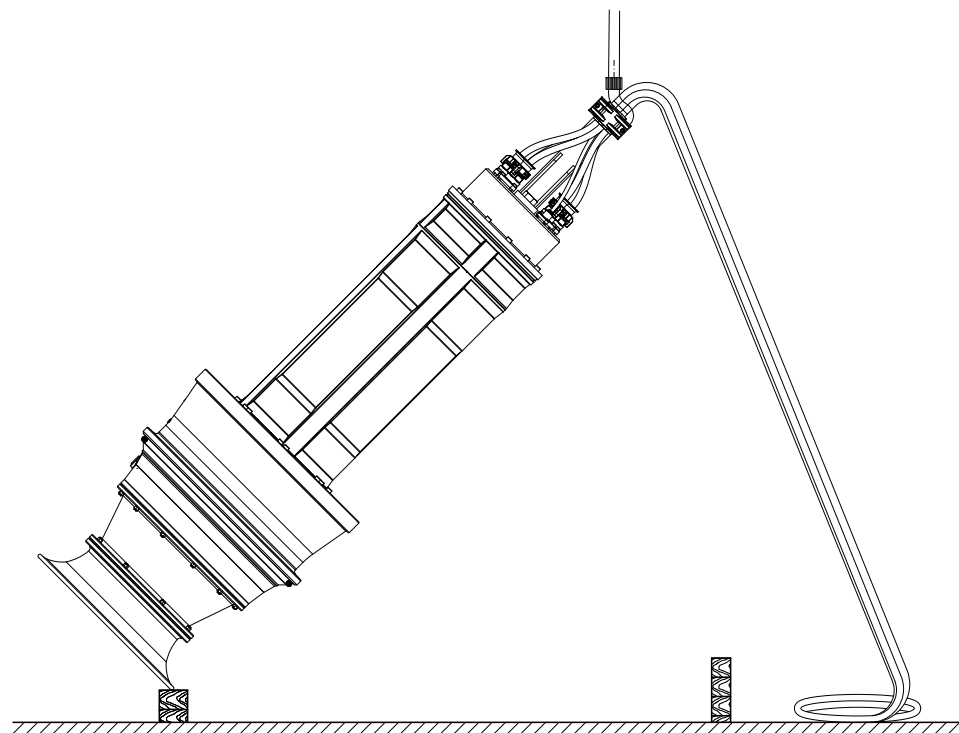


Fig. 2: Placing the pump set in a vertical or horizontal position

✓ Suitable lifting equipment has been selected (e.g. crane).

1. a) For one piece of lifting equipment: Attach the eyehook to the bail of the pump set.
b) For two pieces of lifting equipment: Attach one eyehook to the bail of the pump set. **Then** suitably loop a rope around the pump set and attach this loop to the second crane hook.
2. Lift the pump set with the lifting equipment.
 - ⇒ Guiding the pump set over the edge of the bellmouth or pump casing is only permissible on a wooden base!
 - ⇒ Protect the power cable against kinking!
3. Place the pump set on a level, clean surface and protect it against tilting, tipping over or rolling off.

3.2.3 Transporting the pump set

	 WARNING
	Incorrect positioning/placing down Personal injury and damage to property! ▷ Position the pump set vertically with the motor on top. ▷ Use appropriate means to secure the pump set against tilting and tipping over. ▷ Refer to the weights given in the data sheet/on the name plate.

	! WARNING Improper handling when placing the pump set in a vertical/horizontal position Personal injury and damage to property! ▷ Use one or two pieces of lifting equipment, depending on the pump (set) size. ▷ Use appropriate means to secure the pump set against tilting, tipping over or rolling off. ▷ Maintain a safe distance during lifting operations (load may swing when being lifted). ▷ Use additional supports for the transport holder to secure it against tilting.
	! WARNING Incorrect handling of the electric cable Personal injury and damage to property! ▷ Secure electric cables against falling down. ▷ Avoid electric cables being laid on surfaces without fastening. ▷ When moving the pump set keep at a safe distance to the electric cables.
	! WARNING Improper lifting/moving of heavy assemblies or components Personal injury and damage to property! ▷ Use suitable transport devices, lifting equipment and lifting tackle to move heavy assemblies or components.




Fig. 3: Transporting the pump set

Use suitable lifting equipment to transport the pump set in the illustrated position.

3.3 Storage/preservation

If commissioning is to take place some time after delivery, we recommend that the following measures be taken:

Store the pump set as follows:

- In its original packaging: in a horizontal position
- Without packaging: in a vertical position with the motor on top

	! WARNING Pump set tilting Risk of squashing hands and feet! ▷ Suspend or support the pump set.
---	---

	CAUTION Improper storage Damage to the electric cables! ▷ Support the electric cables at the cable gland to prevent permanent deformation. ▷ Only remove the protective caps from the electric cables at the time of installation.
	CAUTION Damage during storage due to humidity, dirt or vermin Corrosion/contamination of pump (set)! ▷ For outdoor storage cover the pump (set) and accessories with waterproof material and protect against condensation.
	CAUTION Wet, contaminated or damaged openings and connections Leakage or damage to the pump! ▷ Clean and cover pump openings and connections as required prior to putting the pump into storage.

Table 4: Ambient conditions for storage

Ambient condition	Value
Relative humidity	5 % to 85 % (non-condensing)
Ambient temperature	-20 °C to +70 °C

- Store the pump set under dry and vibration-free conditions, if possible in its original packaging.
1. Rotate the impeller by hand once every three months.

3.4 Return to supplier

1. Drain the pump properly. (⇒ Section 7.3.2, Page 54)
2. Flush and clean the pump, particularly if it has been used for handling noxious, explosive, hot or other hazardous fluids.
3. If the pump has handled fluids whose residues could lead to corrosion damage in the presence of atmospheric humidity or could ignite upon contact with oxygen, the pump must also be neutralised, and anhydrous inert gas must be blown through the pump to ensure drying.
4. Always complete and enclose a certificate of decontamination when returning the pump.
Indicate any safety measures and decontamination measures taken.
(⇒ Section 11, Page 114)

	NOTE If required, a blank certificate of decontamination can be downloaded from the following web site: www.ksb.com/certificate_of_decontamination
---	--

3.5 Disposal

	 WARNING Fluids handled, consumables and supplies which are hot and/or pose a health hazard Hazard to persons and the environment! ▸ Collect and properly dispose of flushing fluid and any fluid residues. ▸ Wear safety clothing and a protective mask if required. ▸ Observe all legal regulations on the disposal of fluids posing a health hazard.
---	--

1. Dismantle the pump (set).
Collect greases and other lubricants during dismantling.
2. Separate and sort the pump materials, e.g. by:
 - Metals
 - Plastics
 - Electronic waste
 - Greases and other lubricants
3. Dispose of materials in accordance with local regulations or in another controlled manner.

4 Description of the Pump (Set)

4.1 General description

- Submersible pump in discharge tube

Pump for handling pure water, pre-screened river water and stormwater, waste water without long fibres or large solid particles, and activated sludge

4.2 Product information as per Regulation No. 1907/2006 (REACH)

For information as per European chemicals regulation (EC) No. 1907/2006 (REACH) see <https://www.ksb.com/en-global/company/corporate-responsibility/reach>.

4.3 Designation

Example: Amacan S 650-365 / 80 4 UAG2

Table 5: Designation key

Code	Description	
Amacan	Type series	
S	Impeller type	
	S	Mixed flow impeller
650	Nominal diameter of the discharge tube [mm]	
365	Nominal impeller diameter [mm]	
80	Motor size	
4	Number of motor poles	
UA	Motor version	
	UA	Non-explosion-proof
G2	Material variant	
	G2	Grey cast iron, standard material variant
	G3	Grey cast iron with Zn anodes, shaft made of 1.4057 stainless steel

4.4 Name plate

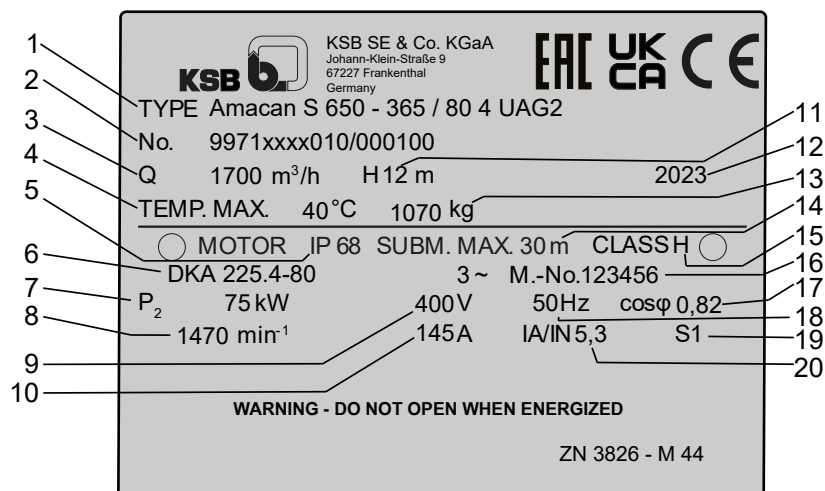


Fig. 4: Name plate (example) of a standard pump set

1	Designation	2	KSB order number
3	Flow rate	4	Maximum fluid temperature and ambient temperature
5	Enclosure	6	Motor type
7	Rated power	8	Rated speed
9	Rated voltage	10	Rated current
11	Head	12	Year of construction
13	Total weight	14	Maximum immersion depth ∇
15	Thermal class of winding insulation	16	Motor number
17	Power factor at rated operating point	18	Rated frequency
19	Duty type	20	Starting current ratio

4.5 Design details

Design

- Fully floodable submersible pump in discharge tube (submersible motor pump)
- Not self-priming
- Close-coupled design
- Single-stage
- Vertical installation

Drive

- Three-phase asynchronous squirrel-cage motor

Shaft seal

- Two bi-directional mechanical seals in tandem arrangement, with liquid reservoir
- Leakage chamber

Impeller type

- Open mixed flow impeller







Bearings

- Grease-lubricated rolling element bearings

4.6 Installation types

Six types are available for selection²⁾:

Table 6: Overview of installation types

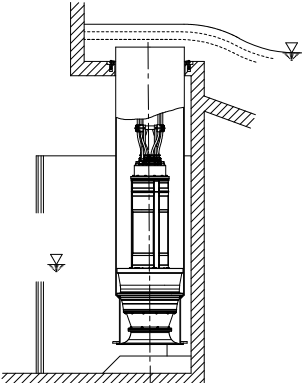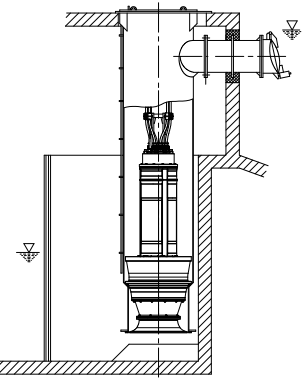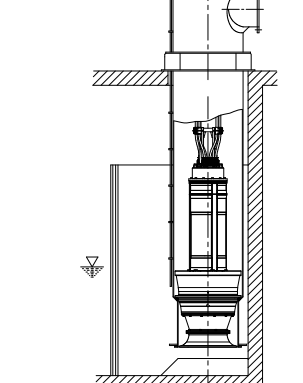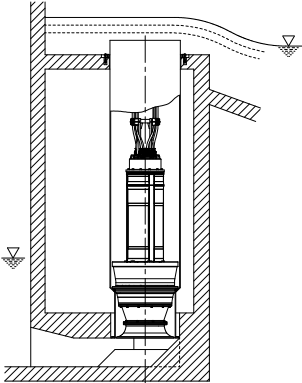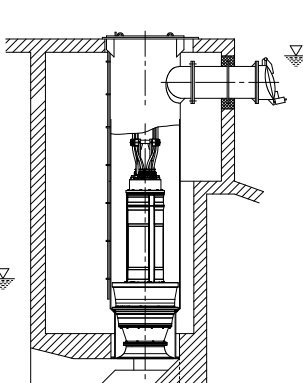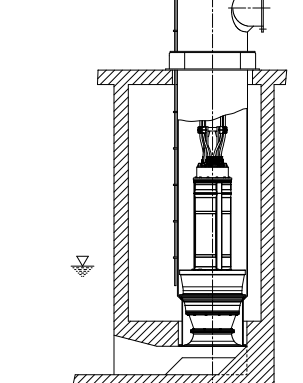		
BU discharge tube Overflow design for installation in open intake chamber	CU discharge tube Design with underfloor discharge for installation in open intake chamber	DU discharge tube Design with above floor discharge nozzle for installation in open intake chamber
		
BG discharge tube Overflow design for installation in covered intake chamber with low suction-side water levels	CG discharge tube Design with underfloor discharge for installation in covered intake chamber with low suction-side water levels	DG discharge tube Design with above-floor discharge nozzle for installation in covered intake chamber with low suction-side water levels

²⁾ For information on the various designs (foundation measurements, intake chamber, etc.) refer to the general arrangement drawings.

4.7 Configuration and function

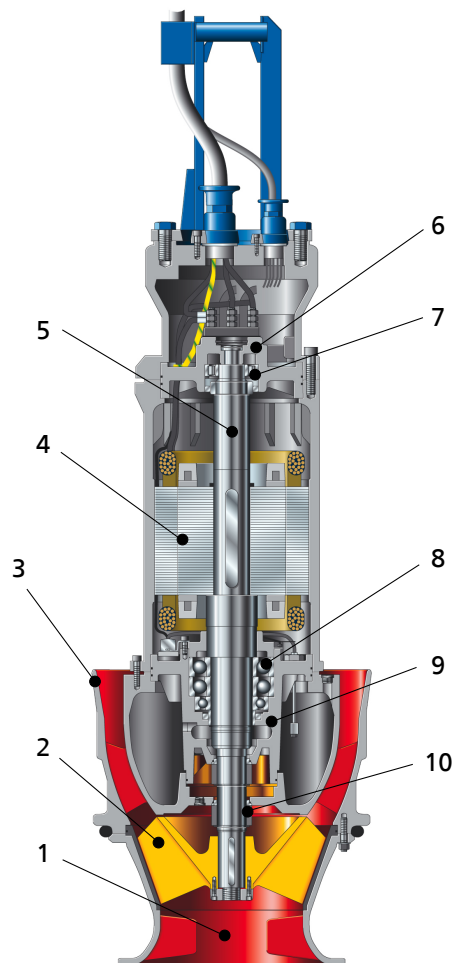


Fig. 5: Amacan with mixed flow impeller

1	Suction nozzle (bellmouth)	2	Impeller
3	Pump casing	4	Electric motor
5	Shaft	6	Bearing housing, drive end
7	Bearing, drive end	8	Bearing, pump end
9	Bearing housing, pump end	10	Shaft seal

Design The pump is designed with an axial fluid inlet and an axial outlet. The hydraulic system sits on the extended motor shaft. The shaft runs in common bearings.

Function The fluid enters the pump axially via a suction nozzle (bellmouth) (1) and is accelerated outward in a rotating flow by the rotating impeller (2). The required energy is transmitted from the electric motor (4) to the impeller (2) via the shaft (5). In the pump casing (3) the kinetic energy of the fluid is converted into pressure energy. The rotational movement diverts the fluid flow into a mixed flow. The shaft passage through the casing is sealed towards the fluid with a shaft seal (10). The shaft (5) runs in two rolling element bearings (7 and 8), which are supported by the lower bearing housing (9) and the upper bearing housing (6).

Sealing The pump is sealed by two bi-directional mechanical seals in tandem arrangement. A lubricant reservoir in-between the seals ensures cooling and lubrication of the mechanical seals.

Monitoring equipment The pump sets are equipped with various sensors.

Standard

- Temperature monitoring of the motor
- Temperature monitoring at the lower bearings
- Temperature monitoring at the upper bearing
- Leakage monitoring of the mechanical seal system
- Leakage sensors in the motor space

Option

- Additional monitoring of the winding temperature with Pt100

4.8 Scope of supply

Depending on the model, the following items are included in the scope of supply:

- Pump set complete with power cables
- O-ring
- Back-up name plate

Optional accessories:

- Support rope
- Accessories for installing the cable guide:
 - Fitting
 - Turnbuckle
 - Support
 - Shackle
 - Cable clamps
- Cable support sleeves
- Discharge tube
- Flow-straightening vane to prevent floor vortices
- AmaControl 5 monitoring system



NOTE

A separate name plate is included in the scope of supply.
This name plate must be attached in a clearly visible position outside the place of installation, e.g. at the control panel, pipeline or mounting bracket.

4.9 Dimensions and weights

For dimensions and weights refer to the name plate or data sheet of the pump set.

5 Installation at Site

5.1 Safety regulations

	 DANGER Improper installation in potentially explosive atmospheres Damage to the pump set! ▷ Comply with the applicable local explosion protection regulations. ▷ Observe the information given in the data sheet and on the pump/motor name plates.
	 DANGER Persons in the intake chamber during pump set operation Electric shock! Risk of injury! ▷ Never start up the pump set when there are persons in the intake chamber.
	 WARNING Impermissible solid objects (tools, screws/bolts or similar) in the pump sump/inlet tank during pump start-up Personal injury and damage to property! ▷ Check the pump sump/inlet tank for impermissible solid objects before flooding, and remove, if necessary.

5.2 Checks to be carried out prior to installation

5.2.1 Checking the structural requirements

All structural work required must have been prepared in accordance with the dimensions stated in the outline drawing / general arrangement drawing.

5.2.2 Checking the operating data

Before inserting the pump set into the discharge tube, verify the data on the name plate against the data given in the purchase order and the system data.

Back-up name plate

KSB's scope of supply includes a separate name plate attached to the end of the pump cable which indicates the pump and motor data.

1. Attach this name plate in a clearly visible position outside the discharge tube, e.g. at the control cabinet, pipeline or mounting bracket.

5.2.3 Checking the lubricant of the mechanical seal

The lubricant reservoir is filled at the factory with an environmentally-friendly, non-toxic lubricant.

Visual inspection for signs of oil leakage

1. If no oil leakage is visible in the area of pump casing, impeller or transport support, the lubricant reservoir is filled properly.
2. If oil leakage is visible in the area of pump casing, impeller or transport support, top up the lubricant reservoir.

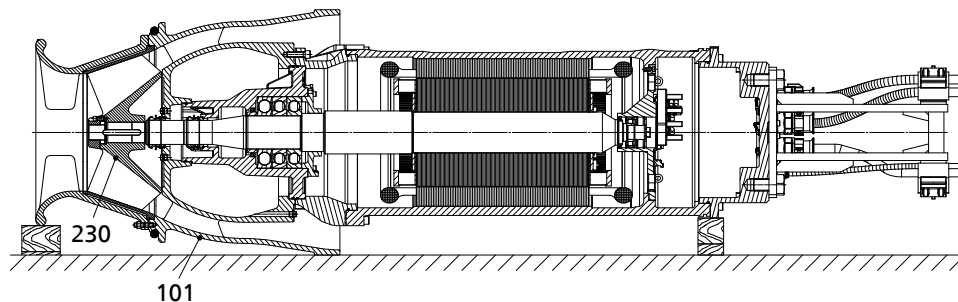


Fig. 6: Visual inspection for signs of oil leakage

For topping up the lubricant reservoir the pump set needs to be partly dismantled and reassembled.

Observe all safety instructions when carrying out the following steps of dismantling/reassembly:

Table 7: Dismantling/reassembly steps

Sequence	Steps	See the following section
1	Placing the pump in a vertical position	(⇒ Section 3.2.2, Page 12)
2	Removing the bellmouth	(⇒ Section 7.5.3, Page 64)
3	Removing the impeller	(⇒ Section 7.5.4, Page 64)
4	Filling in the lubricant	(⇒ Section 7.4.1.4.2, Page 60)
5	Fitting the impeller	(⇒ Section 7.6.5, Page 74)
6	Fitting the bellmouth	(⇒ Section 7.6.6, Page 75)
7	Adjusting the clearance	(⇒ Section 7.6.7, Page 76)

5.2.4 Checking the direction of rotation

	⚠ WARNING Hands and/or foreign objects in the pump casing Risk of injuries, damage to the pump! ▷ Never insert your hands or any other objects into the pump. ▷ Check that the inside of the pump is free from any foreign objects. ▷ Verify that the transport lock has been removed. ▷ Take suitable precautions (e.g. wear safety goggles).
	⚠ WARNING Improper handling when placing the pump set in a vertical/horizontal position Personal injury and damage to property! ▷ Use one or two pieces of lifting equipment, depending on the pump (set) size. ▷ Use appropriate means to secure the pump set against tilting, tipping over or rolling off. ▷ Maintain a safe distance during lifting operations (load may swing when being lifted). ▷ Use additional supports for the transport holder to secure it against tilting.
	⚠ WARNING Improper positioning of pump set when checking the direction of rotation Personal injury and damage to property! ▷ Use appropriate means to secure the pump set against tilting or tipping over.

	CAUTION
	Pump set running dry Increased vibrations! Damage to mechanical seals and bearings! ▷ Never operate the pump set for more than 60 seconds without the fluid handled.

Check the direction of rotation before installing the pump set, i.e. in dry condition.

1. Place the pump set in a vertical position on a level surface and secure it sufficiently against tipping over.
2. Connect the pump set to the power supply and start it up.
3. Use one of the following options to check the direction of rotation:
 - ⇒ 1. Look down into the pump casing and check that the impeller is turning clockwise.
 - ⇒ 2. Verify the direction of rotation of the impeller. The direction of rotation of the impeller must match the arrow indicating the direction of rotation on the pump casing.
4. If the impeller rotates in the wrong direction of rotation, check and correct the electrical connection and the control system if applicable. Then check the direction of rotation again.
5. If the direction of rotation is correct, mark which core ends match which of the terminals in the control cabinet.
6. Disconnect the pump set from the power supply and secure it against unintentional start-up.

	 WARNING
	Unintentional starting of the pump set Risk of injury by moving components and shock currents! ▷ Ensure that the pump set cannot be started unintentionally. ▷ Always make sure the electrical connections are disconnected before carrying out work on the pump set.

5.3 Lowering the pump set into the discharge tube

	 DANGER Improper transport Danger to life from falling parts! Damage to the pump set! ▷ Use the attachment point provided for attaching the lifting accessory. ▷ Never lift the pump set by the electric cables. ▷ Use the lifting chain/rope included in the scope of supply exclusively for lowering or lifting the pump set into/out of the pump sump. ▷ Securely attach the lifting chain/rope to the pump and crane. ▷ Use tested, marked and approved lifting accessories only. ▷ Observe the regional transport regulations. ▷ Observe the documentation of the lifting accessory manufacturer. ▷ The load-carrying capacity of the lifting accessory must be higher than the weight indicated on the name plate of the pump set to be lifted. Take into account any additional system components to be lifted. ▷ Maintain a safe distance during lifting operations (load may swing when being lifted).
	 DANGER Improper installation in potentially explosive atmospheres Damage to the pump set! ▷ Comply with the applicable local explosion protection regulations. ▷ Observe the information given in the data sheet and on the pump/motor name plates.
	 WARNING Incorrect handling of the electric cable Personal injury and damage to property! ▷ Secure electric cables against falling down. ▷ Avoid electric cables being laid on surfaces without fastening. ▷ When moving the pump set keep at a safe distance to the electric cables.
	 WARNING People falling into the unsecured discharge tube Risk of personal injury! ▷ Take suitable precautions during the entire installation/removal process to protect people from falling into the open discharge tube. ▷ Fence off the work area appropriately.

5.3.1 Information for correct installation

The **flow-straightening vane** is **indispensable** for the inlet conditions of the pump set. It prevents the development of a submerged vortex (floor vortex) which could cause a drop in performance, for example. To provide optimum inlet conditions, observe the following information:

1. Observe the structural requirements!

Install the flow-straightening vane concentrically below the discharge tube, see general arrangement drawing.

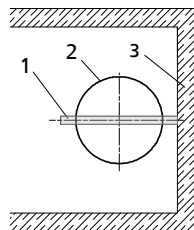


Fig. 7: Installation position of the flow-straightening vane

1	Flow-straightening vane	2	Discharge tube
3	Intake chamber		

2. Observe the installation position of the pump set!

Lower the pump set into the discharge tube with the anti-swirl baffles (2) in the bellmouth aligned with the flow-straightening vane (3).

Use the bail alignment of the pump set for orientation. The bail (1) is aligned with the anti-swirl baffles (2).

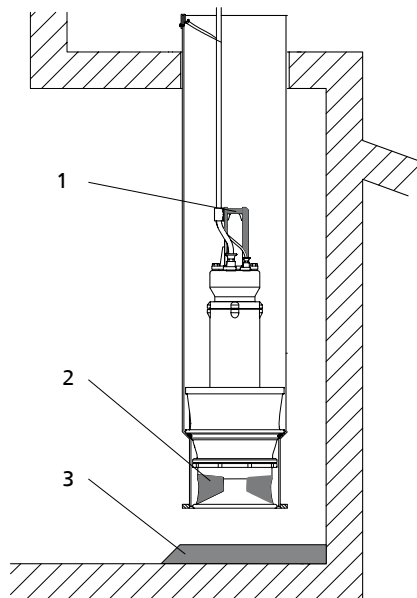


Fig. 8: Installation position of the pump set

1	Bail	2	Anti-swirl baffles
3	Flow-straightening vane		

5.3.2 Installing the pump set without support rope



CAUTION

Incorrect installation

Damage to the pump set!

- ▷ Verify that the pump set is correctly seated in the discharge tube.

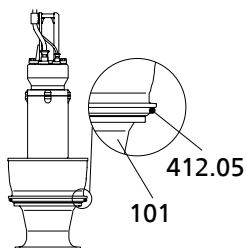


Fig. 9: Inserting the O-ring

Always refer to and comply with the general arrangement drawing/outline drawing when installing the pump set.

1. If O-ring 412.05 is supplied but not fitted, insert it into pump casing 101.
2. Attach the crane hook the bail of the pump set.
3. Centre the pump set above the discharge tube. Slowly lower the pump set into the discharge tube until it is seated in the recommended position.
(⇒ Section 5.3.1, Page 27)
4. Pull the cables up by hand. Fasten them to the sump construction with a cable support sleeve, if required. Do not lift the pump set out of its seat.

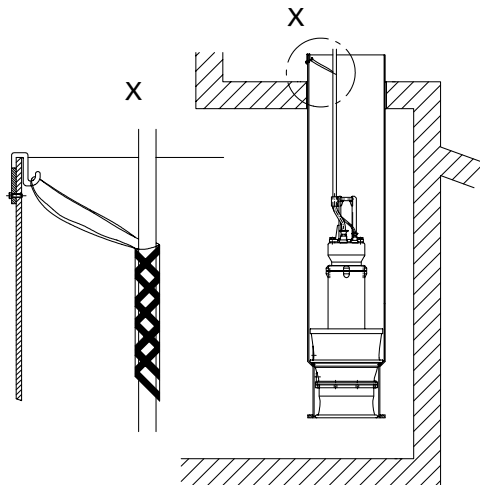


Fig. 10: Fastening the cable support sleeve

5.3.3 Installing the pump set with a support rope

Always refer to and comply with the general arrangement drawing/outline drawing when installing the pump set.

1. Prior to installing the pump set, visually inspect the support rope.
2. Do not exceed the permissible load-carrying capacity.

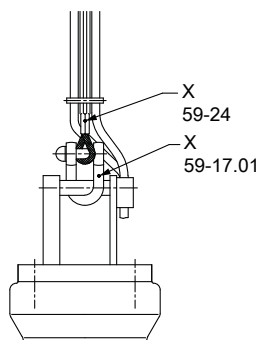


Fig. 11: X = indication of load-carrying capacity

59-24	Support rope
59-17.01	Shackle

	CAUTION
	Incorrect installation Damage to the pump set! ▷ Verify that the pump set is correctly seated in the discharge tube.

1589.827/02-EN

	! WARNING Pump set drops during the installation or removal process Personal injury and damage to property! ▷ Never use the turnbuckle , shackle or discharge tube cover to lift the pump set. ▷ Always use lifting lug 59-47.
	NOTE Prior to fitting the turnbuckle, check that the corresponding split pin has not been cracked or chipped. If damaged, always use a new split pin.

- ✓ Suitably sized lifting equipment is available.
- ✓ The support rope has been visually inspected.
- ✓ The split pin of the turnbuckle has been checked for any damage.

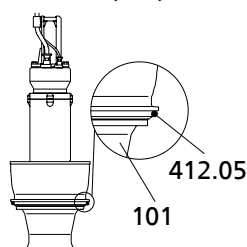


Fig. 12: Inserting the O-ring

1. If O-ring 412.05 is supplied but not fitted, insert it into pump casing 101.

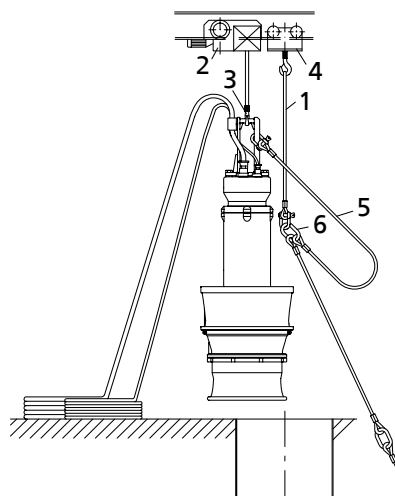


Fig. 13: Lifting and positioning the pump set

2. Secure the lifting chain or lifting rope (1) to the trolley (4) of the lifting equipment (2).
3. Attach the support rope (5) to the bail by its shackle.
For a galvanised shackle, secure the pin at the shackle with Loctite 243.
(⇒ Section 9.2, Page 86)
For a stainless steel shackle, undo and tighten the pin twice and secure it with Loctite 243.
4. Check that the support rope is arranged correctly.
⇒ The free lifting lug (6) has to point away from the pump set
5. Partially unwind the support rope and electric cables.
6. Lower the pump set into the discharge tube until the bail is in an accessible position, protruding from the discharge tube.
7. Securely cover the discharge tube except for a gap which allows work to continue.

8. Attach the first lifting lug of the support rope (5) to the hoisting rope (1) to securely position the pump set above the discharge tube.
9. Unclip the hook of the lifting equipment from the lifting lug of the support rope and run the lifting equipment to a higher level.

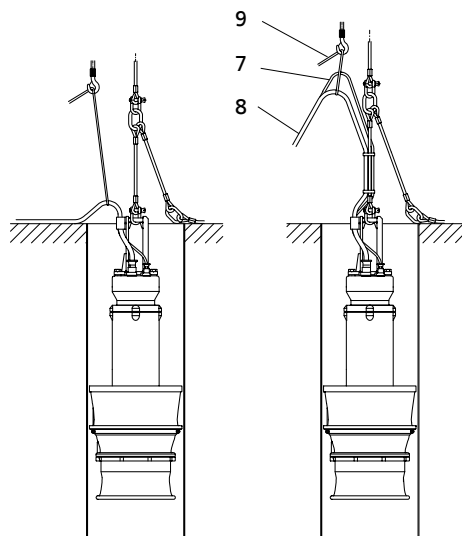


Fig. 14: Securing the control cable and power cable

10. Secure the control cable (7) and power cables (8) to the crane hook (3) of the lifting equipment with a manila rope (9).
11. Trim spacer (a) to fit between the two ferrules.

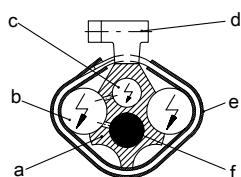


Fig. 15: Cross-section of the cable guide

12. Insert the support rope (f) and the control cable (c) into the spacer (a) and make sure that they are in their respective ducts.
13. Tighten the electric cables with the manila rope running over the crane hook.
14. Insert the power cables (b) into the hollows of the spacer (a) and, starting from the bottom, firmly clamp the power cables with cable clamps (d) covered by a plastic sheath (e).
15. In the area of the lifting lug between the rope sections, lay all electric cables in loops and fasten them to the rope section above.
16. Progressively lower the pump set into the discharge tube while securing the cable bundle with evenly spaced sheathed cable clamps.
17. Fit a heat shrink tube on any protruding sharp-edged rope ends (e.g. at the ferrule) to prevent any damage to the power cable and control cable.

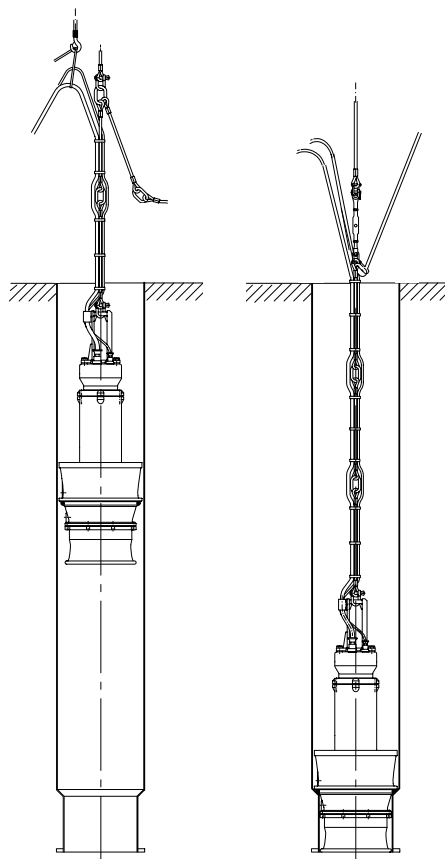


Fig. 16: Lowering the pump set

18. Finally, attach the support rope with shackle and turnbuckle to a suspension loop (provided in the discharge tube or structure). Secure the turnbuckle with a split pin. After inserting the split pin, bend over its two legs.
19. Tighten the turnbuckle until the cable bundle is tight without lifting the pump off its seat.
20. Unclip the hook of the lifting equipment from the lifting lug, free the cables from the manila rope and route them to the control cabinet.
21. Attach the top loose lifting lug to the cables to prevent noise and wear caused by chafing.
22. Remove the safety cover from the discharge tube and mount the discharge tube cover. Seal the cable entries if any.

5.3.4 Installing the pump set with a support rope and support spacer

Always refer to and comply with the general arrangement drawing/outline drawing when installing the pump set.

1. Prior to installing the pump set, visually inspect the support rope.
2. Do not exceed the permissible load-carrying capacity.

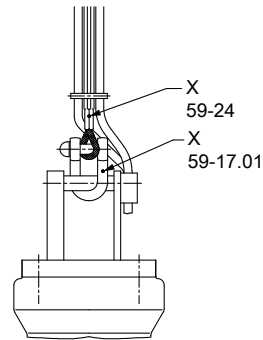


Fig. 17: X = indication of load-carrying capacity

59-24	Support rope
59-17.01	Shackle

	CAUTION Incorrect installation Damage to the pump set! ▷ Verify that the pump set is correctly seated in the discharge tube.
	WARNING Pump set drops during the installation or removal process Personal injury and damage to property! ▷ Never use the turnbuckle, shackle or discharge tube cover to lift the pump set. ▷ Always use lifting lug 59-47.
	NOTE Prior to fitting the turnbuckle, check that the corresponding split pin has not been cracked or chipped. If damaged, always use a new split pin.

- ✓ Suitably sized lifting equipment is available.
- ✓ The support has been supplied pre-assembled and is available for use.
- ✓ The support rope has been visually inspected.
- ✓ The split pin of the turnbuckle has been checked for any damage.

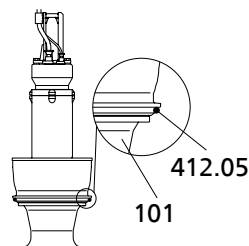


Fig. 18: Inserting the O-ring

1. If O-ring 412.05 is supplied but not fitted, insert it into pump casing 101.

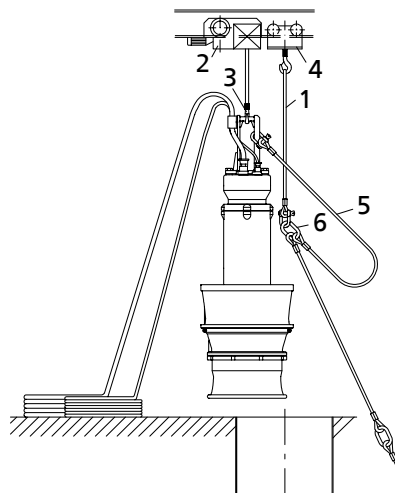


Fig. 19: Lifting and positioning the pump set

2. Secure the lifting chain or rope (1) to the trolley (4) of the lifting equipment (2).
3. Attach the support rope (5) to the bail by its shackle. Check that the support rope is arranged with the lifting lug (6) pointing away from the pump set.
4. Partially unwind the support rope and cables.
5. Lower the pump set into the discharge tube until the bail is in an accessible position, protruding from the discharge tube.
6. Securely cover the discharge tube except for a gap which allows work to continue.
7. Attach the first lifting lug of the support rope (5) to the lifting rope (1) to securely position the pump set above the discharge tube.
8. Uncouple the hook of the lifting equipment from the lifting lug of the support rope and run the lifting equipment to a higher level.

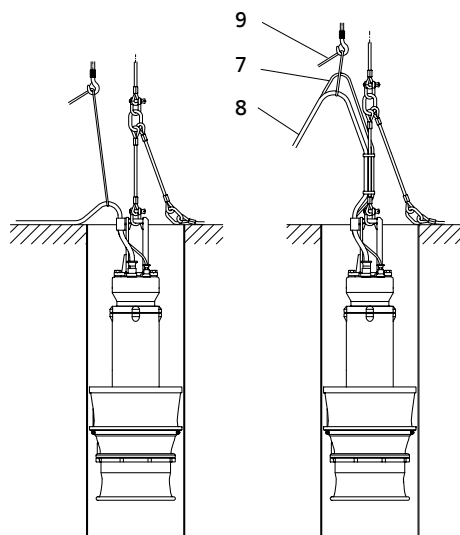


Fig. 20: Securing the control and power cables

9. Secure the control cable (7) and power cables (8) to the crane hook (3) of the lifting equipment with a manila rope (9).
10. Trim the spacer (a) to fit between the two ferrules.

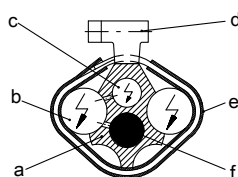


Fig. 21: Cross-section of the cable guide

11. Insert the support rope (f) and the control cable (c) into the spacer (a) and make sure that they are in their respective ducts.
12. Tighten the cables with the manila rope running over the crane hook.
13. Insert the power cables (b) into the hollows of the spacer (a) and, starting from the bottom, firmly clamp the power cables with cable clamps (d) covered by a plastic sheath (e).
14. Progressively lower the pump set into the discharge tube while securing the cable bundle with evenly spaced sheathed cable clamps.
15. In the area of the lifting lug between the rope sections, lay all cables in loops and fasten them to the rope section above.
16. Fit a heat shrink tube on any protruding sharp-edged rope ends (e.g. at the ferrule) to prevent any damage to the power and control cables.
17. Trim the spacer (a) to suit the position of support 59-7 at the support rope (f) and the type of installation. Insert the support rope and control cable (c).
18. Insert the power cables (b) into the hollows of the spacer (a) and firmly clamp the power cables with cable clamps (d).

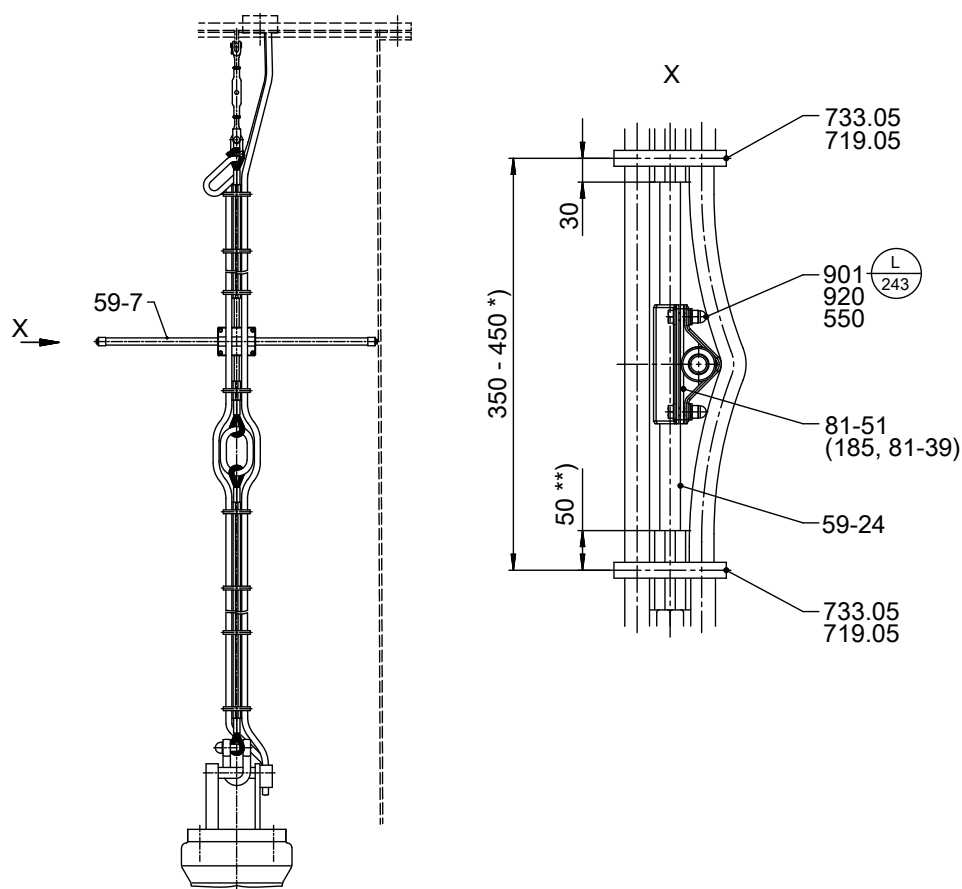


Fig. 22: Support rope with support, dimensions in [mm]

*) depending on the cable cross-section,

**) for 1 rope or 3 ropes = 30 mm

Table 8: Symbols key

Symbol	Description
	Always secure screwed connections marked with this symbol with Loctite 243 .

19. Clamp support 59-7 with clamping element 81-51 to the support rope (f).
20. Undo the screwed connection at clamping element 81-51.
21. Place clamp 81-39 of the clamping element around the support rope.

22. Fasten plate 185 and clamp 81-39 of the GFRP rod to rope clamp 81-39 with hexagon head bolts 901, discs 550 and cap nuts 920. Tighten the connection and secure it with Loctite 243. (⇒ Section 9.2, Page 86)

**NOTE**

The support must be firmly clamped to the support rope, and the GFRP rod must be firmly clamped to the support. If necessary, pad out clamps 81-39.

23. Trim the spacer to fill the space between the two ferrules and accommodate the support.
24. Guide the power cables and control cable along the support to the next cable clamp. Pull them taut and secure them with the clamp.

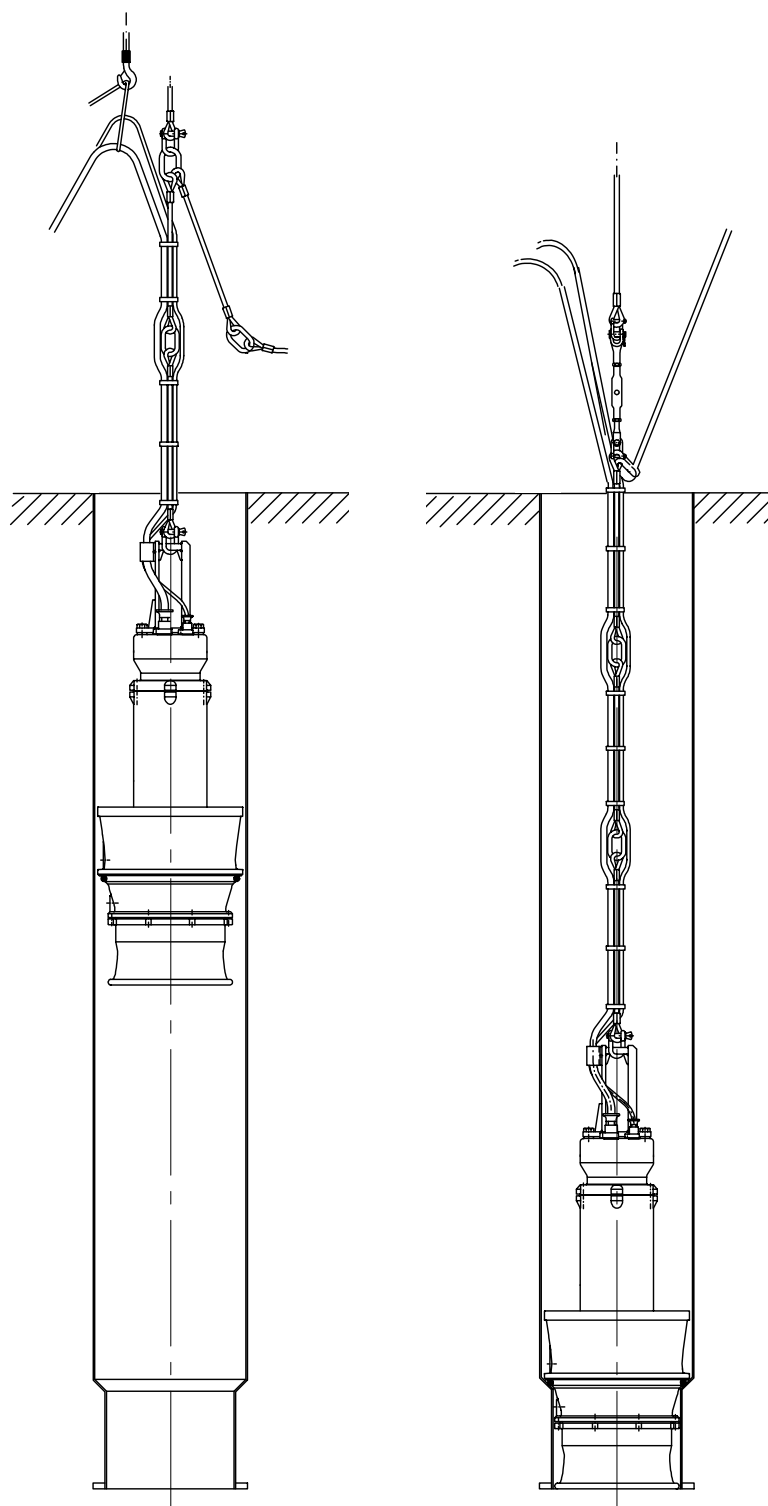


Fig. 23: Lowering the pump set

25. Progressively lower the pump set into the discharge tube. Secure the cable bundle with cable clamps.
26. Finally, attach the support rope with shackle and turnbuckle to a suspension loop (provided in the discharge tube or structure). Secure the turnbuckle with a split pin. After inserting the split pin, bend over its two legs.
27. Tighten the turnbuckle until the cables are tight but do not lift the pump off its seat.
28. Unclip the hook of the lifting equipment from the lifting lug, free the electric cables from the manila rope and route them to the control cabinet.

29. Attach the top loose lifting lug to the cables to prevent noise and wear caused by chafing.
30. Remove the safety cover from the discharge tube and mount the discharge tube cover.
31. Seal the cable entries if any.

5.4 Electrical system

5.4.1 Information for planning the control system

For the electrical connection of the pump set observe the "Wiring diagrams" section. (⇒ Section 9.3, Page 88)

The pump set is supplied with power cables; it is wired for DOL starting.

	NOTE When laying a cable between the control system and the pump set's connection point, verify that the number of cores is sufficient for the sensors. A minimum cross-section of 1.5 mm² is required.
---	---

The motors can be connected to electrical low-voltage grids with mains voltages and voltage tolerances to IEC 60038. The permissible tolerances must be observed.

5.4.1.1 Setting the overload protection device

1. Protect the pump set against overloading by a thermal time-lag overload protection device in accordance with IEC 60947 and local regulations.
2. Set the overload protection device to the rated current specified on the name plate.

5.4.1.2 Level control

	! DANGER Pump set running dry Explosion hazard! ▷ Never allow a pump set to run dry.
	CAUTION Fluid level below the specified minimum Damage to the pump set by cavitation! ▷ Never allow the fluid level to drop below the specified minimum.

Automatic operation of the pump set in a sump / tank requires the use of level control equipment.

Observe the minimum fluid level indicated. (⇒ Section 6.2.4.3, Page 46)

5.4.1.3 Operation on a frequency inverter

The pump set is driven by an induction machine to IEC 60034-12 designed for fixed speed operation. In accordance with IEC 60034-25, section 18, the pump set is suitable for operation on a frequency inverter.

	NOTE For pump sets with rated voltages exceeding 500 V, a dv/dt filter should be fitted at the output of the frequency inverter to reduce the rate of voltage rise to the limits specified in IEC 60034-25, Section 18. Otherwise a considerably reduced service life of the insulation system has to be expected.
	! DANGER Operation outside the permitted frequency range Explosion hazard! ▷ Never operate an explosion-proof pump set outside the specified range.

	! DANGER
	Incorrect selection and setting of the frequency inverter Explosion hazard! ▷ Observe the following information on selecting and setting a frequency inverter.

Selection When selecting a frequency inverter, check the following details:

- Data provided by the manufacturer
- Electrical data of the pump set, particularly the rated current
- Only voltage source inverters (VSI) with pulse width modulation (PWM) and carrier frequencies between 1 and 16 kHz are suitable.

Setting Observe the following instructions for setting a frequency inverter:

- Set the current limit to max. 1.2 times the rated current. The rated current is indicated on the name plate.

Start-up Observe the following instructions for starting the frequency inverter:

- Ensure short start ramps (maximum 5 seconds).
- Only start variable speed control after 2 minutes at the earliest.
Pump start-up with long start ramps and low frequency may cause clogging.

Operation Observe the following limits during operation on a frequency inverter:

- Only utilise up to 95 % of the rated power P_2 indicated on the name plate.
- Frequency range 25 to 50 Hz

Electromagnetic compatibility Operation on a frequency inverter produces interference emissions whose level varies depending on the inverter used (type, interference suppression, make). To prevent the drive system, consisting of a submersible motor and a frequency inverter, from exceeding any given limits always observe the EMC information provided by the inverter manufacturer. If the inverter manufacturer recommends a shielded power cable, make sure to use a submersible motor pump with shielded power cables.

Interference immunity The submersible motor pump generally meets interference immunity requirements. For monitoring the sensors installed the operator must ensure sufficient interference immunity by appropriately selecting and laying the power cables in the plant. No modifications are required on the power/control cable of the submersible motor pump. Suitable analysing devices must be selected. To monitor the leakage sensor inside the motor using a special relay available from KSB is recommended.

5.4.1.4 Sensors

	! DANGER
	Operating an incompletely connected pump set Damage to the pump set! ▷ Never start up a pump set with incompletely connected cables or non-operational monitoring devices.

	CAUTION
	Incorrect wiring Damage to the sensors! ▷ Observe the limits stated in the following sections of this manual when connecting the sensors.

The pump set features sensors designed to prevent hazards and damage to the pump set.

Measuring transducers are required for analysing the sensor signals supplied. Suitable devices for 230 V AC can be supplied by KSB.



NOTE

Reliable and safe operation of the pump within the scope of our warranty is only possible if the sensor signals are properly analysed as stipulated in this manual.

All sensors are located inside the pump set and are connected to the sensor cable.

For information on wiring and core marking see (⇒ Section 9.3, Page 88)

The individual sensors and the limit values to be set are described in the following sections.

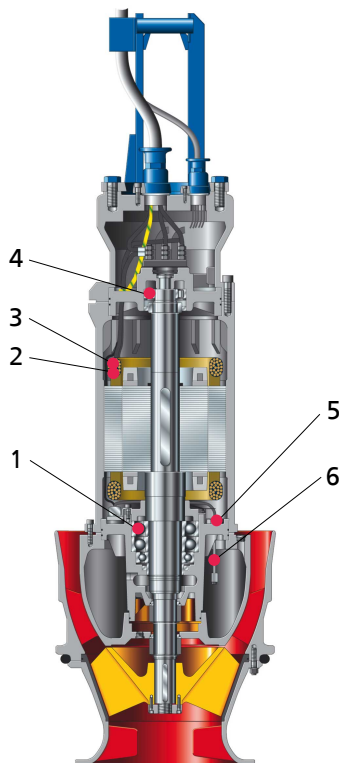


Fig. 24: Sensor positions

Position	Sensor	Standard	Optional
1	Bearing temperature (lower bearing assembly)	X	-
2	Motor temperature (Pt100)	-	X
3	Motor temperature (PTC)	X	-
4	Bearing temperature (upper bearing assembly)	X	-
5	Leakage inside the motor	X	-
6	Mechanical seal leakage	X	-

5.4.1.4.1 Motor temperature



⚠ DANGER

Insufficient cooling conditions

Explosion hazard!

Winding damage!

- ▷ Never operate a pump set without operational temperature monitoring.
- ▷ For explosion-proof pump sets use a thermistor tripping unit with manual reset.

Three series-connected PTC thermistors at terminals 10 and 11 monitor the winding temperature.

Use a thermistor tripping unit with manual reset.


Pt100 resistance thermometer

As an option, in addition to the above, the motor can be fitted with Pt100 resistance thermometers in the winding. These can be used to display the motor temperature (sensor circuit maximum 6 V/2 mA).

	CAUTION Temperature monitoring devices not properly connected Winding damage! ▷ Never use the Pt100 resistance thermometers as the only means of monitoring the motor temperature.
---	---

5.4.1.4.2 Leakage inside the motor

	! DANGER Incorrect monitoring of leakage electrode Explosion hazard! Danger of death from electric shock! ▷ Voltages must be < 30 V AC and tripping currents < 0.5 mA.
---	---

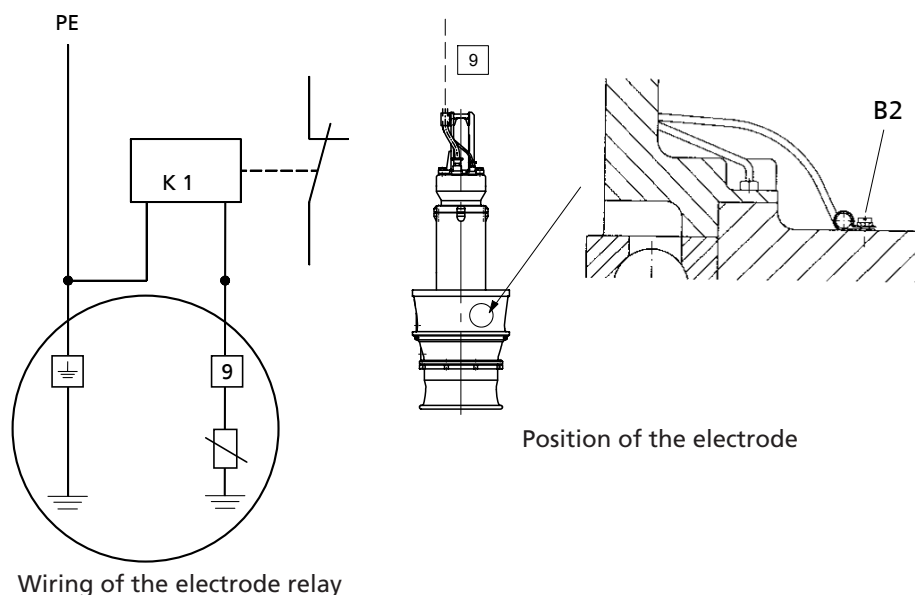

An electrode fitted inside the motor monitors the winding space (B2) for leakage. The electrode is intended for connection to an electrode relay (core marking 9). Tripping of the electrode relay must result in the pump set cutting out. The electrode relay (K1) must trip the motor at a tripping resistance between 3 and 60 kΩ.

5.4.1.4.3 Mechanical seal leakage

The chamber for mechanical seal leakage is equipped with a float switch (core identification 3 and 4). The contact (maximum 250 V~/2 A) opens when leakage is detected in the leakage chamber. Opening of the contact shall trigger an alarm signal.

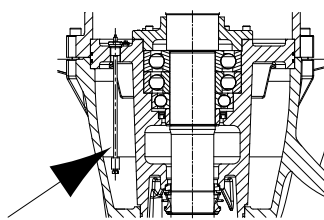


Fig. 25: Float switch

5.4.1.4.4 Bearing temperature

The bearings of the pump set are equipped with bearing temperature sensors. The two sensors are Pt100 resistance thermometers (core identification 15 and 16). They have to be connected to a temperature control device with a Pt100 input and 2 separate outputs for two different switching points (sensor circuit maximum 6 V/2 mA).

Set the following limits:

- Alert at 110 °C
- Cut-out of the pump set at 130 °C

5.4.2 Electrical connection

	⚠ DANGER Electrical connection work by unqualified personnel Danger of death from electric shock! ▷ Always have the electrical connections installed by a trained and qualified electrician. ▷ Observe the IEC 61557 regulations as well as any regional regulations.
	⚠ WARNING Incorrect connection to the mains Damage to the power supply network, short circuit! ▷ Observe the technical specifications of the local energy supply companies.
	CAUTION Improper routing of electric cables Damage to the electric cables! ▷ Never move the electric cables at temperatures below -25 °C. ▷ Never kink or crush the electric cables. ▷ Never lift the pump set by the electric cables. ▷ Adjust the length of the electric cables to the site requirements.
	CAUTION Motor overload Damage to the motor! ▷ Protect the motor by a thermal time-lag overload protection device in accordance with IEC 60947 and local regulations.

For the electrical connection observe the wiring diagrams (⇒ Section 9.3, Page 88) in the Annex and the information for planning the control system (⇒ Section 5.4.1, Page 38) .

The pump set is supplied with power cables.

Always use all electric cables provided and connect all marked cores of the sensor cable.

	⚠ DANGER Incorrect connection Explosion hazard! ▷ The connection point of the cable ends must be located outside hazardous areas or in an area approved for electrical equipment.
---	---

	! DANGER Operating an incompletely connected pump set Damage to the pump set! ▷ Never start up a pump set with incompletely connected cables or non-operational monitoring devices.
	! DANGER Using damaged power cables Danger of death from electric shock! ▷ Never connect any damaged power cables. ▷ Visually inspect the power cable before connecting it. ▷ Replace the power cable if it is damaged.
	CAUTION Flow-induced motion Damage to the power cable! ▷ Run the power cable upwards without slack.

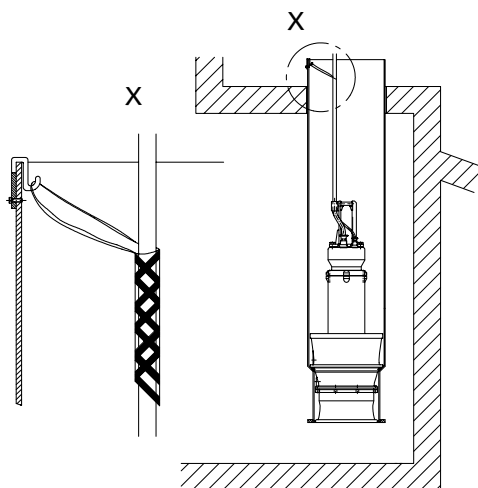


Fig. 26: Fastening the power cable

1. Run the power cables upwards without slack and fasten them.
2. Only remove the protective caps from the power cables immediately before connecting the cables.
3. If necessary, adjust the length of the power cables to the site requirements.
4. After shortening the cable, correctly re-affix the markings on the individual cores at the cable ends.

Potential equalisation The pump set is not fitted with an external potential equalisation connection (risk of corrosion).

	! DANGER Touching the pump set during operation Electric shock! ▷ Make sure that the pump set cannot be touched during operation.
---	---

6 Commissioning/Start-up/Shutdown

6.1 Commissioning/Start-up

6.1.1 Prerequisites for commissioning/start-up

	⚠ DANGER Persons in the tank during pump operation Electric shock! Risk of injury! Danger of death from drowning! ▷ Never start up the pump set when there are persons in the tank.
	⚠ WARNING People falling into the unsecured discharge tube Risk of personal injury! ▷ Take suitable precautions during the entire installation/removal process to protect people from falling into the open discharge tube. ▷ Fence off the work area appropriately.

Before starting up the pump set make sure that the following requirements are met:

- The lubricant has been checked.
- The direction of rotation has been checked.
- The pump set has been properly connected to the electric power supply and is equipped with all protection devices.
- The pump set has been installed in the discharge tube as described in this manual.
- The minimum fluid level has been reached.
- After prolonged shutdown of the pump (set), the activities described in the section Returning to service have been carried out. (⇒ Section 6.4, Page 48)

6.1.2 Start-up

	⚠ DANGER Persons in the tank during pump operation Electric shock! Risk of injury! Danger of death from drowning! ▷ Never start up the pump set when there are persons in the tank.
	CAUTION Re-starting while motor is still running down Damage to the pump set! ▷ Do not re-start the pump set before it has come to a standstill. ▷ Never start up the pump set while the pump is running in reverse.

- ✓ The fluid level is sufficiently high.

	CAUTION
	Start-up against a closed shut-off element Increased vibrations! Damage to mechanical seals and bearings! ▷ Never operate the pump set against a closed shut-off element.

1. Fully open the discharge line shut-off element, if any.
2. Start up the pump set.

6.2 Operating limits

	 DANGER
	Non-compliance with operating limits Damage to the pump set! ▷ Comply with the operating data indicated in the data sheet. ▷ Avoid operation below Q_{min}. ▷ Never operate an explosion-proof pump set at ambient temperatures or fluid temperatures exceeding those specified in the data sheet and/or on the name plate. ▷ Never operate the pump set outside the limits specified below.

6.2.1 Operation on the power supply mains

The maximum permissible deviation in supply voltage is $\pm 10\%$ of the rated voltage.
The voltage difference between the individual phases must not exceed 1 %.

6.2.2 Frequency of starts

	CAUTION
	Excessive frequency of starts Risk of damage to the motor! ▷ Never exceed the specified frequency of starts.

To prevent high temperature increases in the motor and excessive loads on the motor, seal elements and bearings, the frequency of starts shall not exceed 10 starts per hour.

These values apply to mains start-up (direct or with autotransformer, soft starter).
This limitation does not apply to operation on a frequency converter.

	CAUTION
	Re-starting while motor is still running down Damage to the pump set! ▷ Do not re-start the pump set before it has come to a standstill. ▷ Never start up the pump set while the pump is running in reverse.

6.2.3 Operation on a frequency inverter

Frequency inverter operation of the pump set is permitted in the frequency range from 25 to 50 Hz.

6.2.4 Fluid handled

6.2.4.1 Fluid temperature

The pump set is designed for transporting liquids. The pump set is not operational under freezing conditions.

	CAUTION
	Danger of freezing! Damage to the pump set! ▷ Drain the pump set or protect it against freezing.

Refer to the maximum permissible fluid temperature and ambient temperature indicated on the name plate and/or in the data sheet.

6.2.4.2 Density of the fluid handled

The power input of the pump set will change in proportion to the density of the fluid handled.

	CAUTION
	Impermissibly high density of the fluid handled Motor overload! ▷ Observe the information about fluid density in the data sheet. ▷ Make sure the motor has sufficient power reserves.

6.2.4.3 Minimum level of fluid handled

	CAUTION
	Fluid level below the specified minimum Damage to the pump set by cavitation and air-entraining vortices! ▷ Never allow the fluid level to drop below the specified minimum.

The pump set is ready for operation when the fluid level has reached dimension "t₁" as a minimum (see the corresponding general arrangement drawing).

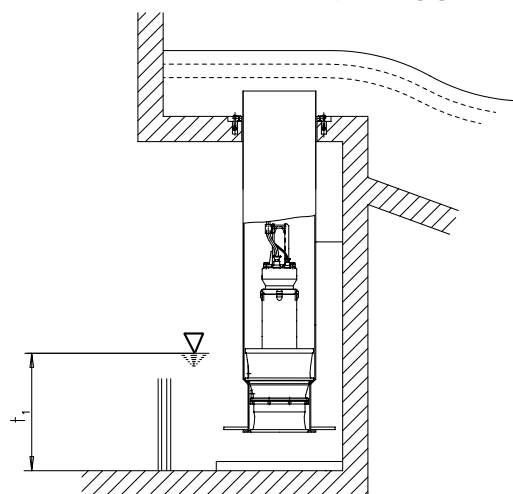


Fig. 27: Example: minimum level of fluid handled

6.2.4.4 Abrasive fluids

Do not exceed the maximum permissible solids content specified in the data sheet. When the pump handles fluids containing abrasive substances, increased wear of the hydraulic system and shaft seal are to be expected. In this case, reduce the commonly recommended inspection intervals.

6.3 Shutdown/storage/preservation

6.3.1 Shutdown

	CAUTION
	Uncontrolled backflow of the fluid from the riser Damage to the pump set! ▷ Prevent any uncontrolled backflow of the fluid handled with suitable means. ▷ Control the fluid backflow, e.g. by throttling the gate valve in the discharge line.

6.3.2 Measures to be taken for shutdown

	! DANGER
	Electrical connection work by unqualified personnel Danger of death from electric shock! ▷ Always have the electrical connections installed by a trained and qualified electrician. ▷ Observe the IEC 61557 regulations as well as any regional regulations.
	! WARNING
	Unintentional starting of the pump set Risk of injury by moving components and shock currents! ▷ Ensure that the pump set cannot be started unintentionally. ▷ Always make sure the electrical connections are disconnected before carrying out work on the pump set.
	! WARNING
	Fluids handled, consumables and supplies which are hot and/or pose a health hazard Risk of injury! ▷ Observe all relevant laws. ▷ When draining the fluid take appropriate measures to protect persons and the environment. ▷ Decontaminate pumps which handle fluids posing a health hazard.
	CAUTION
	Danger of frost/freezing Damage to the pump set! ▷ If there is any danger of frost/freezing, remove the pump set from the fluid handled and clean, preserve and store it.

The pump set remains installed

- ✓ Make sure sufficient fluid is available for the functional check run of the pump set.
- 1. For prolonged shutdown periods, start up the pump set regularly once every three months. Let it run for about one minute.
This will prevent the formation of deposits within the pump and the pump intake area.

The pump (set) is removed from the pipe and stored

- ✓ All safety regulations are observed.
- 1. Clean the pump set.
- 2. Spray-coat the inside wall of the pump casing and, in particular, the impeller clearance areas with a preservative.

6.4 Returning to service

For returning the pump set to service, observe the instructions on commissioning/start-up. (⇒ Section 6.1, Page 44)

Refer to and comply with the operating limits.

For returning the pump set to service after storage also follow the instructions for maintenance/inspection.

	! WARNING Failure to re-install or re-activate protective devices Risk of injury from moving parts or escaping fluid! ▷ As soon as the work is completed, properly re-install and re-activate any safety-relevant devices and protective devices.
	NOTE On pumps/pump sets older than 5 years we recommend replacing all elastomer seals.

7 Servicing/Maintenance

7.1 Safety regulations

The operator ensures that maintenance, inspection and installation are performed by authorised, qualified specialist personnel who are thoroughly familiar with the manual.

	 DANGER Improper lifting/moving of heavy assemblies or components Danger to life from falling parts! Damage to the pump set! ▷ Use suitable transport equipment, lifting equipment and lifting tackle to move heavy assemblies or components. ▷ Use the attachment point provided for attaching the lifting accessory. ▷ Never lift the pump set by the electric cables. ▷ Use the lifting chain/rope included in the scope of supply exclusively for lowering or lifting the pump set into/out of the pump sump. ▷ Securely attach the lifting chain/rope to the pump and crane. ▷ Use tested, marked and approved lifting accessories only. ▷ Observe the regional transport regulations. ▷ Observe the documentation of the lifting accessory manufacturer. ▷ The load-carrying capacity of the lifting accessory must be higher than the weight indicated on the name plate of the pump set to be lifted. Take into account any additional system components to be lifted. ▷ Maintain a safe distance during lifting operations (load may swing when being lifted).
	 DANGER Risk of falling when working at a great height Danger to life by falling from a great height! ▷ Do not step onto the pump (set) during installation work or dismantling work. ▷ Pay attention to safety equipment, such as railings, covers, barriers, etc. ▷ Observe the applicable local health and occupational safety regulations and accident prevention regulations.
	 DANGER Electrical connection work by unqualified personnel Danger of death from electric shock! ▷ Always have the electrical connections installed by a trained and qualified electrician. ▷ Observe the IEC 61557 regulations as well as any regional regulations.

	⚠ WARNING Fluids handled, consumables and supplies which are hot and/or pose a health hazard Risk of injury! ▷ Observe all relevant laws. ▷ When draining the fluid take appropriate measures to protect persons and the environment. ▷ Decontaminate pumps which handle fluids posing a health hazard.
	⚠ WARNING Unintentional starting of the pump set Risk of injury by moving components and shock currents! ▷ Ensure that the pump set cannot be started unintentionally. ▷ Always make sure the electrical connections are disconnected before carrying out work on the pump set.
	⚠ WARNING Hands, other body parts or foreign objects in the impeller or intake area Risk of injury! Damage to the submersible motor pump! ▷ Never insert your hands, other body parts or foreign objects into the impeller or impeller intake area. ▷ Always make sure the electrical connections are disconnected before checking whether the impeller rotates freely.
	⚠ WARNING Hot surface Risk of injury! ▷ Allow the pump set to cool down to ambient temperature.
	⚠ WARNING Improper lifting/moving of heavy assemblies or components Personal injury and damage to property! ▷ Use suitable transport devices, lifting equipment and lifting tackle to move heavy assemblies or components.
	⚠ WARNING Insufficient stability Risk of crushing hands and feet! ▷ During assembly/dismantling, secure the pump (set)/pump parts to prevent tilting or tipping over.

A regular maintenance schedule will help avoid expensive repairs and contribute to trouble-free, reliable operation of the pump, pump set and pump parts with a minimum of servicing/maintenance expenditure and work.

**NOTE**

All maintenance work, service work and installation work can be carried out by KSB Service or authorised workshops. Find your contact in the attached Addresses booklet or visit <https://www.ksb.com/en-global/contact>.

Never use force when dismantling and reassembling the pump set.

7.2 Maintenance/inspection

KSB recommends the following regular maintenance schedule:

Table 9: Overview of maintenance work

Maintenance interval	Maintenance work	For details see ...
First check after at least 6 months; interval can be extended to 12 months (in sports facilities and leisure parks)	Visually inspect for corrosion.	(⇒ Section 7.3.6, Page 56)
Every 4000 hours, at least once a year	Measure the insulation resistance.	(⇒ Section 7.2.1.1, Page 51)
Every 8000 hours, at least every 3 years	Check the cable bundle.	(⇒ Section 7.3.3, Page 54)
	Check the earth conductor.	(⇒ Section 7.3.4, Page 55)
	Check the sensors.	(⇒ Section 5.4.1.4, Page 39) (⇒ Section 7.2.1.2, Page 52)
	Check the mechanical seal leakage.	(⇒ Section 5.2.3, Page 23)
	Change the lubricant.	
Every 16,000 hours, at least every 5 years	Lubricate the rolling element bearings.	
	General overhaul	

On pump sets with sacrificial anodes, the sacrificial anodes must initially be checked after 6 months. If necessary, the sacrificial anodes must be replaced. If the sacrificial anodes show little wear, the maintenance interval can be extended to 12 months.

7.2.1 Inspection work**7.2.1.1 Measuring the insulation resistance**

Measure the insulation resistance of the motor winding during annual maintenance work.

- ✓ The pump set has been disconnected in the control cabinet.
- ✓ Use an insulation resistance measuring device.
- ✓ The recommended measuring voltage equals 500 V (maximum permissible 1000 V).
 1. Measure the winding to chassis ground.
To do so, connect all winding ends together.
 2. Measure the winding temperature sensors to chassis ground.
To do so, connect all core ends of the winding temperature sensors together and connect all winding ends to chassis ground.
- ⇒ The insulation resistance of the core ends to chassis ground must not be lower than 1 MΩ.
If the resistance measured is lower, power cable and motor resistance must be measured separately. Disconnect the power cable from the motor for this purpose.

**NOTE**

If the insulation resistance of the power cable is lower than 1 MΩ, the power cable is defective and must be replaced.



NOTE

If the insulation resistances measured on the motor are too low, the winding insulation is defective. The pump set must not be returned to service in this case.

7.2.1.2 Checking the sensors



CAUTION

Excessive test voltage

Damage to the sensors!

- Use a commercially available ohmmeter to measure the resistance.

The tests described below measure the resistance at the core ends of the control cable. The actual sensor function is not tested.

Temperature sensors in the motor winding

Table 10: Resistance measurement

Measurement between terminals ...	Resistance
	[Ω]
10 and 11	200 - 1000
31 and 32 ³⁾	100 - 120

If the specified tolerances are exceeded, disconnect the power cable at the pump set and repeat the check inside the motor.

If the tolerances are exceeded here, too, the motor section has to be opened and overhauled. The temperature sensors are fitted in the stator winding and cannot be replaced.

If the sensors are defective, use the back-up sensors provided at the same place in the stator winding.

Leakage sensor in the motor

Table 11: Resistance measurement of the leakage sensor in the motor

Measurement between terminals ...	Resistance
	[kΩ]
9 and earth conductor (PE)	> 60

Lower resistance values suggest water ingress into the motor. In this case the motor section must be opened and serviced.

Float switch (mechanical seal leakage)

Table 12: Resistance measurement of the float switch

Measurement between terminals ...	Resistance
	[Ω]
3 and 4	< 1

If the readings suggest an open switch, check for mechanical seal leakage.

Bearing temperature sensor

Table 13: Resistance measurement of the bearing temperature sensor

Measurement between terminals ...	Resistance
	[Ω]
15 and 16	100 to 120
16 and 17	100 to 120

If the measured value is within the permissible tolerance range after the tripping unit of the temperature sensor tripped the pump, the rolling element bearings must be checked and replaced, if required.

³⁾ Optional

7.3 Removing the pump set

7.3.1 Removing the pump set

	 DANGER Insufficient preparation of work on the pump (set) Risk of injury! ▷ Properly shut down the pump set. ▷ Close the shut-off elements in the suction line and discharge line. ▷ Drain the pump and release the pump pressure. ▷ Shut off any auxiliary feed lines. ▷ Allow the pump set to cool down to ambient temperature.
	 WARNING Incorrect handling of the electric cable Personal injury and damage to property! ▷ Secure electric cables against falling down. ▷ Avoid electric cables being laid on surfaces without fastening. ▷ When moving the pump set keep at a safe distance to the electric cables.
	 WARNING People falling into the unsecured discharge tube Risk of personal injury! ▷ Take suitable precautions during the entire installation/removal process to protect people from falling into the open discharge tube. ▷ Fence off the work area appropriately.
	 WARNING Turnbuckle and shackle are not suitable for lifting the pump set Risk of injury! Damage to the pump set! ▷ Always use the lifting lugs of the support rope to lift the pump set.
	NOTE Prevent any loose parts from falling into the pump sump!

- ✓ The power cables have been disconnected and secured against unintentional start-up.
- ✓ The discharge tube is open; its opening is securely covered except for a gap allowing work to continue.
- ✓ Suitable lifting equipment is provided.
 1. Attach the lifting chain or lifting rope to the trolley.
 2. Free the uppermost lifting lug from the cables, attach it to the crane hook and run the lifting equipment to a higher level.
 3. Open and disconnect the turnbuckle.

4. Pull the pump set up until it reaches the second lifting lug of the cable bundle.

5. Attach the lifting chain or lifting rope with the shackle to the first lifting lug (together with the crane hook).
6. Unclip the crane hook and attach it to the second lifting lug.
7. Pull the pump set up until it reaches the third lifting lug. Free the lifting chain or lifting rope from the first lifting lug and attach it to the third lifting lug.
8. Pull the pump set up until it reaches the fourth lifting lug. Unclip the crane hook and attach it to the fourth lifting lug.
9. Repeat this procedure until the pump bail is located above the discharge tube, then attach it to the crane hook.
10. Remove the safety cover from the discharge tube.
11. Extract the pump set from the discharge tube, move it sideways and place it down.

	⚠ WARNING Pump set tilting Risk of squashing hands and feet! ▷ Suspend or support the pump set.
---	--

	CAUTION Improper storage Damage to the power cables! ▷ Support the power cables at the cable entry to prevent permanent deformation. ▷ Protect the core ends against moisture.
---	--

12. To prevent the pump set from tipping over, do not disconnect it from the hook of the lifting equipment.
13. Clean the pump set (e.g. with water).
14. Collect and properly dispose of any cleaning liquid.

7.3.2 Drainage/cleaning

	⚠ WARNING Fluids handled, consumables and supplies which are hot and/or pose a health hazard Hazard to persons and the environment! ▷ Collect and properly dispose of flushing fluid and any fluid residues. ▷ Wear safety clothing and a protective mask if required. ▷ Observe all legal regulations on the disposal of fluids posing a health hazard.
---	---

1. Always flush the pump if it has been used for handling noxious, explosive, hot or other hazardous fluids.
2. Always flush and clean the pump before transporting it to the workshop. Provide a certificate of decontamination for the pump set.
(⇒ Section 11, Page 114)

7.3.3 Checking the cable bundle

When removing the pump set from the discharge tube check the support rope and attachment (shackle) and all electric cables for any damage. In addition, observe the operating manual of the lifting accessories. Replace any damaged components by original spare parts.

Longer cable bundles must be dismantled:

1. Undo the cable clamps.
2. Remove the spacer.
3. Roll up the electric cables and place them next to the pump set.
4. Undo the shackle to separate the support rope from the pump set.

7.3.4 Checking the earth conductor

1. Measure the resistance between earth conductor and earth.
The resistance must be below 1 Ω .
2. Replace any damaged components by original spare parts.

	! DANGER
	Defective earth conductor Electric shock! ▷ Never switch on a pump set with a defective earth conductor.

7.3.5 Checking the mechanical seal leakage

	! WARNING
	Fluids handled, consumables and supplies which are hot and/or pose a health hazard Hazard to persons and the environment! ▷ Collect and properly dispose of flushing fluid and any fluid residues. ▷ Wear safety clothing and a protective mask if required. ▷ Observe all legal regulations on the disposal of fluids posing a health hazard.
	! WARNING
	Excess pressure inside the pump set Risk of injury when opening the pump set! ▷ Take care when opening the inner chambers. Equalise the pressure.
	NOTE Slight wear of the mechanical seal is unavoidable. This will be aggravated by abrasive substances contained in the fluid handled.

Checking the leakage chamber serves to assess the function of the drive-end mechanical seal.

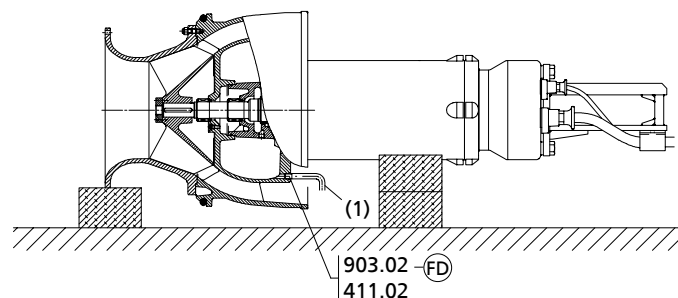


Fig. 28: Checking the mechanical seal leakage

Table 14: Symbols key

Symbol	Description
	Always apply a liquid sealant (e.g. Hylomar SQ32M) to sealing surfaces marked with this symbol.

- ✓ A suitable container for the leakage is on hand.
- ✓ The pump set is positioned horizontally on a level surface and is protected against rolling off. (⇒ Section 3.2, Page 12)
 1. Place the container underneath screw plug 903.02.
 2. Remove screw plug 903.02 with joint ring 411.02. Observe the plate "Leakage drain".
 3. Screw in a sufficiently long tube (1) with G 1/2 thread.
 4. Carefully rotate the pump set until the tube points downwards.
 5. Drain the leakage fluid into a container positioned underneath the tube.
 - ⇒ If there is no leakage or, after several years of operation, only a small amount, the mechanical seals are working properly. If the leakage exceeds 1.0 litre, the mechanical seals are defective and must be replaced.
 6. Unscrew and remove the tube (1).
 7. Re-insert and tighten screw plug 903.02 with new joint ring 411.02.

7.3.6 Visually inspecting for corrosion.

- ✓ The pump set has been removed from the system.
 1. Conduct a visual inspection of the pump set.
 - ⇒ Clearly visible corrosion: Replace defective components and check corrosion protection.
 - ⇒ No visible corrosion: Extend visual inspection interval to 12 months.

7.4 Lubrication and lubricant change

7.4.1 Lubricating the mechanical seal

	 DANGER	
	Excessive temperatures at the shaft seal Explosion hazard! Damage to the pump set! ▷ Regularly check the condition of the lubricant in the lubricant reservoir of the mechanical seal. Top it up if required.	

The mechanical seal is supplied with lubricating liquid from the lubricant reservoir.

7.4.1.1 Intervals

Replace the lubricant every 8000 operating hours but at least every 3 years.

7.4.1.2 Lubricant quality

The lubricant reservoir is filled at the factory with environmentally friendly, non-toxic lubricant of medicinal quality (unless otherwise specified by the customer).
The following lubricants can be used to lubricate the mechanical seals:

Table 15: Lubricant quality

Description	Properties	
Paraffin oil or white oil Alternative: motor oil grades SAE 10W to SAE 20W	Kinematic viscosity at 40 °C	< 20 mm ² /s
	Flash point (to Cleveland)	> 160 °C

Description	Properties	
Paraffin oil or white oil Alternative: motor oil grades SAE 10W to SAE 20W	Solidification point (pour point)	< -15 °C

- Recommended lubricants:**
- Merkur WOP 40 PB, made by SASOL
 - Merkur white oil Pharma 40, made by DEA
 - Thin-bodied paraffin oil
 - No. 7174, made by Merck
 - Equivalent brands of medical quality, non-toxic
 - Water/glycol mixture

	 WARNING
	Lubricant contaminating fluid handled Hazard to persons and the environment! ▶ Using machine oil is only permitted if the oil is disposed of properly.

7.4.1.3 Lubricant quantity

Table 16: Lubricant quantity [l] depending on size

Size	Lubricant quantity
	[l]
650 - 364	1,6
650 - 365	1,6
650 - 404	1,6
650 - 405	1,6
800 - 505	1,8

7.4.1.4 Changing the lubricant

	 WARNING
	Lubricants posing a health hazard and/or hot lubricants Hazard to persons and the environment! ▶ When draining the lubricant take appropriate measures to protect persons and the environment. ▶ Wear safety clothing and a protective mask if required. ▶ Collect and dispose of any lubricants. ▶ Observe all legal regulations on the disposal of fluids posing a health hazard.
	 WARNING
	Excess pressure inside the pump set Risk of injury when opening the pump set! ▶ Take care when opening the inner chambers. Equalise the pressure.

	 WARNING
	Improper handling when placing the pump set in a vertical/horizontal position Personal injury and damage to property! ▷ Select suitable lifting equipment for the size of the pump. ▷ Use appropriate means to secure the pump set against tilting, tipping over or rolling off. ▷ Maintain a safe distance during lifting operations (load may swing when being lifted). ▷ Use additional supports for the transport holder to secure it against tilting.

7.4.1.4.1 Draining the lubricant

	 WARNING
	Incorrect positioning/placing down Personal injury and damage to property! ▷ Position the pump set vertically with the motor on top. ▷ Use appropriate means to secure the pump set against tilting and tipping over. ▷ Refer to the weights given in the data sheet/on the name plate.

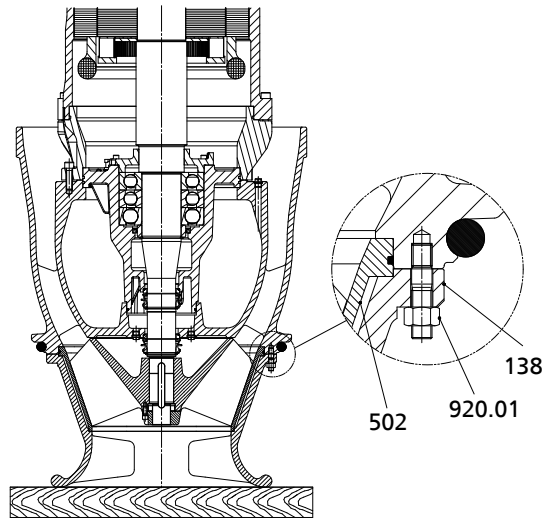


Fig. 29: Removing the bellmouth

- ✓ The pump has been placed in a vertical position with the bellmouth on wooden supports. It has been secured against tipping over.
 - ✓ A suitable container for collecting the lubricant is on hand.
1. Undo nuts 920.01.
 2. Attach the crane hook to the bail and lift the pump set off the bellmouth with the casing wear ring.
 3. Place the pump set down in a horizontal position on wooden supports. Secure it against rolling off.

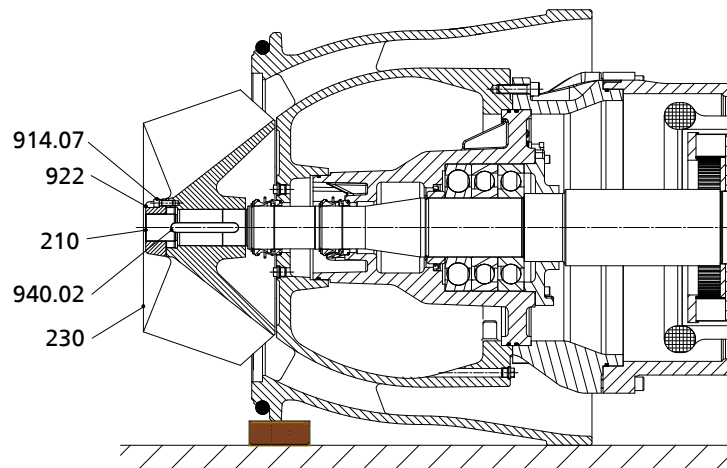


Fig. 30: Removing the impeller

4. Undo socket head cap screws 914.07 and impeller nut 922.
5. Pull impeller 230 off shaft 210.

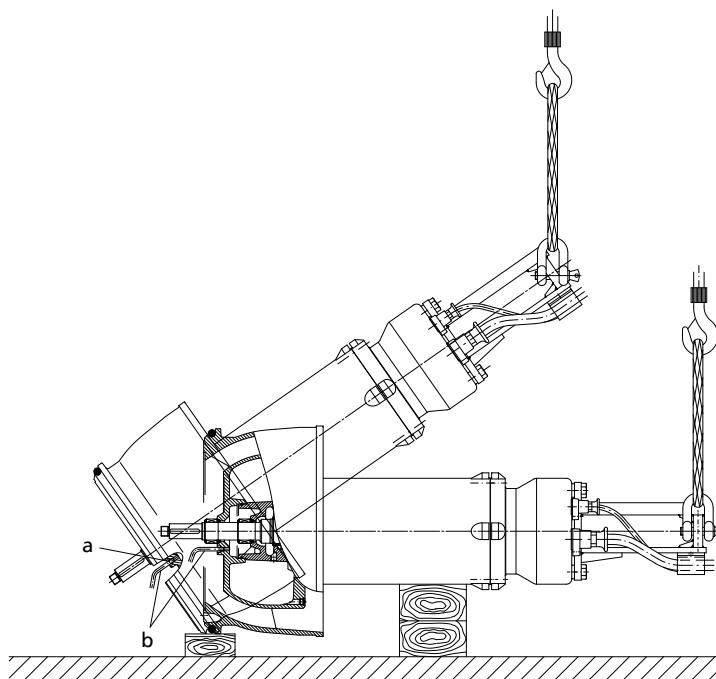


Fig. 31: Draining the lubricant

a	Oil drain	b	Tube
---	-----------	---	------

The screw plug for the oil drain is positioned on the front face of pump casing 101.

1. Remove screw plug 903.01 and joint ring 411.01.
2. Screw in a sufficiently long tube (2) with G $\frac{1}{2}$ " thread.
3. Carefully rotate the pump set until the tube points downwards.
4. Collect the lubricant in a suitable container. Slowly lift the pump a little during this process. Determine the quantity of lubricant collected and compare it with the specified lubricant quantity.. If the lubricant falls short by more than 0.63 quarts [0.6 litres] compared with the specified quantity, this suggests that the mechanical seal is defective and has to be replaced. Properly dispose of the drained lubricant.
5. Remove the tube. Fit screw plug 903.01 (oil drain) and a new joint ring with liquid sealant.

7.4.1.4.2 Filling in the lubricant

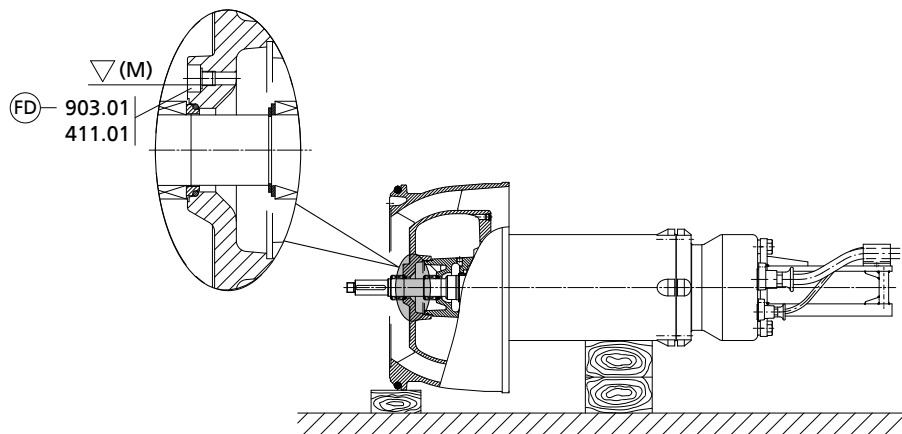


Fig. 32: Filling in the lubricant

Table 17: Symbols key

Symbol	Description
	Always apply a liquid sealant (e.g. Hylomar SQ32M) to sealing surfaces marked with this symbol.

- ✓ The pump set has been placed in a horizontal position and protected against rolling off.
- ✓ Screw plug 903.01 and joint ring 411.01 have been removed from the filler opening.
 1. Screw a sufficiently long tube with G 1/2" thread into the filler opening.
 2. Fill the lubricant in through the tube until it overflows.
 3. Remove the tube. Fit screw plug 903.01 and a new joint ring 411.01 with liquid sealant.



NOTE

For commissioning: If more than 1.0 litre of lubricant is required for topping up, this suggests a defect of the mechanical seal.

7.4.2 Lubricating the rolling element bearings

The pump set is equipped with grease-lubricated, maintenance-free rolling element bearings.

7.4.2.1 Intervals

Change the grease when carrying out a general overhaul but at least every 5 years.

7.4.2.2 Grease quality



CAUTION

Mix of different grease types

Damage to the pump set!

- ▷ Make sure to use the right type of grease.
- ▷ Never mix different types of grease.

The following greases can be used to lubricate the rolling element bearings:

Table 18: Lubricant characteristics

Base oil	Type	Thickener	NLGI grade (ISO 2137)	Worked penetration at 25 °C, 0.1 mm (ISO 2137)	Drop point (ISO 2176) [°C]	Application temperature range [°C]	Viscosity (DIN 51562) [mm²/s]	
							at 40 °C	at 100 °C
Ester oil	A	Polyurea	2	265 to 295	> 250	-40 to +180	100	11

The re-lubrication and maintenance intervals apply to the grease type originally used by the manufacturer:

- Type A: Klüberquiet BQH 72-102, made by Klüber Lubrication KG, München (⇒ Section 7.4.2.1, Page 61)

7.4.2.3 Grease quantity

Table 19: Grease quantity

Size	Grease type	Grease quantity [cm³]	
		Drive end	Pump end
650 - 364	Type A	30	600
650 - 365	Type A	30	600
650 - 404	Type A	30	600
650 - 405	Type A	30	600
800 - 505	Type A	30	600

7.5 Dismantling the pump set

7.5.1 General information/Safety regulations

	 DANGER Improper transport Danger to life from falling parts! Damage to the pump set! ▷ Use the attachment point provided (eyebolt, lifting lug or bail) for attaching lifting accessories. ▷ Never suspend the pump set by its power cable. ▷ Never use the lifting ropes included in KSB's scope of supply for lifting loads other than the KSB product supplied. ▷ Securely attach the lifting ropes to the pump and crane.
	 DANGER Hazardous voltage Danger of death from electric shock! ▷ Observe the safety rules for electrical work. ▷ Disconnect the equipment from the power supply. ▷ Secure the equipment against unintentional start-up. ▷ Verify that the equipment is de-energised. ▷ Earth and short-circuit the medium-voltage components. ▷ Cover any adjacent components that are connected to the power supply.
	 WARNING Unqualified personnel performing work on the pump (set) Risk of injury! ▷ Always have repair work and maintenance work performed by specially trained, qualified personnel.
	 WARNING Hot surface Risk of injury! ▷ Allow the pump set to cool down to ambient temperature.

	⚠ WARNING Improper lifting/moving of heavy assemblies or components Personal injury and damage to property! ▷ Use suitable transport devices, lifting equipment and lifting tackle to move heavy assemblies or components.
	⚠ WARNING Excess pressure inside the pump set Risk of injury when opening the pump set! ▷ Take care when opening the inner chambers. Equalise the pressure.
	⚠ WARNING Components with sharp edges Risk of cutting or shearing injuries! ▷ Always use appropriate caution for installation and dismantling work. ▷ Wear work gloves.
	⚠ WARNING Pump set tilting or rolling off Risk of personal injury! ▷ Make sure the pump set is secured against tilting during the entire dismantling process. ▷ For dismantling the pump set in a horizontal position, secure it against rolling off.

Observe the general safety instructions and information.

For dismantling and reassembly observe the general assembly drawing.

In the event of damage you can always contact our service departments.

7.5.2 Preparing the pump set

1. De-energise the pump set and secure it against unintentional start-up.
2. Remove the pump set from the discharge tube. (⇒ Section 7.3.1, Page 53)
3. Clean the pump set. (⇒ Section 7.3.2, Page 54)
4. Drain the lubricant. (⇒ Section 7.4.1.4, Page 57) (⇒ Section 7.4.1.4.1, Page 58)
5. Drain the leakage chamber and leave it open for the duration of the disassembly.

7.5.3 Removing the bellmouth

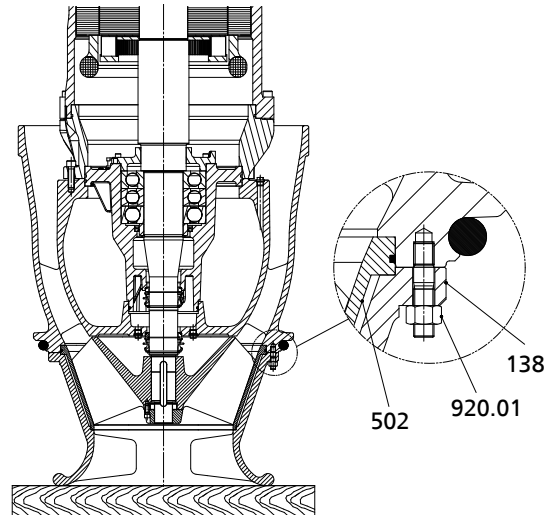


Fig. 33: Removing the bellmouth

- ✓ The pump set has been disconnected from the power supply and secured against unintentional start-up.
 - ✓ The pump set has been placed in a vertical position with the bellmouth on wooden supports and secured against tipping over.
1. Undo nuts 920.01.
 2. Attach the crane hook to the bail and lift the pump set off bellmouth 138. Casing wear ring 502 remains in bellmouth 138.
 3. Place the pump set in a horizontal position on wooden supports and make sure it cannot roll off.

7.5.4 Removing the impeller

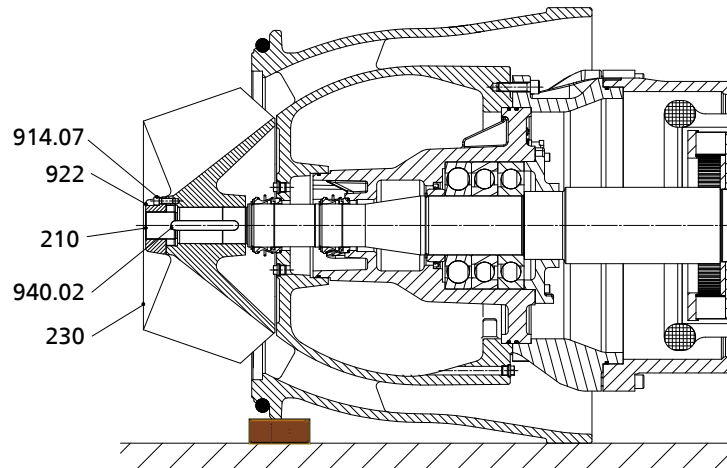


Fig. 34: Removing the impeller

- ✓ The pump has been placed in a horizontal position on wooden supports and is protected against rolling off.
 - ✓ The leakage has been drained.
1. Undo socket head cap screw 914.07 and impeller nut 922.
 2. Pull impeller 230 off shaft 210.
 3. Remove keys 940.02 from shaft 210.
 4. Protect the shaft thread against damage.

7.5.5 Removing the mechanical seal

7.5.5.1 Impeller-end mechanical seal

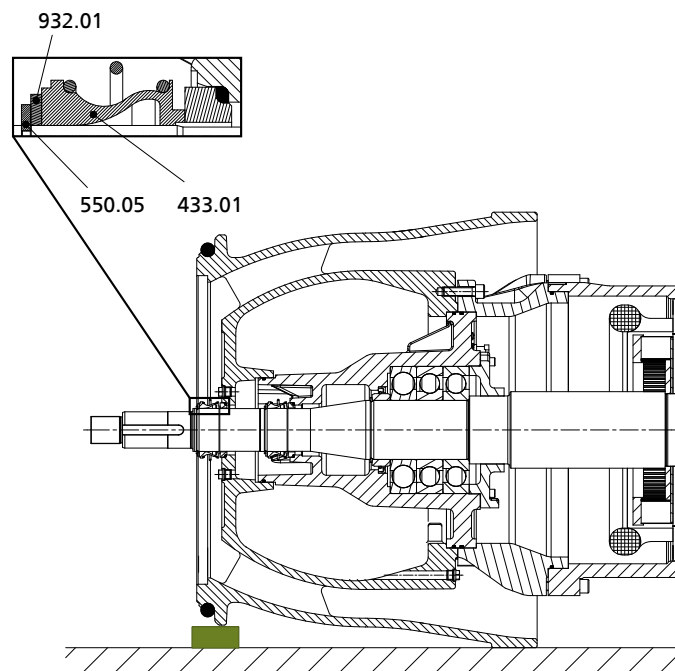


Fig. 35: Removing the impeller-end mechanical seal

- ✓ The pump set has been securely placed in a horizontal position on wooden supports.
 - ✓ The impeller has been removed.
 - ✓ The lubricant has been drained.
1. Remove circlip 932.01 and disc 550.05.
 2. Pull mechanical seal 433.01 off the shaft.



NOTE

To protect the mechanical seal against damage when pulling it off the shaft, placing a foil (no thicker than 0.03 mm) around the free shaft end is recommended.

7.5.5.2 Drive-end mechanical seal

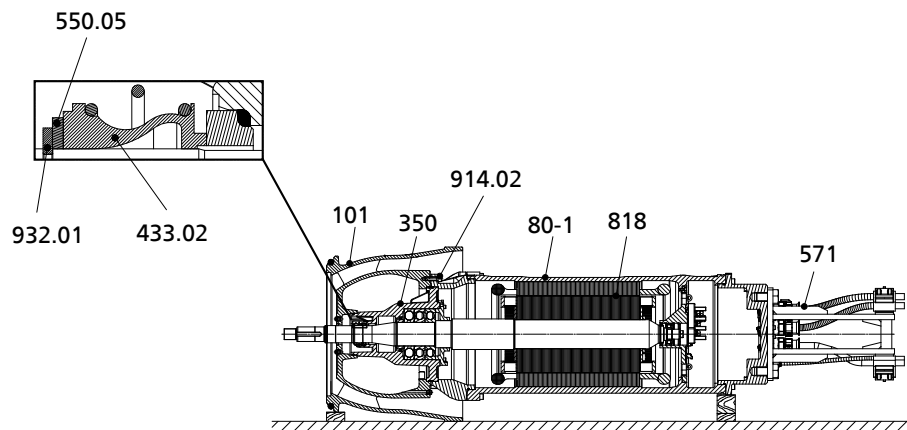


Fig. 36: Removing the drive-end mechanical seal

✓ The impeller-end mechanical seal has been removed.

1. Attach the pump set to the lifting equipment and pull it upright.
(⇒ Section 3.2, Page 12) Place the pump set on the bellmouth with pump casing 101 down.
2. Undo hexagon socket head cap screws 914.02.
3. Attach the lifting tackle to bail 571 and lift the pump set out of pump casing 101.
4. Place motor unit 80-1 including rotor 818 with the bearing assembly and bearing housing 350 on a wooden support and protect it against rolling off.
(⇒ Section 3.2, Page 12)
5. Remove circlip 932.01 and disc 550.05.
6. Carefully pull mechanical seal 433.02 and the mating ring of the mechanical seal off the shaft.

7.5.6 Dismantling the motor section

When dismantling the motor section and the electric cables make sure that the cores/terminals are clearly marked for future reassembly.

7.5.6.1 Removing the motor housing cover

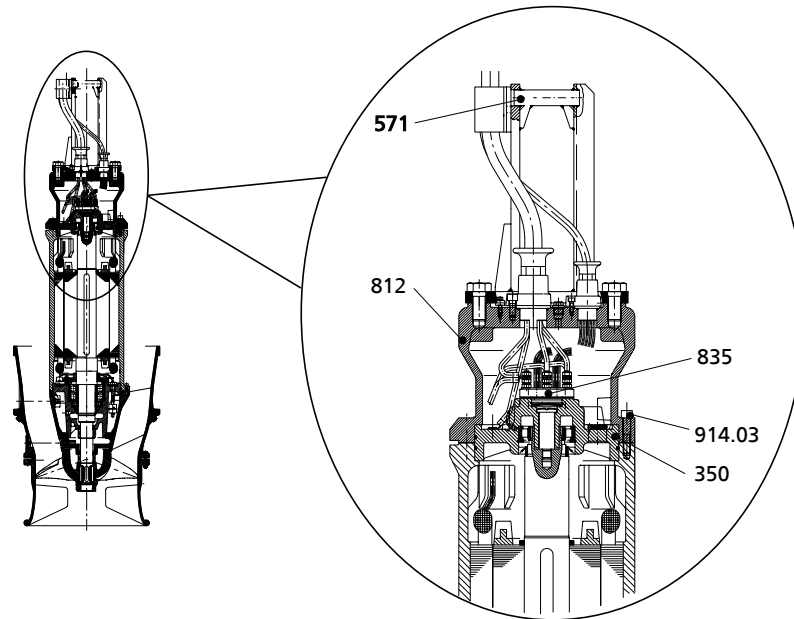


Fig. 37: Removing the motor housing cover

- ✓ Suitable lifting equipment is provided.
 - ✓ The pump set has been disconnected from the power supply. It has been securely placed on a level surface in a vertical position.
1. Attach bail 571 to the lifting equipment.
 2. Undo hexagon socket head cap screws 914.03.
 3. Carefully lift off motor housing cover 812.
 4. Remove the cable ties.
 5. Lift the motor housing cover up further until the power and control cables can be disconnected.
 6. Disconnect the cores of the control cable from the corresponding connector.
 7. Disconnect the cores of the power cable from terminal board 835. Disconnect the earth conductor and the shield of shielded cables from bearing housing 350.
 8. Place motor housing cover 812 down and secure it against rolling off.

7.5.6.2 Removing the cable gland and connection cable

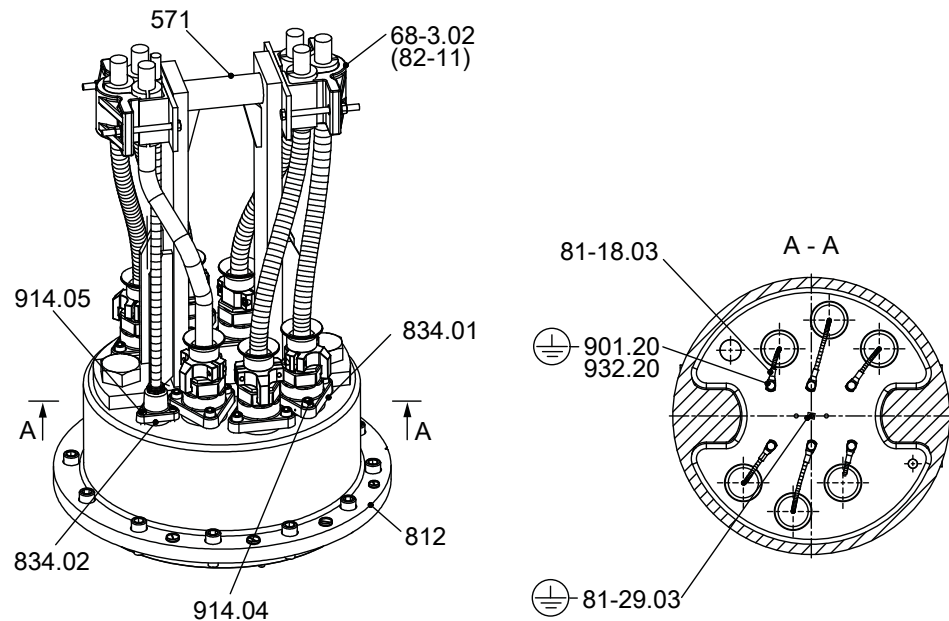


Fig. 38: Removing the cables and cable gland

Removing the power cable

✓ The motor housing cover has been removed, placed down and protected against rolling off.

1. Remove cover plate 82-11 or 68-3.02 from bail 571. Take out the cable gland 834.01/02 needing to be replaced.
2. Disconnect the earth connector on the inside of motor housing cover 812. If a shielded cable is used, disconnect the shield as well.
3. Undo screws 914.04 at cable gland 834.01.
4. Pull cable gland 834.01 out of the centring seat in motor housing cover 812.

Removing the sensor cable

✓ The motor housing cover has been removed, placed down and protected against rolling off.

1. Disconnect the cores of the sensor cable from plug 81-2.
2. Undo screws 914.05 at cable gland 834.02.
3. Pull cable gland 834.02 out of the centring seat in motor housing cover 812.



NOTE

Keeping a record of the core identification and lengths is recommended. This will facilitate installing the replacement cable gland.

7.6 Reassembling the pump set

7.6.1 General information/Safety regulations



WARNING

Improper lifting/moving of heavy assemblies or components

Personal injury and damage to property!

- ▷ Use suitable transport devices, lifting equipment and lifting tackle to move heavy assemblies or components.

	! WARNING Components with sharp edges Risk of cutting or shearing injuries! ▷ Always use appropriate caution for installation and dismantling work. ▷ Wear work gloves.
	! WARNING Insufficient stability Risk of crushing hands and feet! ▷ During assembly/dismantling, secure the pump (set)/pump parts to prevent tilting or tipping over.
	CAUTION Improper reassembly Damage to the pump! ▷ Reassemble the pump (set) in accordance with the general rules of sound engineering practice. ▷ Use original spare parts only.
	NOTE Apply liquid sealant to all screw plugs. Apply liquid sealant to all wetted clearances (e.g. Hylomar SQ 32M).

Sequence Always re-assemble the pump (set) in accordance with the corresponding general assembly drawing and/or exploded view.

Sealing elements Check O-rings for any damage and replace by new O-rings if required.
Never use O-rings that have been made by cutting an O-ring cord to size and gluing the ends together.

Assembly adhesives Avoid the use of assembly adhesives if possible.

Tightening torques When reassembling the pump set, tighten all screws/bolts as indicated.
In addition, secure all bolted/screwed connections closing off the flameproof enclosure with a thread-locking agent (Loctite type 243).

7.6.2 Installing the replacement cable gland

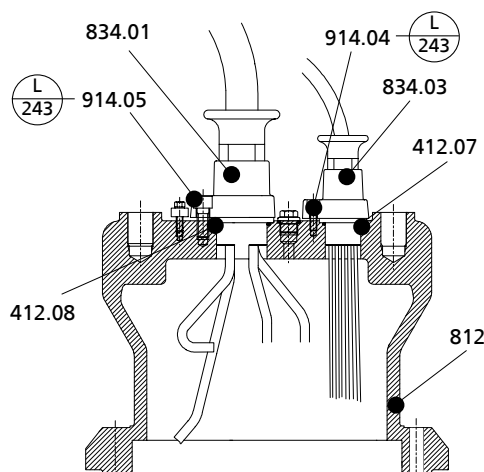


Fig. 39: Installing the cable gland

Table 20: Symbols key

Symbol	Description
	Always secure screwed connections marked with this symbol with Loctite 243 .

Connecting the power cable

- ✓ The motor housing cover has been removed, set down and protected against rolling off.
- 1. Adjust the lengths of the cable cores to those of the original cable gland.
- 2. Attach the core identification to match the original cable gland.
- 3. Slide O-ring 412.08 onto the core ends of the power cable and into the groove of the centring seat.
- 4. Insert cable gland 834.01 with the power cable and O-ring 412.08 into the opening provided.
- 5. Fasten cable gland 834.01 with hexagon socket head cap screws 914.05 and secure the screwed connection with Loctite 243.
- 6. Fasten cable terminals to the core ends.

Connecting the control cable

- ✓ The motor housing cover has been removed, set down and protected against rolling off.
- 1. Adjust the lengths of the cable cores to those of the original cable gland.
- 2. Attach the core identification to match the original cable gland.
- 3. Guide O-ring 412.07 onto the short core ends of the control cable and into the groove of the centring seat.
- 4. Insert cable gland 834.03 with the control cable and O-ring 412.07 into the opening provided.
- 5. Fasten cable gland 834.03 with hexagon socket head cap screws 914.04 and secure the screwed connection with Loctite 243.

7.6.3 Fitting the motor housing cover

	 DANGER
	Electrical connection work by unqualified personnel Danger of death from electric shock and explosion! ▷ Always have the electrical connections installed by an electrically qualified person. ▷ Observe regulations IEC 60364 and, for explosion-proof versions, BS 60079.

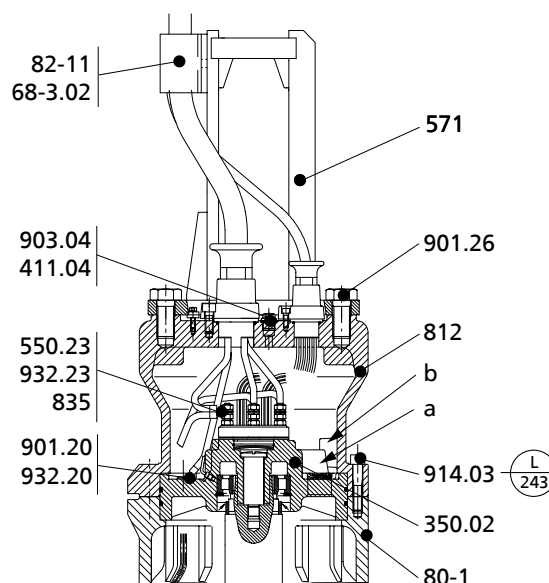


Fig. 40: Fitting the motor housing cover

a	Anti-rotation device of the bearing housing	b	Recess for anti-rotation device in the motor housing cover
---	---	---	--

Table 21: Symbols key

Symbol	Description
	Always secure screwed connections marked with this symbol with Loctite 243 .

- ✓ A new O-ring has been inserted into the groove of bearing housing 350.02.
- 1. Attach lifting tackle to bail 571, lift up motor housing cover 812 and lower it down onto bearing housing 350.02 until only a gap remains which allows work to continue.
- 2. Connect the control cable to the terminal strip as indicated.
- 3. Connect the power cable cores to terminal board 835 with disc 550.23, circlip 932.23 and nuts in accordance with the wiring diagram.
- 4. Fasten the earth conductor (conductor marking green/yellow) of the power cable to bearing housing 350.02 with bolt 901.20 and spring washer 932.20.
- 5. Tie the control and power cables together with cable ties.
- 6. Slowly lower motor housing cover 812 onto motor housing 811. Align the anti-rotation device of the bearing housing with the recess in the motor housing cover.
- 7. Fasten motor housing cover 812 to motor housing 811 or motor unit 80-1 with hexagon socket head cap screws 914.03. Secure the screwed connection with Loctite 243.
Observe the tightening torque! (⇒ Section 7.8, Page 78)
- 8. Prepare the motor for the leak test. Undo bolts 901.26 at bail 571 to gain access to the screw plugs for the leak test.
- 9. Perform the leak test. (⇒ Section 7.6.8.2, Page 77)
- 10. Fasten bail 571 with hexagon head bolts 901.26.
Observe the tightening torque. (⇒ Section 7.8, Page 78)
- 11. Insert the power and control cables with cable protectors 81-97 into cover plate 82-11 or 68-3.02.
- 12. Fasten the cover plate to the bail.

7.6.4 Installing the mechanical seal

Observe the following to ensure trouble-free operation of the mechanical seal:

- Only remove the protective wrapping of the contact faces immediately before assembly takes place.
- The shaft surface must be absolutely clean and undamaged.
- Immediately before installing the mechanical seal, wet the contact faces with a drop of oil.
- For easier installation of bellows-type mechanical seals, wet the inside diameter of the bellows or the O-rings with soapy water (not oil).
- Cover any grooves in the shaft into which the O-rings could slide with suitable means or assembly aids.
- To prevent any damage to the rubber bellows, place a thin foil (of approximately 0.1 to 0.3 mm thickness) around the free shaft stub.
Slide the rotating assembly over the foil into its installation position.
Then remove the foil.

7.6.4.1 Drive-end mechanical seal

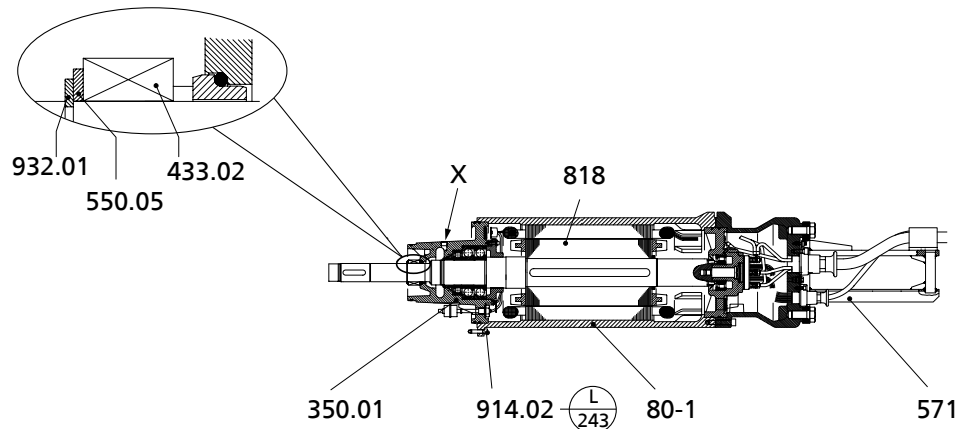


Fig. 41: Installing the drive-end mechanical seal

Table 22: Symbols key

Symbol	Description
	Always secure screwed connections marked with this symbol with Loctite 243 .

- ✓ The pump set has been positioned horizontally on suitable wooden supports and is protected against rolling off.
- 1. Use a suitable sleeve to press the mating ring of mechanical seal 433.02 including an O-ring into the indicated drilled seat of bearing housing 350.01.
- 2. Slide the bellows part of mechanical seal 433.02 onto the shaft until it rests against the mating ring.
- 3. Slide disc 550.05 and circlip 932.01 onto the shaft. Press the circlip in with an assembly sleeve until it is axially fastened in the shaft groove.
- 4. Screw the testing device into the leakage drain hole (X) of bearing housing 350.01 and perform a leak test. (⇒ Section 7.6.4.1.1, Page 72)
- 5. Attach the eye hook to the bail and pull upright motor unit 80-1 including rotor 818 with bearing and bearing housing 350.01. (⇒ Section 3.2.2, Page 12)
- 6. Place the pump set on the pump casing and bellmouth. Fasten it with hexagon socket head cap screws 914.02. Secure the screwed connection with a thread-locking agent (Loctite 243).

7.6.4.1.1 Leak test when installing the mechanical seal

Observe the following values for leak testing:

- **Test medium:** compressed air
 - **Test pressure:** 1 bar max.
 - **Test period:** 5 minutes
1. The pressure must not drop during the test period.
If the pressure does drop, check the sealing elements and screwed connections. Then perform another leak test.
 2. If the test has been successful, remove the testing device. Do not close the leakage drain hole to allow drainage of any water ingress.

7.6.4.2 Impeller-end mechanical seal

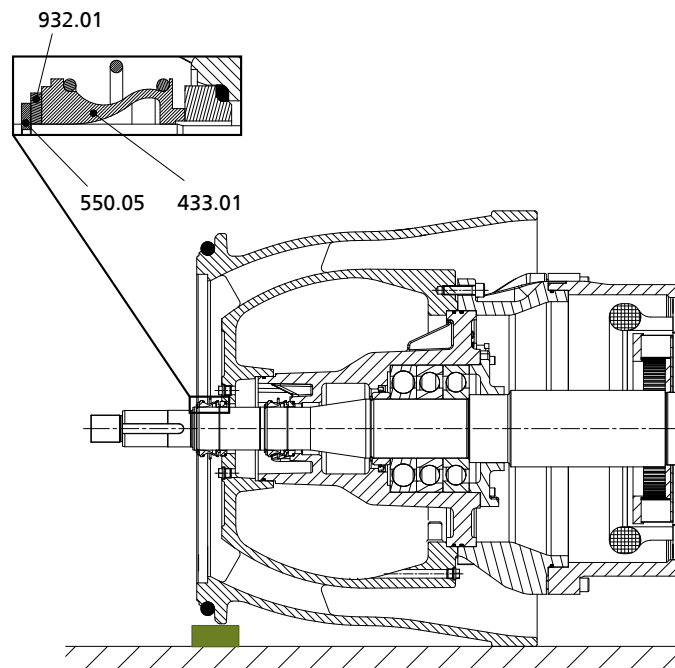


Fig. 42: Installing the impeller-end mechanical seal

- ✓ The pump casing has been fastened to the motor.
 - ✓ The pump set has been positioned horizontally on a wooden support. It has been secured against rolling off.
1. Use an assembly sleeve of a suitable diameter to press the mating ring of mechanical seal 433.01 together with the O-ring into the drilled recess in the pump casing.
 2. Carefully guide on the bellows part of the mechanical seal until it rests against the mating ring.
 3. Slide disc 550.05 and circlip 932.01 onto the shaft. Press the circlip in with an assembly sleeve until it is axially fastened in the shaft groove.
 4. Check the lubricant chamber for leakage.
 5. Fill the lubricant reservoir with lubricant. Then close the lubricant reservoir.

7.6.5 Fitting the impeller

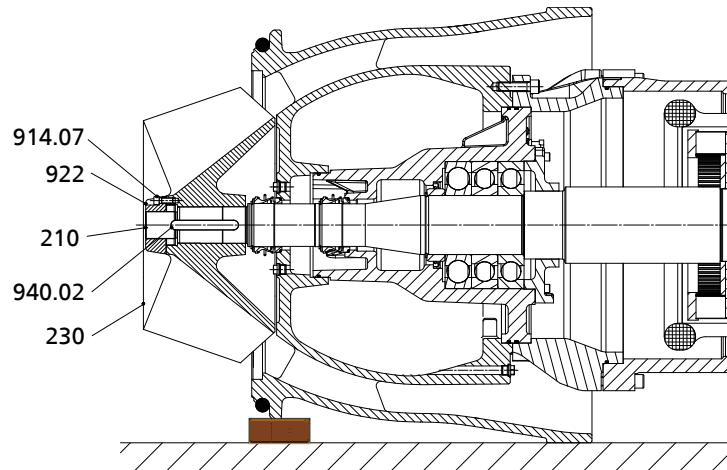


Fig. 43: Fitting the impeller

- ✓ The pump has been placed in a horizontal position on a wooden support and is protected against rolling off.
 - ✓ The impeller-end mechanical seal 433.02 has been installed.
1. Insert and fit two keys 940.02 into the keyway.
 2. Coat all sides of the shaft seat and shaft thread with an assembly paste which prevents seizure of the chrome steel parts.
 3. Guide impeller 230 onto shaft 210 until it abuts against the shaft collar.
 - ⇒ This is as far as the impeller can move along the shaft. This position results in the maximum possible clearance between bellmouth with casing wear ring and impeller vanes.
 4. Screw impeller nut 922 onto the shaft thread.
 5. Align the holes of impeller 230 and impeller nut 922 and fasten them with hexagon socket head cap screws 914.07.

7.6.6 Fitting the bellmouth

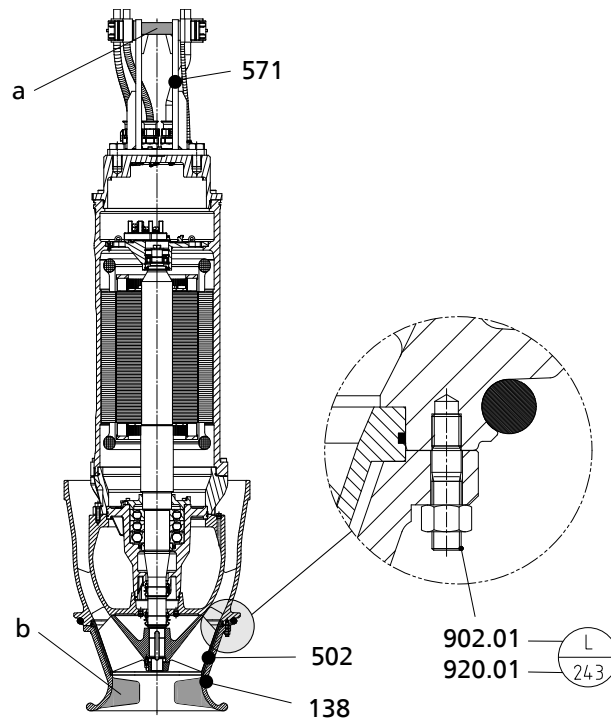


Fig. 44: Aligning and fitting the bellmouth

a	Bail	b	Baffles in the bellmouth
---	------	---	--------------------------

Table 23: Symbols key

Symbol	Description
	Always secure screwed connections marked with this symbol with Loctite 243 .

- ✓ Bellmouth 138 has been positioned on wooden supports on a level and solid surface.
 - ✓ Suitable lifting equipment is available.
 - ✓ The pump set has been completely pre-assembled.
 - ✓ Casing wear ring 502 has been fitted in bellmouth 138.
1. Attach lifting equipment to bail 571 and carefully pull the pump set upright.
 2. Centre the pump set above bellmouth 138.
NOTE Make sure that the pin of bail 571 for attaching the lifting tackle and the baffles in bellmouth 138 are aligned in the same direction.
 3. Slowly lower the pump set. While lowering the pump set, make sure that studs 902.01 are aligned with the drilled holes.
 4. Then lower the pump set until it sits on bellmouth 138.
 5. Fasten all studs 902.01 with corresponding nuts 920.01. Observe the tightening torque. (⇒ Section 7.8, Page 78)

7.6.7 Adjusting the clearance

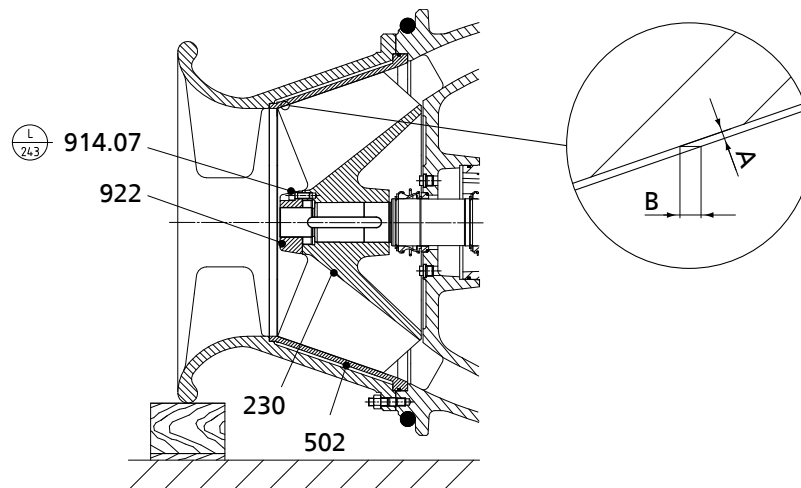


Fig. 45: Adjusting the clearance

Table 24: Symbols key

Symbol	Description
	Always secure screwed connections marked with this symbol with Loc-tite 243 .

- ✓ The pump set has been placed in a horizontal position on wooden supports. It has been secured against rolling off.
- ✓ The pump set has been completely assembled.
- 1. Undo hexagon socket head cap screw 914.07 and impeller nut 922.
- 2. Screw bolts and/or threaded rods into the tapped holes on the face of impeller 230 to pull the impeller forward until the impeller vanes abut the bellmouth/casing wear ring 502.
 - ⇒ This is the maximum front position of the impeller (clearance = 0 mm).
- 3. Screw on impeller nut 922 until it abuts the front face of the impeller hub.
- 4. Screw the impeller nut on further (by dimension "B") to move the impeller along the shaft until the specified clearance "A" is established.
- 5. Use a feeler gauge to measure and verify the adjusted clearance between the impeller vanes and casing wear ring 502. Perform this measurement at several points spaced around the circumference.
- 6. Align two tapped holes in the impeller hub with two holes in the impeller nut.
 - ⇒ Screw the impeller nut on slightly further until the holes are aligned.
 - ⇒ If avoidable, do not loosen the nut to align the holes.
- 7. Secure the impeller nut with hexagon socket head cap screws 914.07 and a thread-locking agent. Rotate the pump rotor by hand to check the clearance. During rotation the impeller must not touch any part of the casing.

Table 25: Clearances "A" and "B"

Size Amacan S	Clearance "A" [mm]	Clearance "B" [mm]
650 - 364	0,45 ^{+0,2} / _{-0,1}	1,5 ^{+0,6} / _{-0,3}
650 - 365	0,45 ^{+0,2} / _{-0,1}	1,5 ^{+0,6} / _{-0,3}
650 - 404	0,55 ^{+0,2} / _{-0,1}	--
650 - 405	0,55 ^{+0,2} / _{-0,1}	1,7 ^{+0,6} / _{-0,3}
800 - 505	0,55 ^{+0,2} / _{-0,1}	1,6 ^{+0,6} / _{-0,3}

1589.827/02-EN

7.6.8 Leak testing

7.6.8.1 Checking the lubricant reservoir for leakage

After reassembly, the mechanical seal area/lubricant reservoir must be checked for leakage. The leak test is performed at the lubricant filler opening.

Observe the following values for leak testing:

- **Test medium:** compressed air
- **Test pressure:** 1 bar maximum
- **Test duration:** 5 minutes

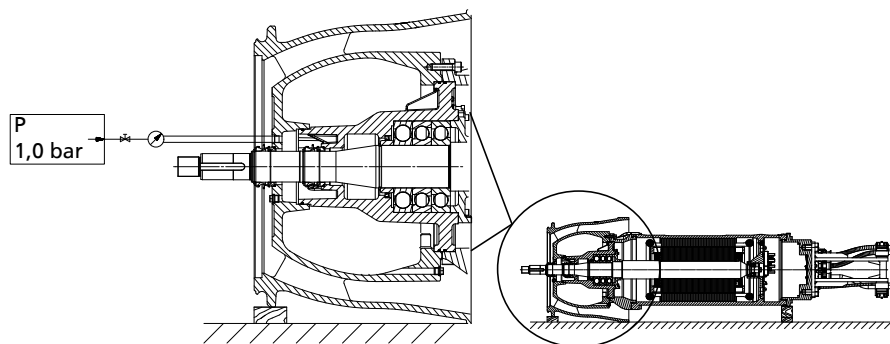


Fig. 46: Screwing in the testing device

- ✓ The impeller-end mechanical seal has been installed.
- 1. Screw the testing device tightly into the G 1/2 lubricant filler opening.
- 2. Carry out the leak test with the values specified above.
The pressure must not drop during the test period.
If the pressure does drop, check the seals and screwed connections.
- 3. Repeat the leak test, if required.
- 4. If the leak test has been successful, fill in the lubricant.
(⇒ Section 7.4.1.4.2, Page 60)
- 5. Close screw plug 903.01 with new joint ring 411.01 and liquid sealant.

7.6.8.2 Testing the motor for leakage

	CAUTION Screw plug leaking or missing Damage to the motor! ▷ Never start up a pump set without screw plug 903.04. ▷ Apply a thread-locking agent (Loctite 243) to screw plug 903.04.
--	---

Observe the following values for leak testing:

- **Test medium:** nitrogen
- **Test pressure:** 0.8 bar maximum
- **Test duration:** 2 minutes

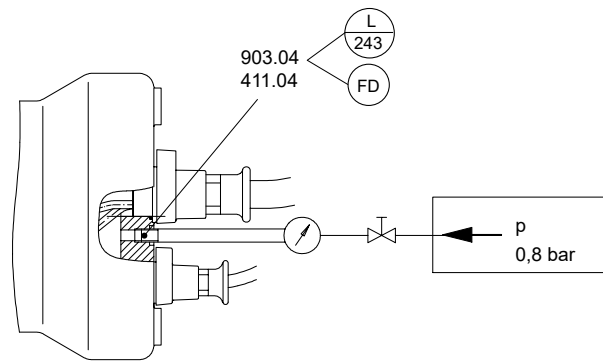


Fig. 47: Checking the motor space for leakage

1. Remove screw plug 903.04 and joint ring 411.04 at the motor housing cover.
2. Screw the testing device tightly into the hole.
3. Carry out the leak test with the values specified above.
The pressure must not drop during the test period.
If the pressure does drop, check the sealing elements and screwed connections.
Then perform another leak test.
4. Remove the testing device.
5. Apply a thread-locking agent (Loctite 243) and liquid sealant to screw plug 903.04.
6. Re-insert screw plug 903.04 with new joint ring 411.04.

Table 26: Symbols key

Symbol	Description
	Always secure screwed connections marked with this symbol with Loctite 243 .
	Always apply a liquid sealant (e.g. Hylomar SQ32M) to sealing surfaces marked with this symbol.

7.7 Checking the electrical connection and motor

Once reassembly has been completed, carry out the steps described in (⇒ Section 7.2.1, Page 51) and (⇒ Section 7.3.4, Page 55).

7.8 Tightening torques

Table 27: Tightening torques [Nm] depending on thread, steel grade and property class

Steel grade	-		A2, A4		A2, A4		1.4410		1.4462	
Property class	8.8		-50		-70		$R_{p0.2} \geq 530 \text{ N/mm}^2$		$R_{p0.2} \geq 450 \text{ N/mm}^2$	
Thread	Min-imum	Rated torque	Min-imum	Rated torque	Min-imum	Rated torque	Min-imum	Rated torque	Min-imum	Rated torque
M4	3,0	3,4	1,0	1,1	2,1	2,4	2,5	2,8	2,1	2,4
M5	6,1	6,8	2,0	2,2	4,3	4,8	5,0	5,6	4,3	4,8
M6	10,3	11	3,4	3,7	7,2	8,0	8,5	9,5	7,2	8,0
M8	25	28	8,2	9,1	18	19	21	23	18	19
M10	49	55	16	18	35	38	41	45	35	38
M12	85	94	28	31	59	66	70	78	59	66
M14	134	149	44	49	94	105	111	124	94	105
M16	209	232	69	76	147	163	173	192	147	163
M20	408	453	134	149	287	319	338	375	287	319
M24	704	782	231	257	495	550	583	648	495	550
M27	1025	1139	36	374	721	801	849	944	721	801
M30	1403	1559	460	511	986	1096	1162	1291	986	1096

Steel grade	-		A2, A4		A2, A4		1.4410		1.4462	
Property class	8.8		-50		-70		$R_{p0.2} \geq 530 \text{ N/mm}^2$		$R_{p0.2} \geq 450 \text{ N/mm}^2$	
Thread	Min-imum	Rated torque	Min-imum	Rated torque	Min-imum	Rated torque	Min-imum	Rated torque	Min-imum	Rated torque
M33	1888	2098	619	688	1327	1475	1563	1737	1327	1475
M36	2445	2717	802	891	1719	1910	2025	2250	1719	1910
M42	3904	4338	1281	1423	2745	3050	3233	3592	2745	3050
M48	5880	6534	1929	2144	4135	4594	4870	5411	4135	4594



NOTE

If using an adjustable torque wrench or torque screwdriver, adjust it to a value within the indicated range between the minimum and the nominal value.

7.9 Spare parts stock

7.9.1 Ordering spare parts

Always quote the following data when ordering replacement or spare parts:

- Order number
- Order item number
- Type series
- Size
- Year of construction
- Motor number

Refer to the name plate for all data.

Also specify the following data:

- Part No. and description
- Quantity of spare parts
- Shipping address
- Mode of dispatch (freight, mail, express freight, air freight)

7.9.2 Recommended spare parts stock for 2 years' operation to DIN 24296

Table 28: Quantity of spare parts for recommended spare parts stock

Part No.	Description	Number of pumps (including stand-by pumps)						
		2	3	4	5	6	8	10 and more
230	Impeller	1	1	1	2	2	3	30 %
320 / 321	Rolling element bearing, pump end	1	1	2	2	3	4	50 %
322	Rolling element bearing, drive end	1	1	2	2	3	4	50 %
412.05	O-ring, for discharge tube cover	2	3	4	5	6	8	100 %
433.01	Mechanical seal, pump end	2	3	4	5	6	7	90 %
433.02	Mechanical seal, drive end	2	3	4	5	6	7	90 %
502	Casing wear ring	2	2	2	3	3	4	50 %
80-1	Motor unit	-	-	-	-	1	2	30 %
818	Rotor	-	-	-	-	1	2	30 %
834	Cable gland	1	1	2	2	2	3	40 %

Part No.	Description	Number of pumps (including stand-by pumps)						
		2	3	4	5	6	8	10 and more
99-9	Set of sealing elements, motor	4	6	8	8	9	10	100 %
99-9	Set of sealing elements, hydraulic system	4	6	8	8	9	10	100 %

8 Trouble-shooting

	 WARNING
	Improper work to remedy faults Risk of injury! ► For any work performed to remedy faults, observe the relevant information given in this operating manual and/or in the product literature provided by the accessories manufacturer.

If problems occur that are not described in the following table, consultation with the KSB service is required.

- A** Pump is running, but does not deliver
- B** Pump delivers insufficient flow rate
- C** Excessive current/power input
- D** Insufficient discharge head
- E** Vibrations and noise during pump operation

Table 29: Trouble-shooting

A	B	C	D	E	Possible causes	Remedy ⁴⁾
-	X	-	-	X	Water level lowered too much during operation	Check supply and capacity of system (sump floor area). Check level control equipment.
X	X	-	-	X	Total pressure corresponding to $NPSH_{\text{pump}}$ too high Total pressure corresponding to $NPSH_{\text{system}}$ too low	Increase fluid level on the suction side. Clean screening equipment, if required.
X	X	X	-	X	Penetration of air into the pump due to formation of an air pocket - Suction-side water level too low	Increase the suction-side water level. If this is not possible or unsuccessful, please contact KSB.
X	X	X	-	X	Unfavourable flow to the pump inlet	Improve the flow to the intake chamber (contact KSB).
-	X	X	-	X	Pump running in off-design conditions - part load/overload	Check the pump's operating data.
X	X	-	X	X	Pump clogged by deposits	Clean intake and pump components.
-	X	X	X	X	Wear	Replace worn components by new ones.
-	X	-	X	X	Impermissible air or gas content in the fluid handled	Contact KSB.
-	-	-	-	X	System-induced vibrations	Contact KSB.
-	-	X	-	X	Wrong direction of rotation	Check the electrical connection of motor and control system, if any.
X	-	-	-	-	No voltage	Check electrical connections. Contact the energy supplier.
X	-	-	-	-	Motor winding or electric cable are defective.	Replace with original KSB cable or contact KSB.
-	-	X	-	X	Worn or defective rolling element bearings	Contact KSB.
X	-	-	-	-	The thermistor tripping unit with manual reset for temperature limiter has tripped the pump as a result of the permissible winding temperature being exceeded.	Have cause determined and eliminated by qualified and trained personnel.
X	-	-	-	-	Motor has been tripped by leakage monitor.	Have cause determined and eliminated by qualified and trained personnel.

⁴ The pump pressure must be released before attempting to remedy faults on parts which are subjected to pressure. Disconnect the pump set from the power supply!

A	B	C	D	E	Possible causes	Remedy ⁴⁾
X	-	-	-	-	Mechanical seal monitor has tripped.	Have cause determined and eliminated by qualified and trained personnel.
X	-	-	-	-	Bearing temperature monitor has tripped.	Have cause determined and eliminated by qualified and trained personnel.

9 Related Documents

9.1 General assembly drawing of pump sets with UAG motors (DKA motor)

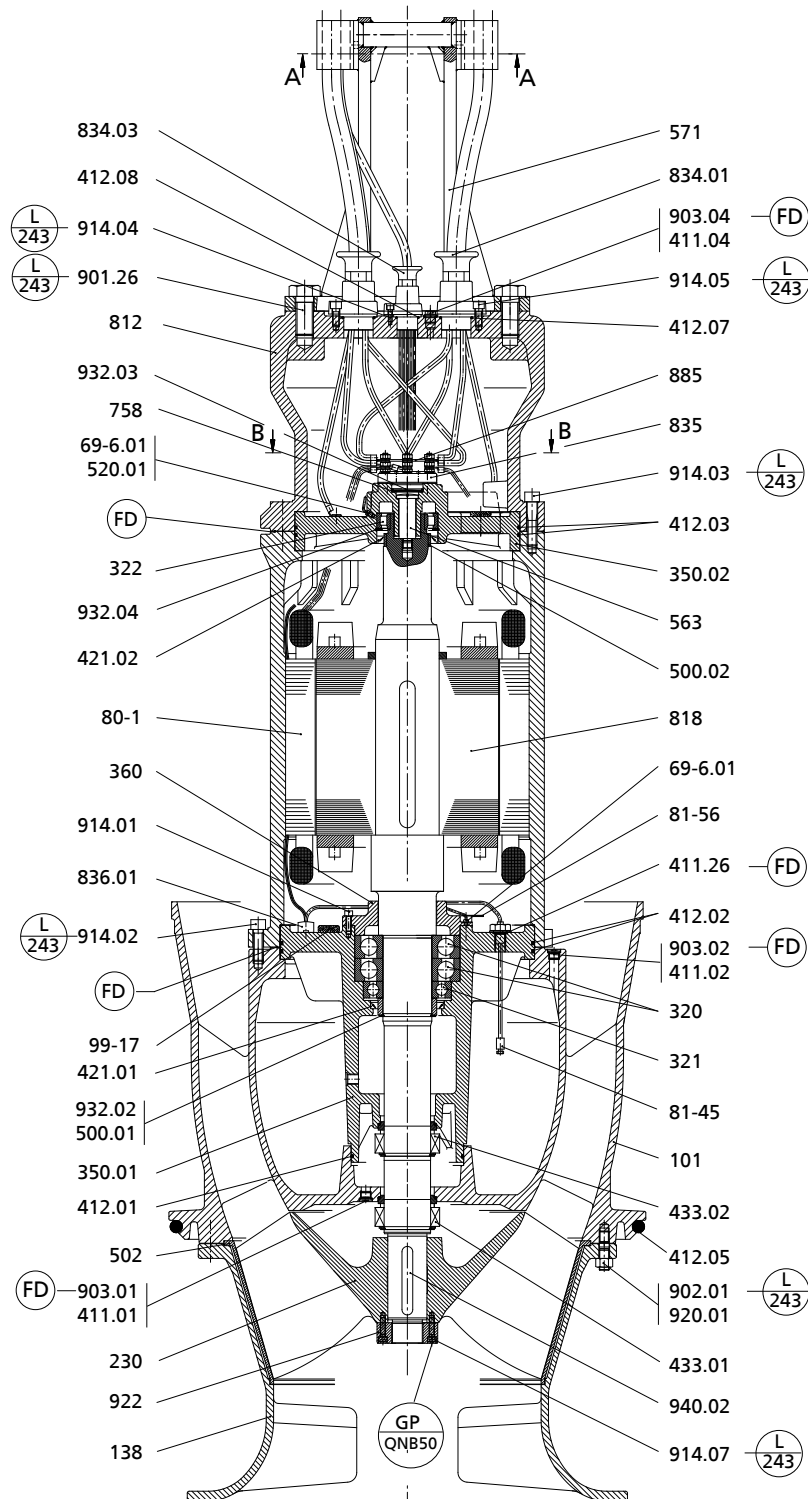


Fig. 48: General assembly drawing

Table 30: Detail drawings

Detail drawing: bracket	Detail drawing: mechanical seal
	970.01 factory name plate 970.02 name plate 970.03 oil drain 970.04 oil filler plug 970.05 leakage drain
Detailed view: connection space	Pump signage
	Always secure screwed connections marked with this symbol with Loctite 243 .
	Always apply a liquid sealant (e.g. Hylomar SQ32M) to sealing surfaces marked with this symbol.
	Use a lubricant paste (e.g. Altemp Q NB 50).

Table 31: List of components

Part No.	Description	Part No.	Description
101	Pump casing	758	Screen
138	Bellmouth	80-1	Motor unit
230	Impeller	81-45	Float switch
320	Angular contact ball bearings	81-56	Motor moisture protection device
321	Deep groove ball bearing	81-97.01/.02	Cable protector
322	Cylindrical roller bearing	812	Motor housing cover
350.01/.02	Bearing housing	818	Rotor

Part No.	Description	Part No.	Description
360	Bearing cover	834.01/.03	Cable gland
411.01/.02/.04/.26	Joint ring	835	Terminal board
412.01/.02/.03/.05/.07/.08	O-ring	836.01/.02	Terminal strip
421.01/.02	Lip seal	885	Chain
433.01/.02/.03	Mechanical seal	99-17	Desiccant
59-7.01	Support	901.20/.25/.26	Hexagon head bolt
500.01/.02	Ring	902.01	Stud
502	Casing wear ring	903.01/.02/.04	Screw plug
520.01	Sleeve	914.01/.02/.03/.04/.05/.07/.19	Hexagon socket head cap screw
550.05/.25	Disc	920.01/.25	Nut
563	Pin	922	Impeller nut
571	Bail	932.01/.02/.03/.04/.20	Circlip
68-3.02	Cover plate	940.02	Key
69-6.01	Temperature sensor	970.01/.02/.03/.04/.05	Label/plate

9.2 Cable bundle

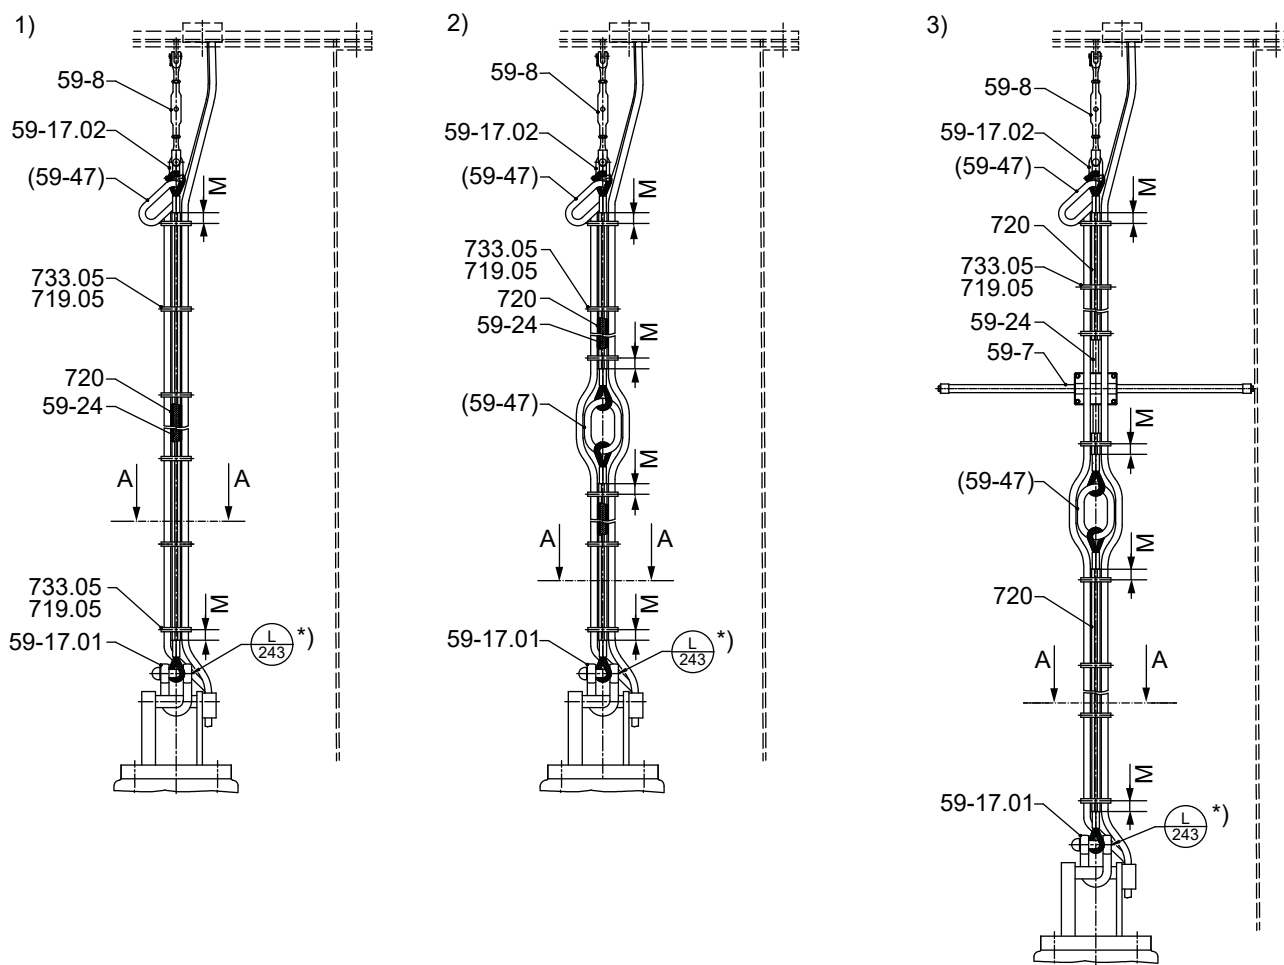


Fig. 49: Cable bundle

1)	Basic design
2)	Design with lifting lug
3)	Design with support

*) : Only required for galvanised version

	NOTE
	Distance M = 50 mm

Table 32: Symbols key

Symbol	Description
	Always secure screwed connections marked with this symbol with Loc-tite 243 .

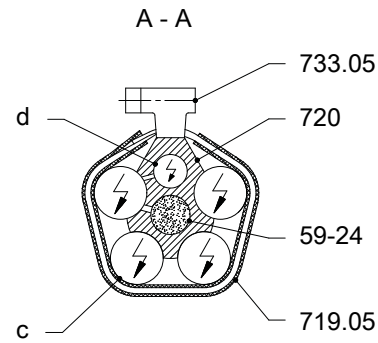


Fig. 50: Section A - A, position of power cable, control cable and support rope

c	Power cable	d	Control cable
---	-------------	---	---------------

Table 33: List of spare parts of the cable bundle

Part No.	Description	Part No.	Description
59-7	Support	59-47	Lifting lug
59-8	Turnbuckle	719.05	Flexible tube
59-17.01/02	Shackle	720	Fitting
59-24	Rope / support rope	733.05	Hose clip

9.3 Wiring diagrams

9.3.1 Wiring diagram

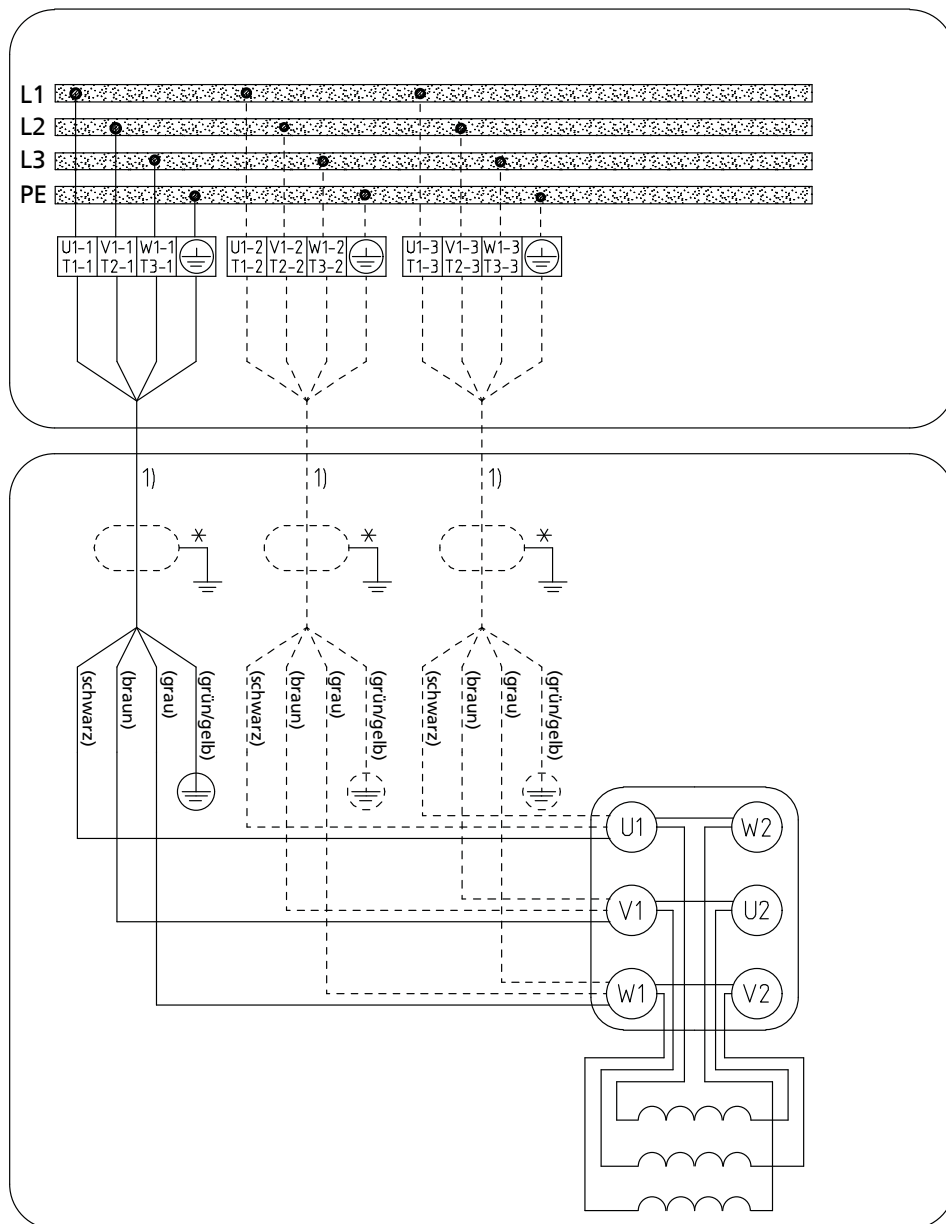


Fig. 51: Wiring diagram

* Shielded cable optional

¹⁾ Up to 6 parallel cable pairs possible

9.3.2 Wiring diagrams for the sensors

Standard
pump sets

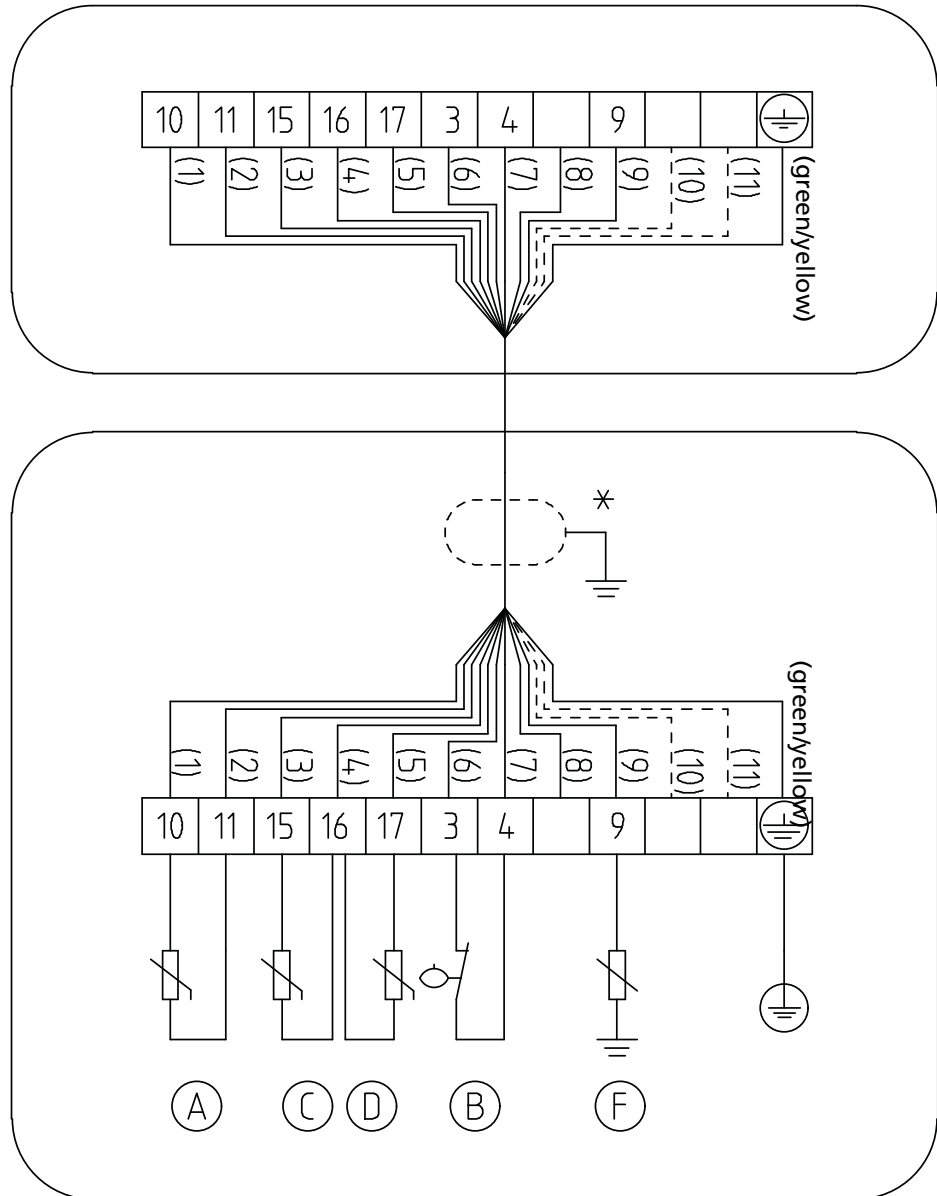


Fig. 52: Wiring diagram for sensors of standard pump sets

*	Shielded cables optional
(A)	Motor temperature (PTC)
(B)	Mechanical seal leakage
(C)	Bearing temperature (lower bearings)
(D)	Bearing temperature (upper bearing)
(F)	Leakage inside the motor

Pump sets
with additional Pt100
motor temperature
monitoring

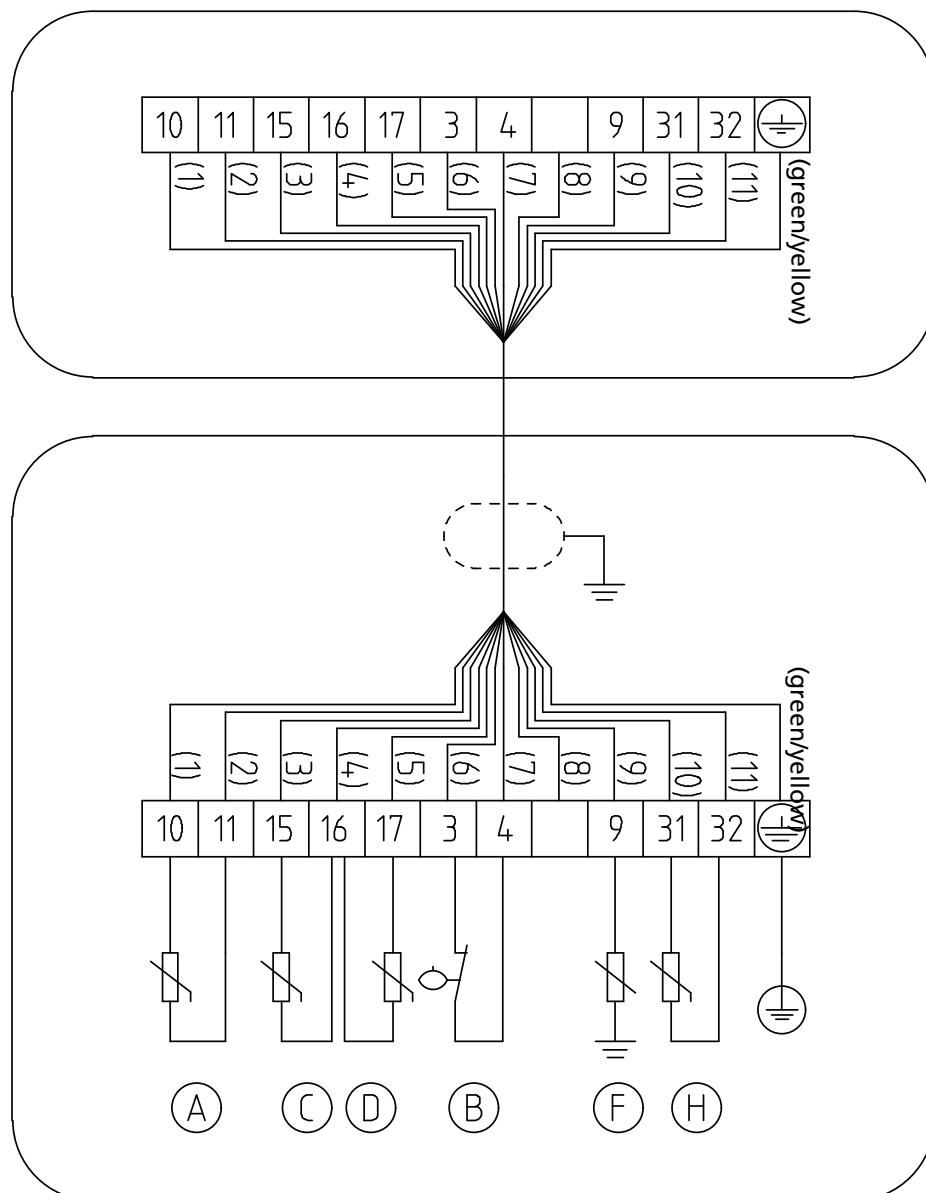


Fig. 53: Wiring diagram for pump sets with additional Pt100 motor temperature monitoring

Ⓐ	Motor temperature (PTC)
Ⓑ	Mechanical seal leakage
Ⓒ	Bearing temperature (lower bearings)
Ⓓ	Bearing temperature (upper bearing)
Ⓕ	Leakage inside the motor
Ⓗ	Motor temperature (Pt100)

9.4 Dimensions

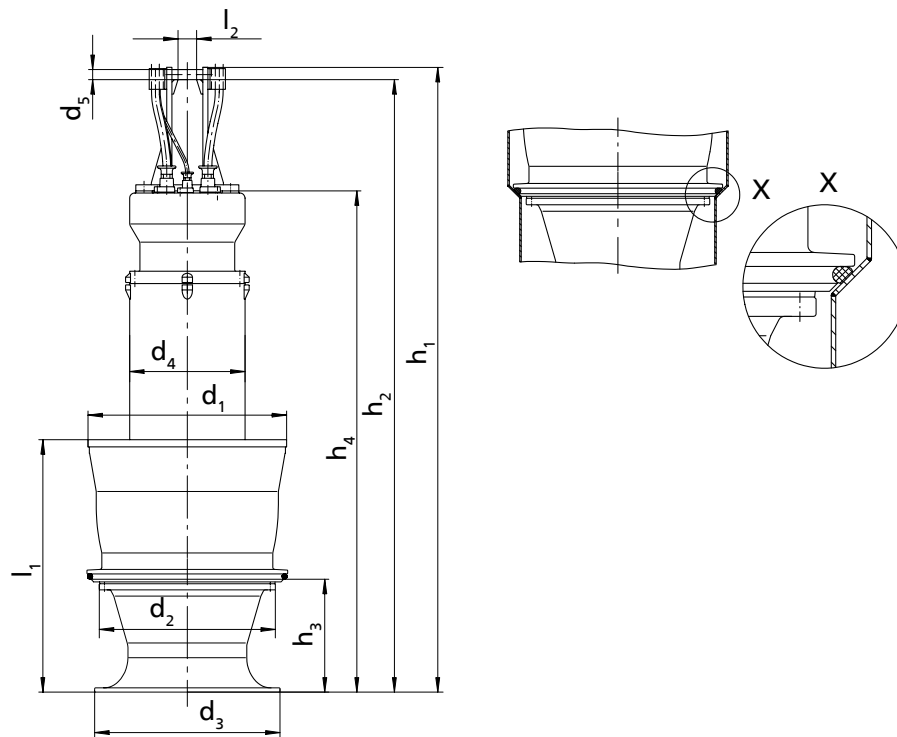


Fig. 54: Dimensions of the pump set

Table 34: Dimensions of the pump set [mm]

Size	Motor size	Number of poles	h_1	h_2	h_3	h_4	d_1	d_2	d_3	d_4	d_5	l_1	l_2	[kg] ⁵⁾
650 - 364	45	4	2090	2042	260	1605	625	500	510	390	35	651	70	970
650 - 364	65	4	2090	2042	260	1605	625	500	510	390	35	651	70	970
650 - 364	80	4	2290	2242	260	1805	625	500	510	390	35	651	70	1080
650 - 365	65	4	2090	2042	260	1605	625	500	510	390	35	651	70	960
650 - 365	80	4	2290	2242	260	1805	625	500	510	390	35	651	70	1070
650 - 365	100	4	2290	2242	260	1805	625	500	510	390	35	651	70	1100
650 - 365	120	4	2290	2242	260	1805	625	500	510	390	35	651	70	1150
650 - 404	80	4	2305	2258	290	1820	620	–	500	390	35	665	70	1080
650 - 404	100	4	2305	2258	290	1820	620	–	500	390	35	665	70	1120
650 - 404	120	4	2305	2258	290	1820	620	–	500	390	35	665	70	1170
650 - 404	140	4	2505	2458	290	2020	620	–	500	390	35	665	70	1300
650 - 405	120	4	2305	2258	290	1820	620	–	500	390	35	665	70	1160
650 - 405	140	4	2505	2458	290	2020	620	–	500	390	35	665	70	1290
650 - 405	160	4	2585	2528	290	2100	620	–	500	480	45	665	90	1550
650 - 405	180	4	2585	2528	290	2100	620	–	500	480	45	665	90	1610
650 - 405	200	4	2665	2608	290	2180	620	–	500	480	45	665	90	1690
650 - 405	220	4	2665	2608	290	2180	620	–	500	480	45	665	90	1730
800 - 505	100	6	2375	2328	370	1890	775	665	645	390	35	795	70	1340
800 - 505	120	6	2375	2328	370	1890	775	665	645	390	35	795	70	1380
800 - 505	140	6	2575	2528	370	2090	775	665	645	390	35	795	70	1480

⁵⁾ Pump set complete with 10 m power cable and 5 m support rope

Size	Motor size	Number of poles	h_1	h_2	h_3	h_4	d_1	d_2	d_3	d_4	d_5	l_1	l_2	[kg] ⁵⁾
800 - 505	150	6	2520	2463	370	2035	775	665	645	480	45	795	90	1790
800 - 505	175	6	2600	2543	370	2115	775	665	645	480	45	795	90	1890

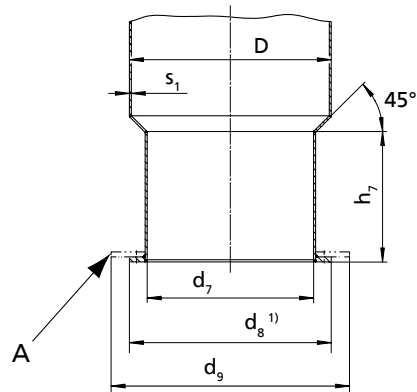


Fig. 55: Dimensions of the discharge tube



A	Suction umbrella; option for reducing the minimum water level
1)	This dimension depends on the type of installation, see general arrangement drawings

Table 35: Dimensions of the discharge tube [mm]



Size	Motor size	Number of poles	D	d_7	d_9	h_7	s_1
650 - 364	45	4	660	530	900	225	7,1
650 - 364	65	4	660	530	900	225	7,1
650 - 364	80	4	660	530	900	225	7,1
650 - 365	65	4	660	530	900	225	7,1
650 - 365	80	4	660	530	900	225	7,1
650 - 365	100	4	660	530	900	225	7,1
650 - 365	120	4	660	530	900	225	7,1
650 - 404	80	4	660	530	900	265	7,1
650 - 404	100	4	660	530	900	265	7,1
650 - 404	120	4	660	530	900	265	7,1
650 - 404	140	4	660	530	900	265	7,1
650 - 405	120	4	660	530	900	265	7,1
650 - 405	140	4	660	530	900	265	7,1
650 - 405	160	4	660	530	900	265	7,1
650 - 405	180	4	660	530	900	265	7,1
650 - 405	200	4	660	530	900	265	7,1
650 - 405	220	4	660	530	900	265	7,1
800 - 505	100	6	813	680	1050	335	8
800 - 505	120	6	813	680	1050	335	8
800 - 505	140	6	813	680	1050	335	8
800 - 505	150	6	813	680	1050	335	8
800 - 505	175	6	813	680	1050	335	8

9.5 General arrangement drawings


9.5.1 Installation type BU

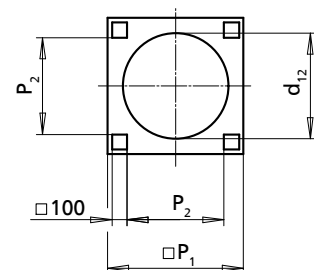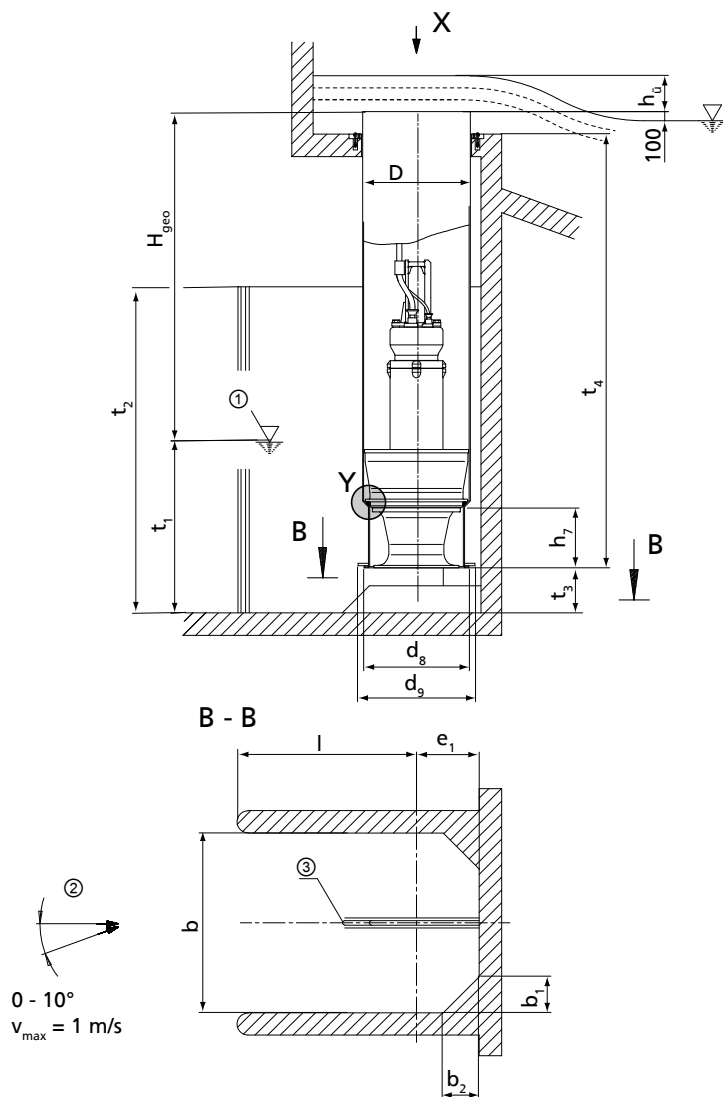

Foundation recesses⁶⁾

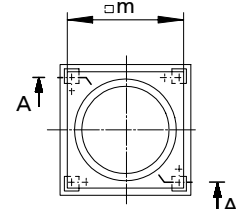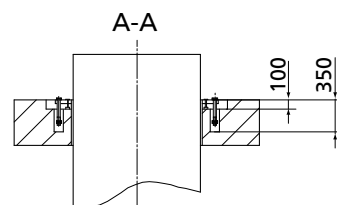

Detail X:
 support plate of the discharge tube
 Drawing: without pump

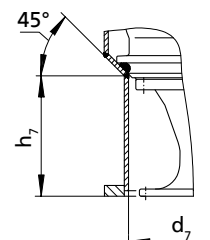

Detail Y:
 seating ring

- ①: Minimum water level (values see diagram on the next page),
 ②: Approach flow,
 ③: Flow-straightening vane (⇒ Section 9.5.7, Page 111)

Table 36: Dimensions [mm]

Size	D	b	b ₁		b ₂		d ₇	d ₈	d ₉	d ₁₂
			Suction umbrella		Suction umbrella					
			✗	✓	✗	✓				
			d ₈	d ₉	d ₈	d ₉				
650-364	660	1000	200	–	200	–	530	660	900	700
650-365	660	1000	200	–	200	–	530	660	900	700
650-404	660	1000	200	–	200	–	530	660	900	700

⁶ All dimensions for foundation recesses apply to discharge tube design without intermediate flange.

Size	D	b	b ₁		b ₂		d ₇	d ₈	d ₉	d ₁₂
			Suction umbrella		Suction umbrella					
			✗	✓	✗	✓				
			d ₈	d ₉	d ₈	d ₉				
650-405	660	1250	250	–	250	–	530	660	900	700
800-505	813	1250	250	–	250	–	680	810	1050	850

Table 37: Dimensions [mm]


Size	e ₁ ⁷⁾		h ₇	l _{min.}	m	p ₁	p ₂	t ₃ ⁷⁾	t _{4 min.} ⁸⁾
	Suction umbrella								
	✗	✓							
	d ₈	d ₉							
650-364	420	540	225	580	750	850	590	260	2350
650-365	420	540	225	580	750	850	590	260	2350
650-404	420	540	265	580	750	850	590	260	2560
650-405	420	540	265	830	750	850	590	320	2720
800-505	500	620	335	750	910	1000	740	320	2660

t₂ = 1.1 × water level, maximum 2 × t₁ (depending on head H and structure)

Height of corner lining (b₁ and b₂) like t₂


Permissible tolerances:

- Tolerances in building construction to DIN 18202, Part 4, Group B
- Welded construction: B/F to DIN EN ISO 13920
- Tolerances for conical seat (detail Y): ISO 2768-mH

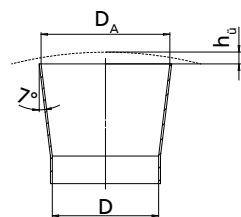

Overflow head
h₀

Loss diagram

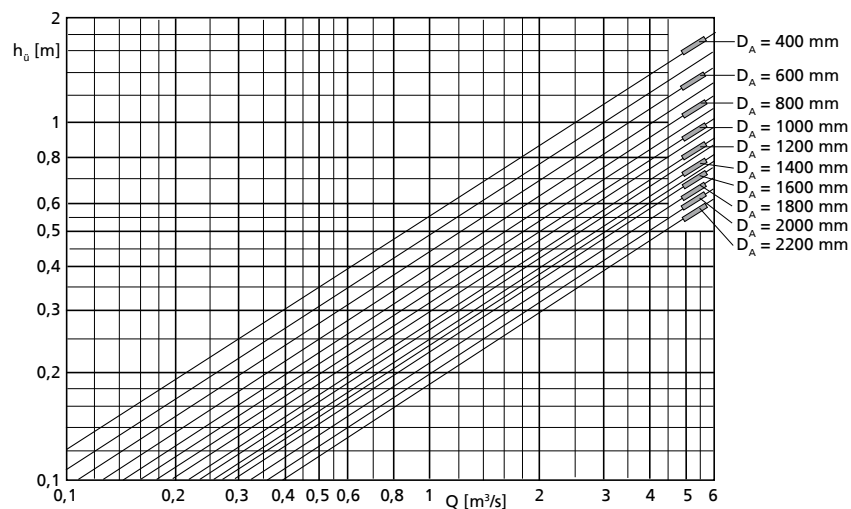

Loss diagram

Calculation formulas:

$$H = H_{\text{geo}} + \Delta H_v$$

ΔH_v

- Overflow head h₀ (see diagram)
- Loss in the riser (pipe friction)
- Outlet loss $v^2/2g$ (v refers to D_A)

Overflow head h₀ depends on Q and the discharge diameter D_A. The characteristic curve values only apply to unimpeded outlet in all directions; otherwise they are approximate values only.


⁷ Observe this dimension.

⁸ Value for maximum motor length

Minimum water level diagram

Open chamber

t_1 [mm]



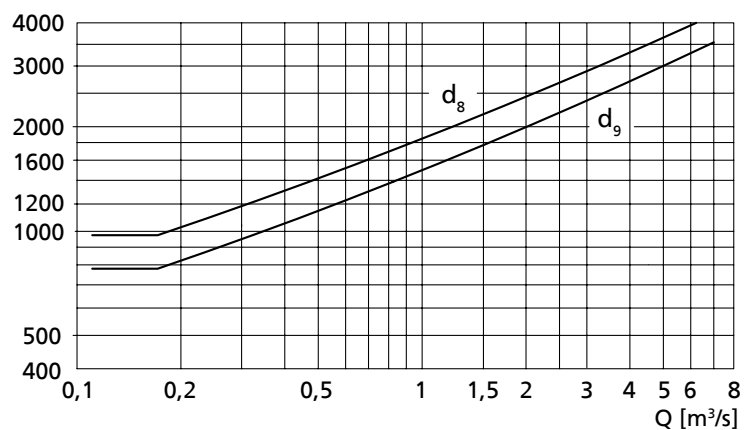


Minimum water level


d₈ = Design: **without** suction umbrella (standard)

d₉ = Design: **with** suction umbrella

9.5.2 Installation type BG

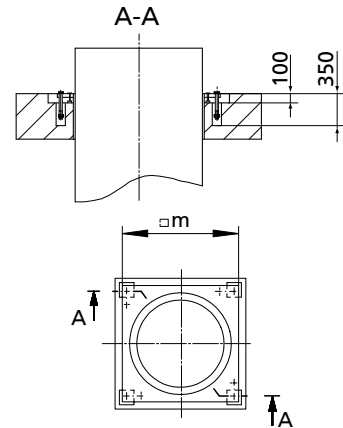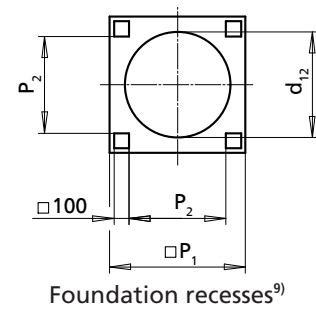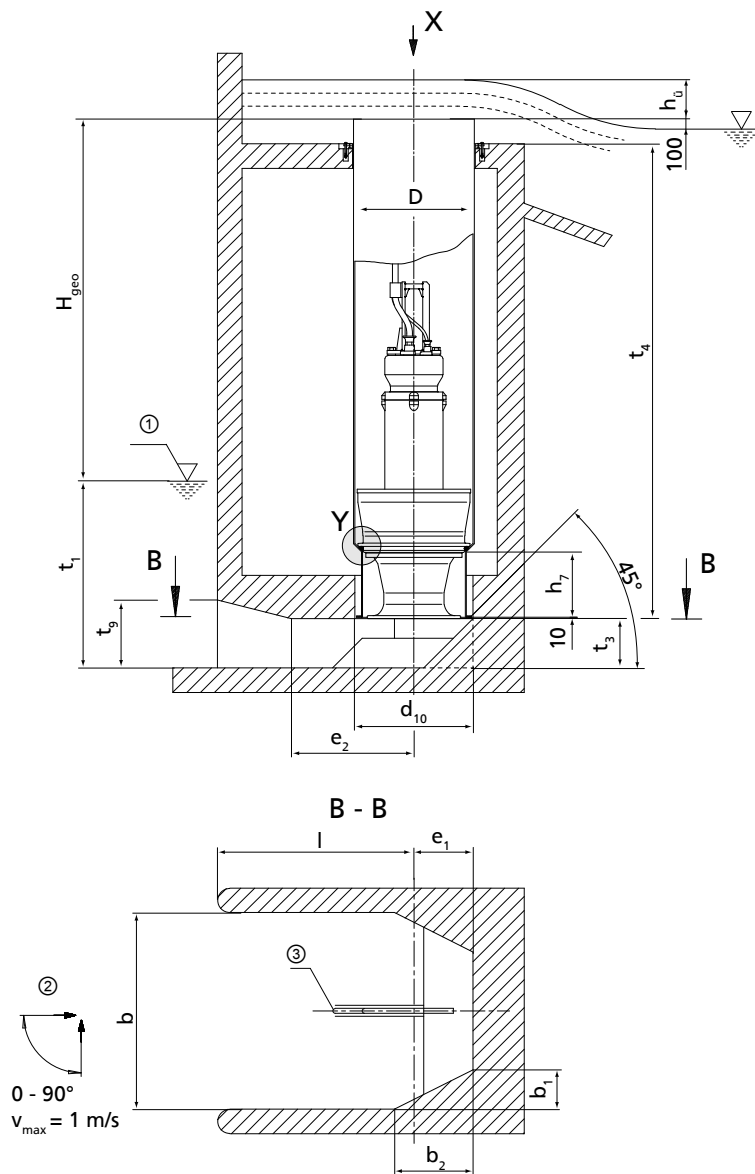

Detail X:
support plate of the discharge tube
Drawing: without pump

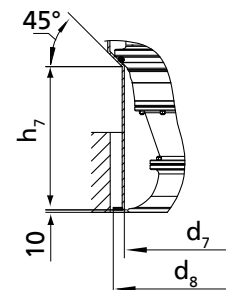

Detail Y:
seating ring

- ①: Minimum water level (values see diagram on the next page),
②: Approach flow,
③: Flow-straightening vane (⇒ Section 9.5.7, Page 111)

Table 38: Dimensions [mm]

Size	D	b	b ₁	b ₂	d ₇	d ₈	d ₁₀	d ₁₂	e ₁ ¹⁰⁾
650-364	660	1000	200	400	530	550	600	700	300
650-365	660	1000	200	400	530	550	600	700	300
650-404	660	1000	200	400	530	550	600	700	300
650-405	660	1250	250	500	530	660	690	700	375
800-505	813	1250	250	500	680	700	735	850	375

⁹⁾ All dimensions for foundation recesses apply to discharge tube design without intermediate flange.


¹⁰⁾ Observe this dimension.

Table 39: Dimensions [mm]


Size	e ₂	h ₇	l _{min}	m	p ₁	p ₂	t ₃ ¹⁰⁾	t _{4 min} ¹¹⁾	t ₉
650-364	500	225	1000	750	850	590	260	2350	375
650-365	500	225	1000	750	850	590	260	2350	375
650-404	500	265	1000	750	850	590	260	2560	375
650-405	625	265	1250	750	850	590	320	2720	470
800-505	625	335	1250	910	1000	740	320	2660	470

Permissible tolerances:

- Tolerances in building construction to DIN 18202, Part 4, Group B
- Welded construction: B/F to DIN EN ISO 13920
- Tolerances for conical seat (detail Y): ISO 2768-mH

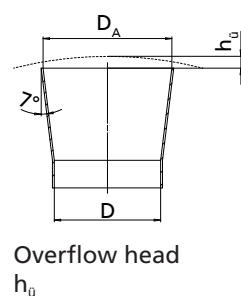

Loss diagram

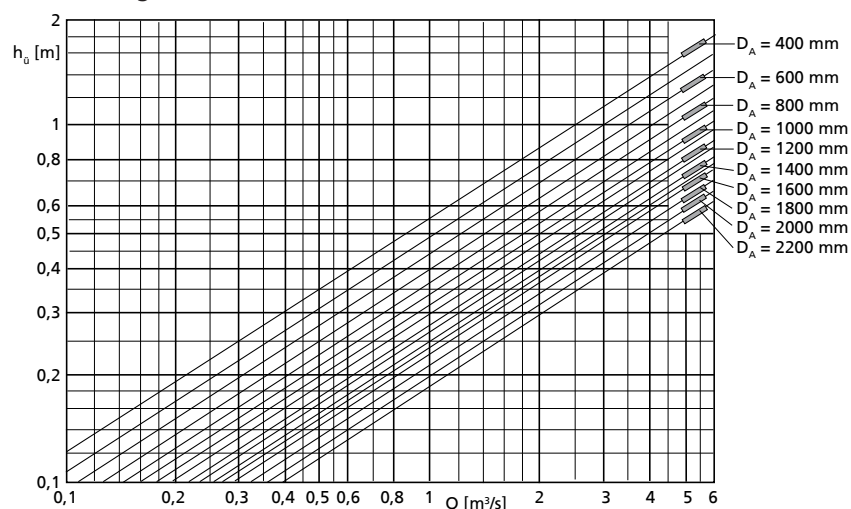

Loss diagram

Calculation formulas:

$$H = H_{\text{geo}} + \Delta H_v$$

$$\Delta H_v$$


- Overflow head h_u (see diagram)
- Loss in the riser (pipe friction)
- Outlet loss $v^2/2g$ (v refers to D_A)

Overflow head h_u depends on Q and the discharge diameter D_A . The characteristic curve values only apply to unimpeded outlet in all directions; otherwise they are approximate values only.

¹¹ Value for maximum motor length


Minimum water level diagram

Covered chamber


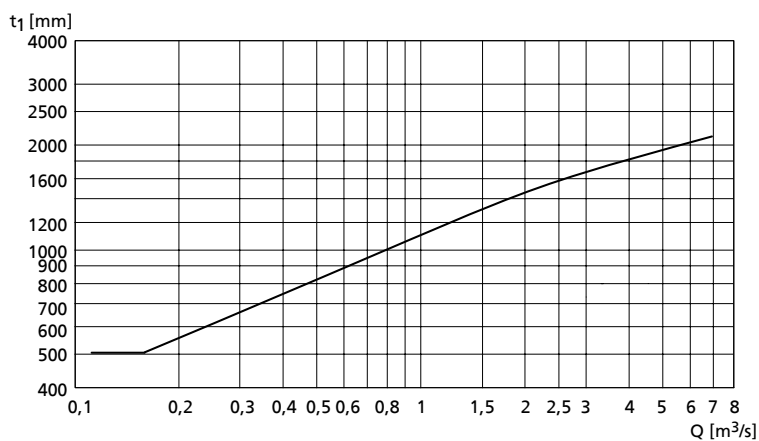


Minimum water level



9.5.3 Installation type CU

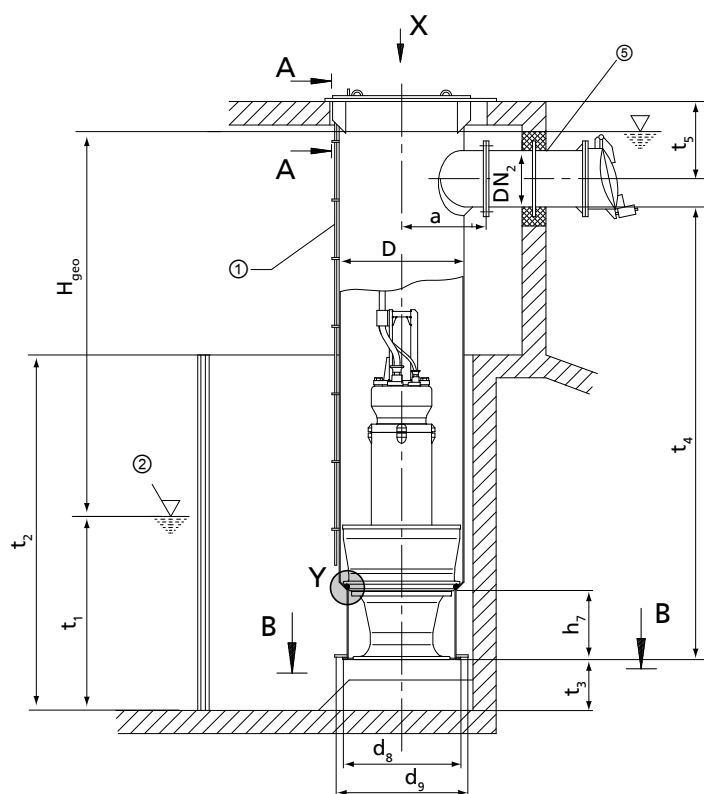


B - B

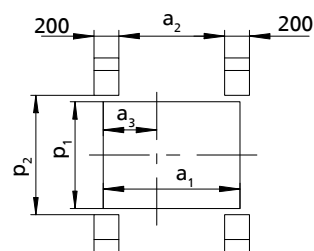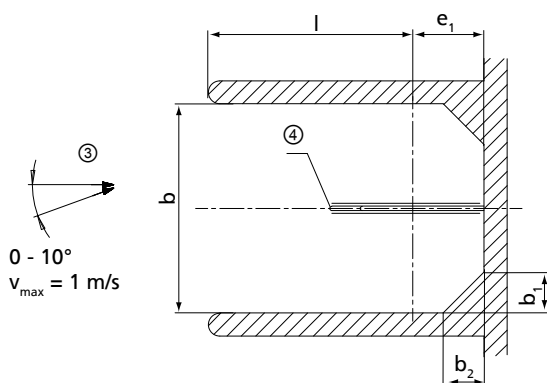

Foundation recesses¹²⁾

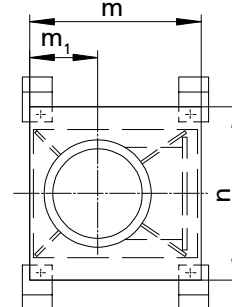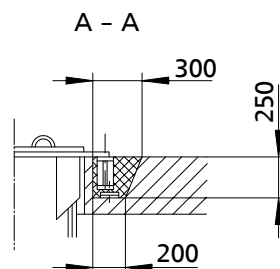

Detail X:
support plate of the discharge tube
Drawing: without pump

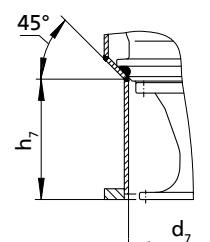

Detail Y:
seating ring

- ①: Vent line,
- ②: Minimum water level (values see diagram on the next page),
- ③: Approach flow,
- ④: Flow-straightening vane (⇒ Section 9.5.7, Page 111)
- ⑤: Connect the discharge pipe to the discharge tube without transmitting any stresses or strains.

¹²⁾ All dimensions for foundation recesses apply to discharge tube design without intermediate flange.

Table 40: Dimensions [mm]

Size	D	DN ₂ min	DN ₂ max	a	a ₁ ¹³⁾	a ₂ ¹³⁾	a ₃ ¹³⁾	b	b ₁		b ₂		d ₇
									Suction um- brella		Suction um- brella		
									✗	✓	✗	✓	
									d ₈	d ₉	d ₈	d ₉	
650-364	660	400	600	610	1050	800	405	1000	200	–	200	–	530
650-365	660	400	600	610	1050	800	405	1000	200	–	200	–	530
650-404	660	400	600	610	1050	800	405	1000	200	–	200	–	530
650-405	660	400	600	610	1050	800	405	1250	250	–	250	–	530
800-505	813	500	800	700	1220	970	480	1250	250	–	250	–	680

Table 41: Dimensions [mm]

Size	d ₈	d ₉	e ₁ ¹⁴⁾		h ₇	l _{min}	m ¹⁵⁾	m ₁ ¹⁵⁾	n ¹⁵⁾	p ₁ ¹⁵⁾	p ₂ ¹⁵⁾	t ₃ ¹⁴⁾	t _{4 min} ¹⁶⁾	t ₅ ¹⁵⁾
			Suction umbrella											
			✗	✓										
			d ₈	d ₉										
650-364	660	900	420	540	225	580	1100	430	1160	860	960	260	2350	720
650-365	660	900	420	540	225	580	1100	430	1160	860	960	260	2350	720
650-404	660	900	420	540	265	580	1100	430	1160	860	960	260	2600	720
650-405	660	900	420	540	265	830	1100	430	1160	860	960	320	2750	720
800-505	810	1050	500	620	335	750	1270	505	1375	1075	1175	320	2700	835

t₂ = 1.1 × water level, maximum 2 × t₁ (depending on head H and structure)

Height of corner lining (b₁ and b₂) like t₂

Permissible tolerances:

- Tolerances in building construction to DIN 18202, Part 4, Group B
- Welded construction: B/F to DIN EN ISO 13920
- Tolerances for conical seat (detail Y): ISO 2768-mH
- Discharge flanges to DIN EN 1092-1 PN6, DIN EN 1092-2 PN6


¹³ Designed for DN2max.

¹⁴ Observe this dimension.

¹⁵ Designed for DN2max.

¹⁶ Value for maximum motor length

Loss diagram

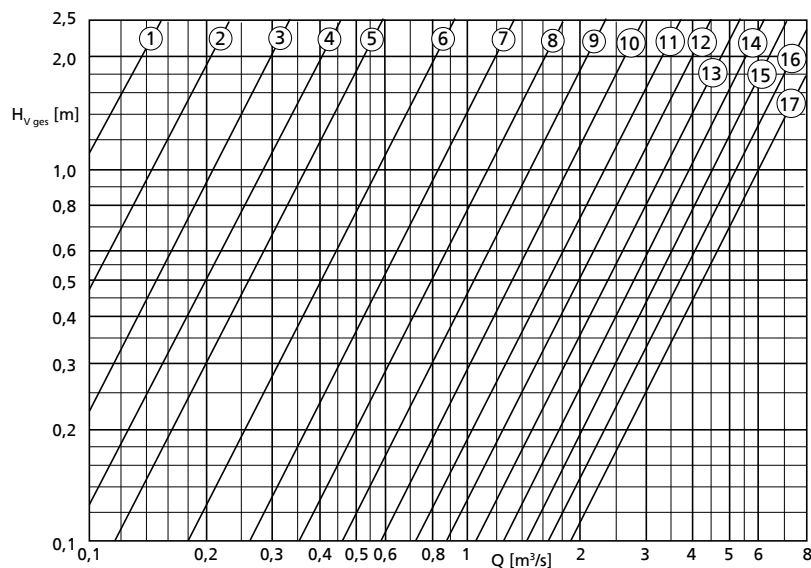

- ① - DN₂ = 200 mm
- ② - DN₂ = 250 mm
- ③ - DN₂ = 300 mm
- ④ - DN₂ = 350 mm
- ⑤ - DN₂ = 400 mm
- ⑥ - DN₂ = 500 mm
- ⑦ - DN₂ = 600 mm
- ⑧ - DN₂ = 700 mm
- ⑨ - DN₂ = 800 mm
- ⑩ - DN₂ = 900 mm
- ⑪ - DN₂ = 1000 mm
- ⑫ - DN₂ = 1100 mm
- ⑬ - DN₂ = 1200 mm
- ⑭ - DN₂ = 1300 mm
- ⑮ - DN₂ = 1400 mm
- ⑯ - DN₂ = 1500 mm
- ⑰ - DN₂ = 1600 mm

Calculation formulas:

$$H = H_{\text{geo}} + \Delta H_v$$

ΔH_v

- Loss in the riser (pipe friction)
- $H_{V \text{ ges.}}$ (see diagram)


$H_{V \text{ ges.}}$ comprises:

- Elbow
- Discharge pipe length = 5 x DN₂
- Swing check valve
- Outlet losses $v^2/2g$

Minimum water level diagram

Open chamber

t_1 [mm]



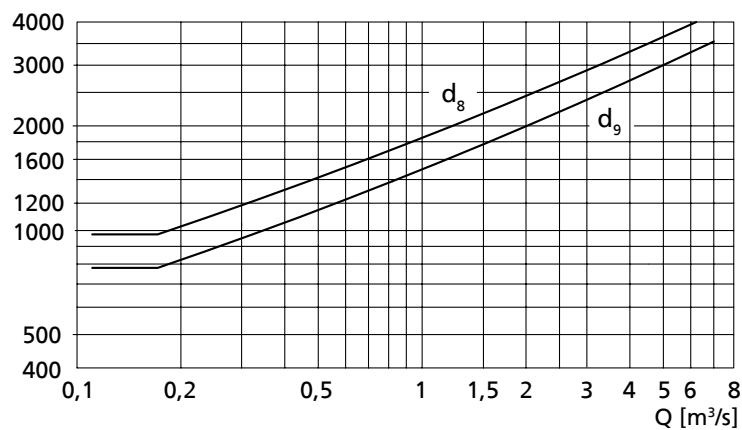


Minimum water level


d_8 = Design: **without** suction umbrella (standard)

d_9 = Design: **with** suction umbrella

9.5.4 Installation type CG

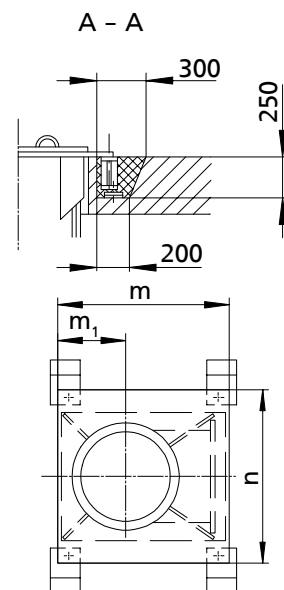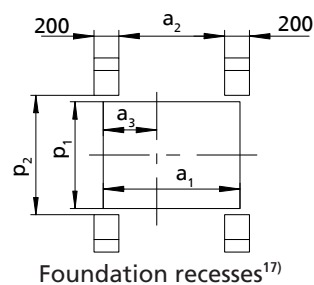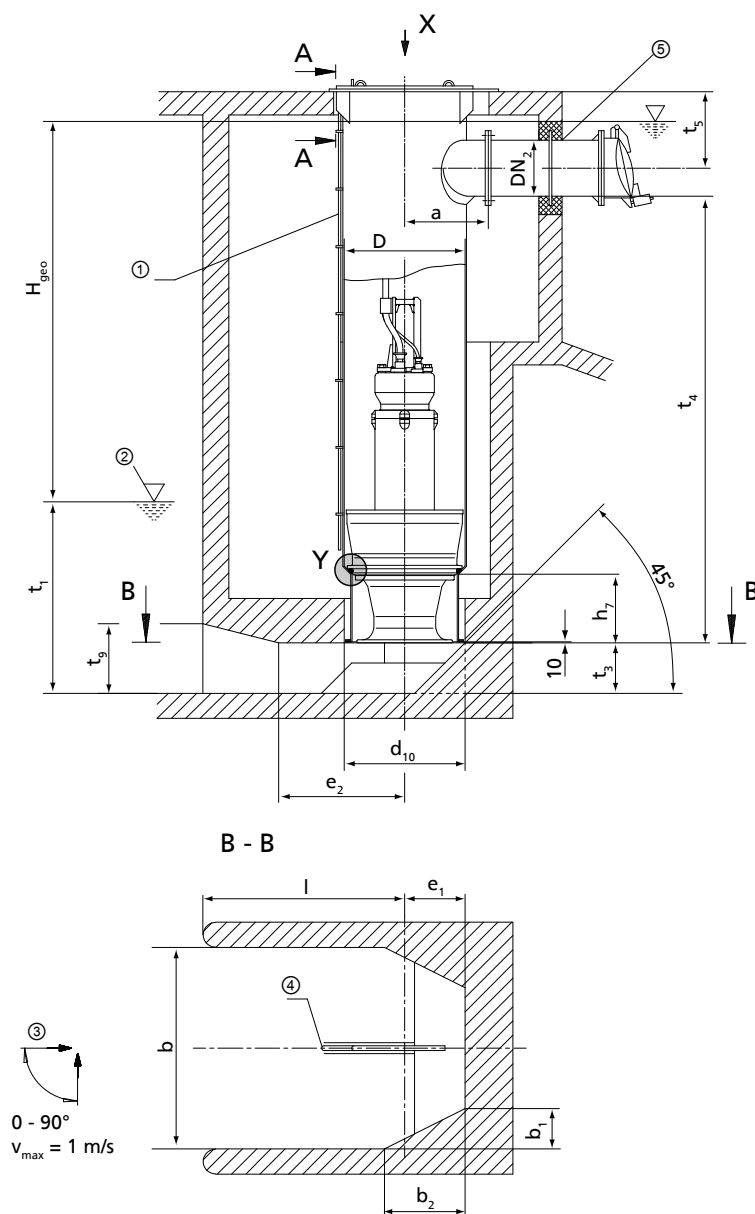

Detail X:
support plate of the discharge tube
Drawing: without pump

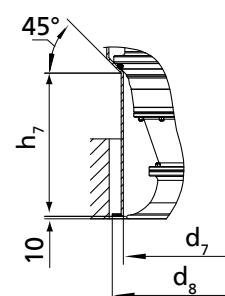

Detail Y:
seating ring

- ①: Vent line,
- ②: Minimum water level (values see diagram on the next page),
- ③: Approach flow,
- ④: Flow-straightening vane (⇒ Section 9.5.7, Page 111)
- ⑤: Connect the discharge pipe to the discharge tube without transmitting any stresses or strains.

¹⁷ All dimensions for foundation recesses apply to discharge tube design without intermediate flange.

Table 42: Dimensions [mm]

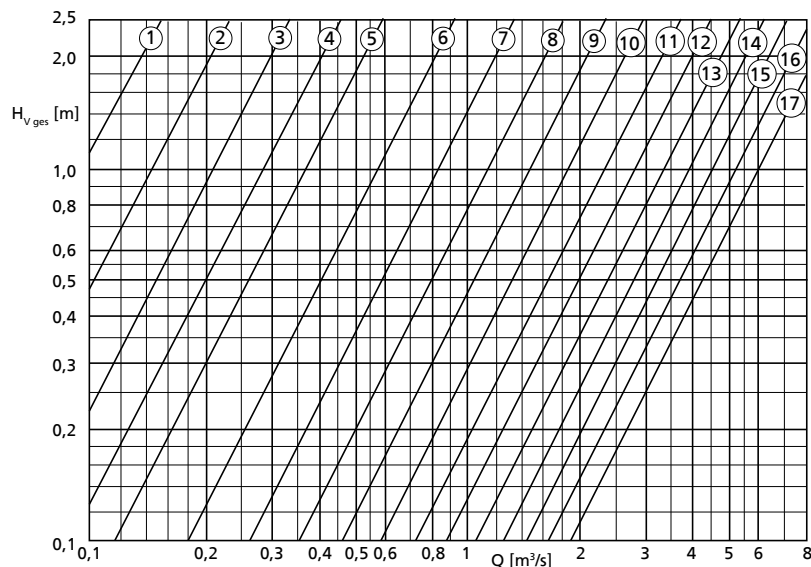
Size	D	DN ₂ min	DN ₂ max	a	a ₁ ¹⁸⁾	a ₂ ¹⁸⁾	a ₃ ¹⁸⁾	b	b ₁	b ₂	d ₇	d ₈	d ₁₀
650-364	660	400	600	610	1050	800	405	1000	200	400	530	550	600
650-365	660	400	600	610	1050	800	405	1000	200	400	530	550	600
650-404	660	400	600	610	1050	800	405	1000	200	400	530	550	600
650-405	660	400	600	610	1050	800	405	1250	250	500	530	660	690
800-505	813	500	800	700	1220	970	480	1250	250	500	680	700	735

Table 43: Dimensions [mm]

Size	e ₁ ¹⁹⁾	e ₂	h ₇	l _{min}	m ¹⁸⁾	m ₁ ¹⁸⁾	n ¹⁸⁾	p ₁ ¹⁸⁾	p ₂ ¹⁸⁾	t ₃ ¹⁹⁾	t _{4 min} ²⁰⁾	t _{5 min} ¹⁸⁾	t ₉
650-364	300	500	225	1000	1100	430	1160	860	960	260	2350	720	375
650-365	300	500	225	1000	1100	430	1160	860	960	260	2350	720	375
650-404	300	500	265	1000	1100	430	1160	860	960	260	2600	720	375
650-405	375	625	265	1250	1100	430	1160	860	960	320	2750	720	470
800-505	375	625	335	1250	1270	505	1375	1075	1175	320	2700	835	470

Permissible tolerances:

- Tolerances in building construction to DIN 18202, Part 4, Group B
- Welded construction: B/F to DIN EN ISO 13920
- Tolerances for conical seat (detail Y): ISO 2768-mH
- Discharge flanges to DIN EN 1092-1 PN6, DIN EN 1092-2 PN6

Loss diagram


- ① - DN₂ = 200 mm
- ② - DN₂ = 250 mm
- ③ - DN₂ = 300 mm
- ④ - DN₂ = 350 mm
- ⑤ - DN₂ = 400 mm
- ⑥ - DN₂ = 500 mm
- ⑦ - DN₂ = 600 mm
- ⑧ - DN₂ = 700 mm
- ⑨ - DN₂ = 800 mm
- ⑩ - DN₂ = 900 mm
- ⑪ - DN₂ = 1000 mm
- ⑫ - DN₂ = 1100 mm
- ⑬ - DN₂ = 1200 mm
- ⑭ - DN₂ = 1300 mm
- ⑮ - DN₂ = 1400 mm
- ⑯ - DN₂ = 1500 mm
- ⑰ - DN₂ = 1600 mm

Calculation formulas:

$$H = H_{\text{geo}} + \Delta H_v$$

$$\Delta H_v$$

- Loss in the riser (pipe friction)
- H_{v ges.} (see diagram)

H_{v ges.} comprises:

- Elbow
- Discharge pipe length = 5 x DN₂
- Swing check valve
- Outlet losses $v^2/2g$


¹⁸ Designed for DN₂max.

¹⁹ Observe this dimension.

²⁰ Value for maximum motor length


Minimum water level diagram

Covered chamber



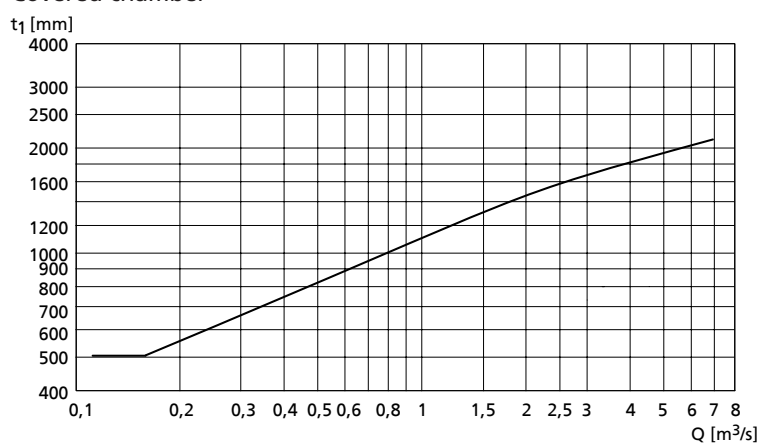


Minimum water level


9.5.5 Installation type DU

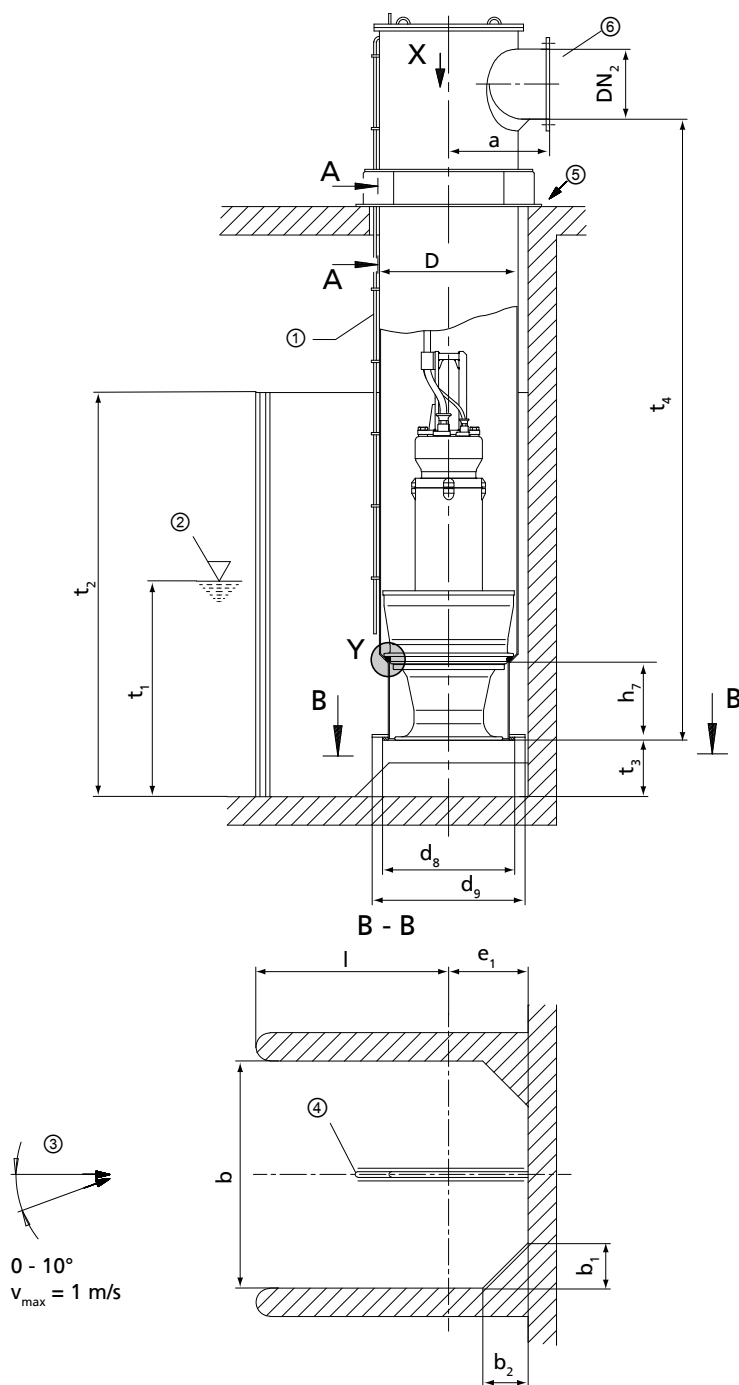

- ①: Vent line,
- ②: Minimum water level (values see diagram on the next page),
- ③: Approach flow,
- ④: Flow-straightening vane (⇒ Section 9.5.7, Page 111) ,
- ⑤: Not pressure-proof
- ⑥: Connect the discharge pipe to the discharge tube without transmitting any stresses or strains.

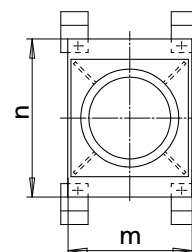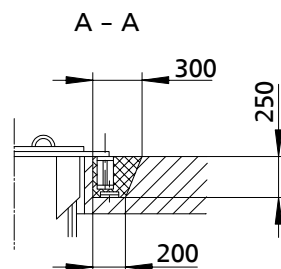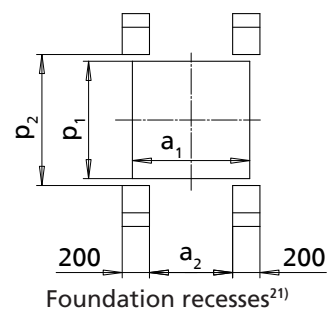

Detail X:
support plate of the discharge tube
Drawing: without pump

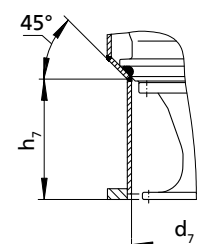

Detail Y:
seating ring

²¹ All dimensions for foundation recesses apply to discharge tube design without intermediate flange.

Table 44: Dimensions [mm]

Size	D	DN ₂ min	DN ₂ max	a	a ₁	a ₂	b	b ₁		b ₂		d ₇
								Suction umbrella		Suction umbrella		
								✗	✓	✗	✓	
								d ₈	d ₉	d ₈	d ₉	
650-364	660	400	600	610	810	560	1000	200	–	200	–	530
650-365	660	400	600	610	810	560	1000	200	–	200	–	530
650-404	660	400	600	610	810	560	1000	200	–	200	–	530
650-405	660	400	600	610	810	560	1250	250	–	250	–	530
800-505	813	500	800	700	960	710	1250	250	–	250	–	680

Table 45: Dimensions [mm]

Size	d ₈	d ₉	e ₁ ²²⁾		h ₇	l _{min}	m	n	p ₁	p ₂	t ₃ ²²⁾	t _{4 min} ²³⁾
			Suction umbrella									
			✗	✓								
			d ₈	d ₉								
650-364	660	900	420	540	225	580	860	1110	810	910	260	2350
650-365	660	900	420	540	225	580	860	1110	810	910	260	2350
650-404	660	900	420	540	265	580	860	1110	810	910	260	2600
650-405	660	900	420	540	265	830	860	1110	810	910	320	2750
800-505	810	1050	500	620	335	750	1030	1260	960	1060	320	2700


t₂ = 1.1 × water level, maximum 2 × t₁ (depending on head H and structure)
Height of corner lining (b₁ and b₂) like t₂

Permissible tolerances:

- Tolerances in building construction to DIN 18202, Part 4, Group B
- Welded construction: B/F to DIN EN ISO 13920
- Tolerances for conical seat (detail Y): ISO 2768-mH
- Discharge flanges to DIN EN 1092-1 PN6, DIN EN 1092-2 PN6

²² Observe this dimension.

²³ Value for maximum motor length

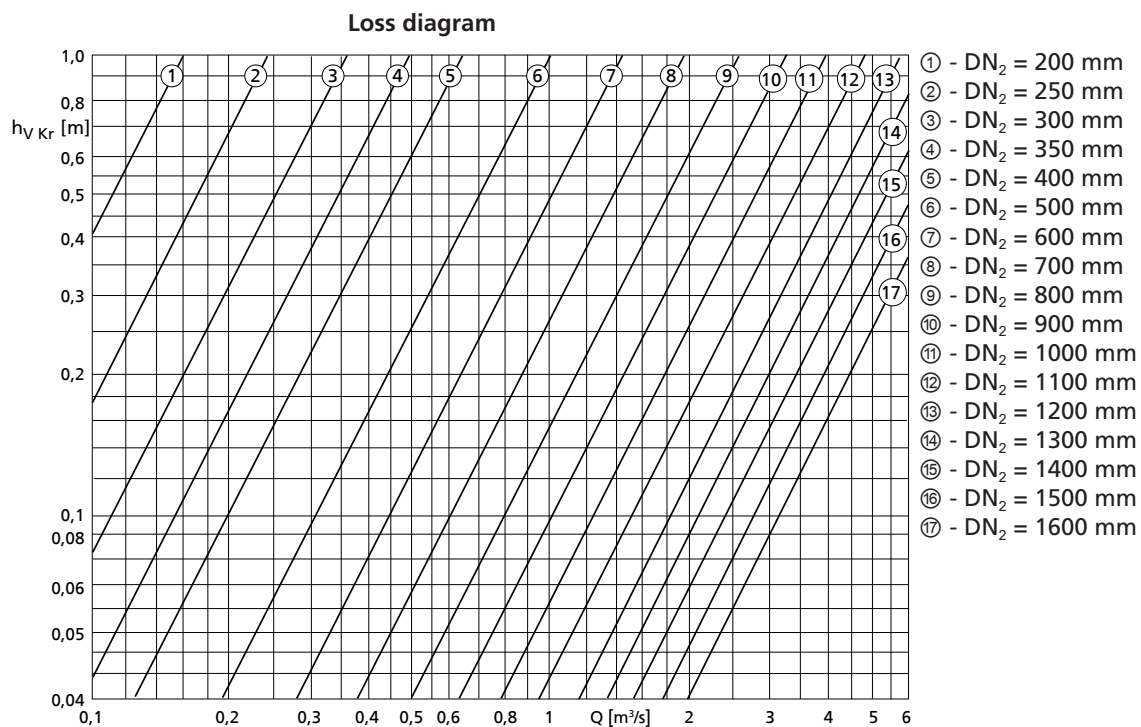

Calculation formulas:

$$H = H_{\text{geo}} + \Delta H_v$$

$$\Delta H_v$$


- Loss in the elbow $h_{v \text{ Kr}}$ (see diagram)
- Loss in the riser (pipe friction)
- $H_{v \text{ System}}$ (valves, etc.)

$H_{v \text{ System}}$ must be determined for the specific system.

Minimum water level diagram

Open chamber

t_1 [mm]

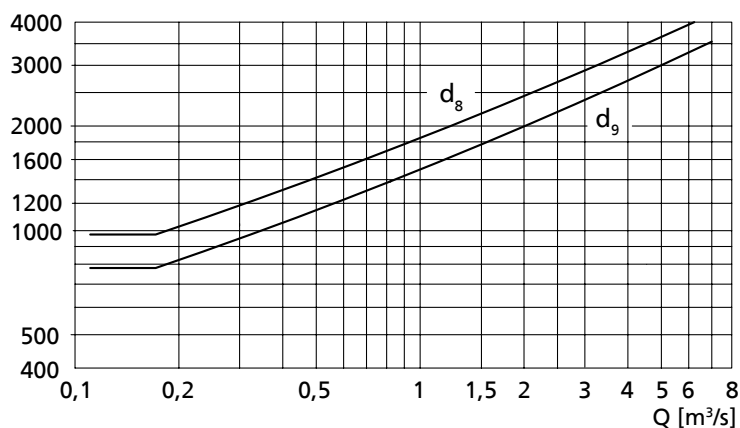


Minimum water level

d_8 = Design: **without** suction umbrella (standard)

d_9 = Design: **with** suction umbrella

9.5.6 Installation type DG

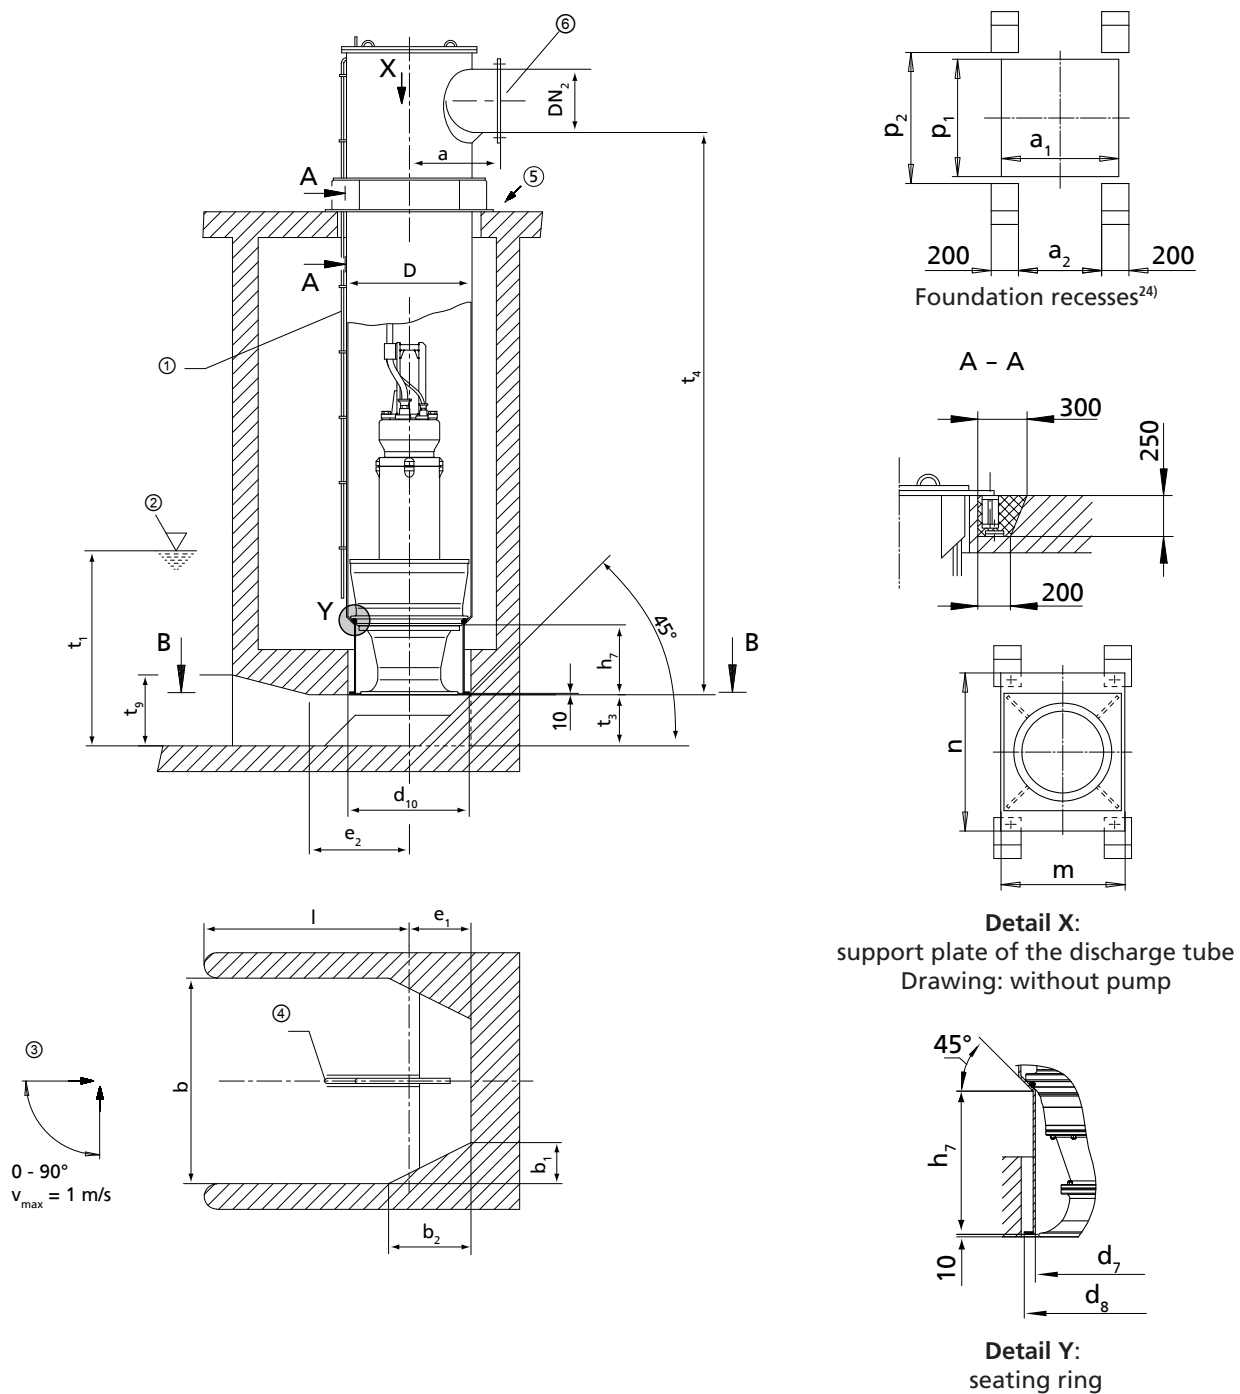

²⁴ All dimensions for foundation recesses apply to discharge tube design without intermediate flange.

Table 46: Dimensions [mm]

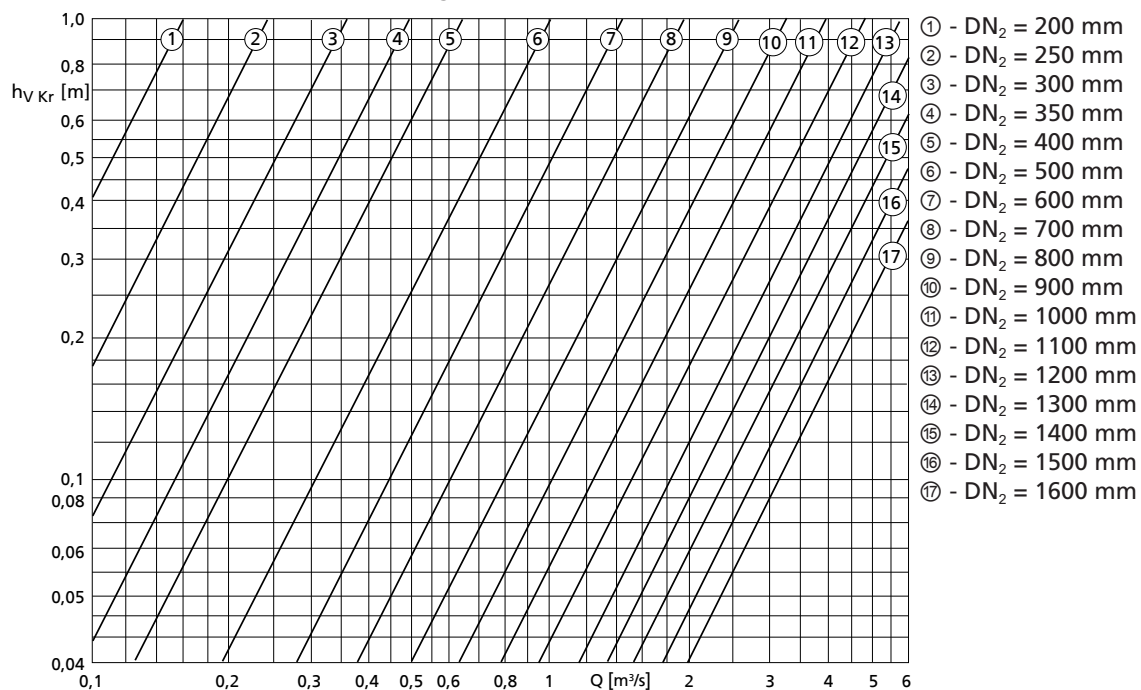
Size	D	DN ₂ min	DN ₂ max	a	a ₁	a ₂	b	b ₁	b ₂	d ₇	d ₈	d ₁₀
650-364	660	400	600	610	810	560	1000	200	400	530	550	600
650-365	660	400	600	610	810	560	1000	200	400	530	550	600
650-404	660	400	600	610	810	560	1000	200	400	530	550	600
650-405	660	400	600	610	810	560	1250	250	500	530	660	690
800-505	813	500	800	700	960	710	1250	250	500	680	700	735

Table 47: Dimensions [mm]

Size	e ₁ ²⁵⁾	e ₂	h ₇	l _{min}	m	n	p ₁	p ₂	t ₃ ²⁵⁾	t _{4 min} ²⁶⁾	t ₉
650-364	300	500	225	1000	860	1110	810	910	260	2350	375
650-365	300	500	225	1000	860	1110	810	910	260	2350	375
650-404	300	500	265	1000	860	1110	810	910	260	2600	375
650-405	375	625	265	1250	860	1110	810	910	320	2750	470
800-505	375	625	335	1250	1030	1260	960	1060	320	2700	470

Permissible tolerances:

- Tolerances in building construction to DIN 18202, Part 4, Group B
- Welded construction: B/F to DIN EN ISO 13920
- Tolerances for conical seat (detail Y): ISO 2768-mH
- Discharge flanges to DIN EN 1092-1 PN6, DIN EN 1092-2 PN6

Loss diagram


Calculation formulas:

$$H = H_{\text{geo}} + \Delta H_v$$

ΔH_v

- Loss in the elbow $h_{v \text{ Kr}}$ (see diagram)
- Loss in the riser (pipe friction)
- $H_{v \text{ System}}$ (valves, etc.)


$H_{v \text{ System}}$ must be determined for the specific system.

²⁵ Observe this dimension.

²⁶ Value for maximum motor length

Minimum water level diagram

Covered chamber

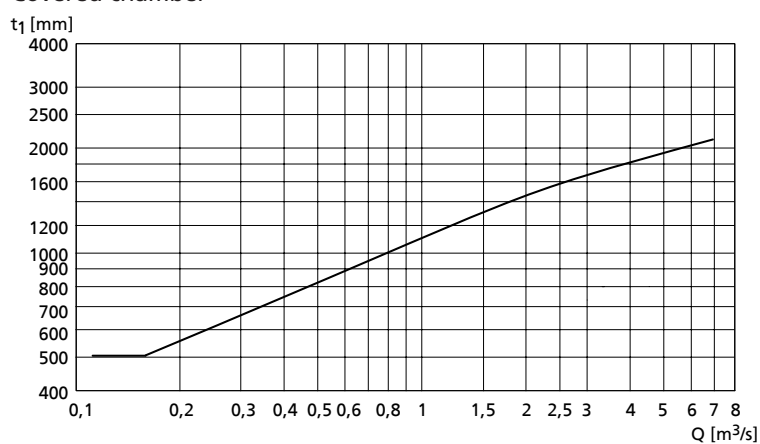

Minimum water level

9.5.7 Dimensions of the flow-straightening vane

Design of the intake chamber wall surfaces (to prevent vortex formation)

The flow-straightening vane is indispensable for the inlet conditions of the pump set. It prevents the development of a submerged vortex (floor vortex) which could cause a drop in performance, for example. In addition, the floor and wall surfaces of the intake chamber should be designed as a rough concrete surface. Rough surfaces minimise the separation of boundary layers that may cause wall and floor vortices.

Flow-straightening vane and intake chamber

- The anti-swirl baffles in the bellmouth must be aligned with the flow-straightening vane.
- The bail of the pump is oriented in the same direction as the anti-swirl baffles in the bellmouth.


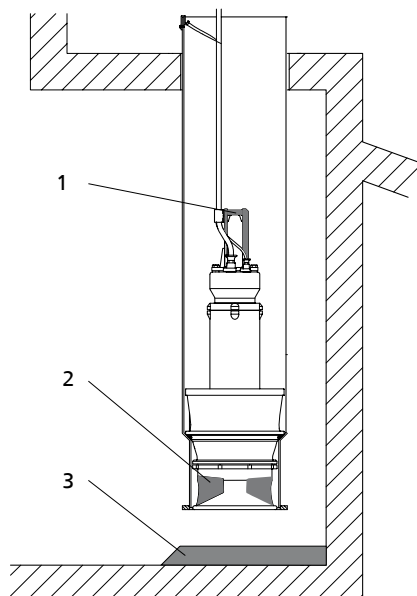



Fig. 56: Installation position of the pump set

1	Bail
2	Anti-swirl baffles
3	Flow-straightening vane

Variant 1
Flow-straightening vane cast from concrete

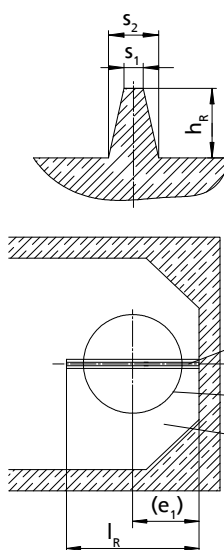

Variant 2
Steel section

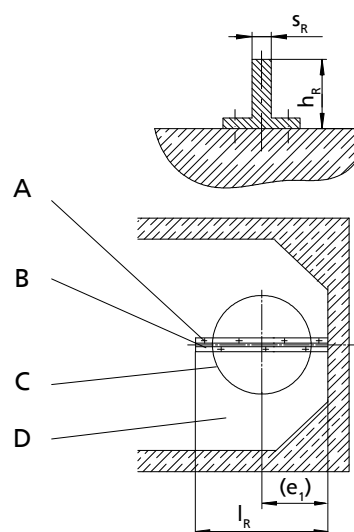

A	Bolted to the floor of the intake chamber
B	Flow-straightening vane centred beneath the discharge tube
C	Discharge tube
D	Intake chamber

Installation types BU, CU, DU

Table 48: Dimensions [mm]

Size	h_R	s_R	s_1	s_2	$(e_1)^{27)}$		$l_R^{28)}$	
					Suction umbrella		Suction umbrella	
					$\times$	$\checkmark$	$\times$	$\checkmark$
					d_8	d_9	d_8	d_9
650-364	150	10	20	60	420	540	835	955
650-365	150	10	20	60	420	540	835	955
650-404	150	10	20	60	420	540	835	955
650-405	190	10	20	70	420	540	875	1050
800-505	190	10	20	70	500	620	1050	1150

Installation types BG, CG, DG

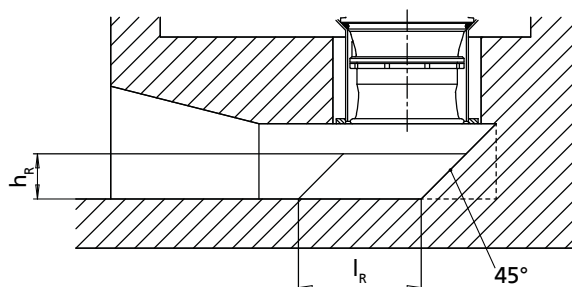


Fig. 57: Flow-straightening vane for covered intake chamber

Table 49: Dimensions [mm]

Size	h_R	s_R	s_1	s_2
650-364	150	10	20	60
650-365	150	10	20	60
650-404	150	10	20	60
650-405	190	10	20	70
800-505	190	10	20	70

²⁷ See installation examples for types BU, CU and DU

²⁸ Adjust length l_R of the flow straightening vane to the 45° angle of the intake chamber.

10 UK Declaration of Conformity

Manufacturer:

KSB SE & Co. KGaA
Johann-Klein-Straße 9

67227 Frankenthal (Germany)

This UK Declaration of Conformity is issued under the sole responsibility of the manufacturer.

The manufacturer herewith declares that **the product**:

Amacan K, Amacan P, Amacan S

KSB order number:

- is in conformity with the provisions of the following directives / regulations as amended from time to time:
 - Pump (set): Supply of Machinery (Safety) Regulations 2008
 - Electrical components²⁹⁾: The Restriction of the Use of Certain Hazardous Substances in Electrical and Electronic Equipment Regulations 2012

The manufacturer also declares that

- the following *designated standards*³⁰⁾ have been applied:
 - ISO 12100
 - EN 809
 - EN 60034-1, EN 60034-5/A1

Person authorised to compile the technical file:

Name
 Function
 Address (company)
 Address (street, No.)
 Address (post or ZIP code, city) (country)

The UK Declaration of Conformity was issued in/on:

Place, date

.....³¹⁾.....

Name
 Function
 Company
 Address

²⁹ Where applicable

³⁰ Apart from the standards listed here referring to the *Supply of Machinery (Safety) Regulations 2008*, further standards are observed for explosion-proof versions (*Equipment and Protective Systems Intended for use in Potentially Explosive Atmospheres Regulations 2016*) as applicable and are listed in the legally binding UK Declaration of Conformity.

³¹ A signed, legally binding UK Declaration of Conformity is supplied with the product.

11 Certificate of Decontamination

Type:
Order number /
Order item number³²⁾:
Delivery date:
Application:
Fluid handled³²⁾:

Please tick where applicable³²⁾:



Corrosive



Oxidising



Flammable



Explosive



Hazardous to health



Seriously hazardous to health



Toxic



Radioactive



Bio-hazardous



Safe

Reason for return:³²⁾
Comments:
.....

The product / accessories have been carefully drained, cleaned and decontaminated inside and outside prior to dispatch / placing at your disposal.

We herewith declare that this product is free from hazardous chemicals and biological and radioactive substances.

For mag-drive pumps, the inner rotor unit (impeller, casing cover, bearing ring carrier, plain bearing, inner rotor) has been removed from the pump and cleaned. In cases of containment shroud leakage, the outer rotor, bearing bracket lantern, leakage barrier and bearing bracket or intermediate piece have also been cleaned.

For canned motor pumps, the rotor and plain bearing have been removed from the pump for cleaning. In cases of leakage at the stator can, the stator space has been examined for fluid leakage; if fluid handled has penetrated the stator space, it has been removed.

- ☐ No special safety precautions are required for further handling.
☐ The following safety precautions are required for flushing fluids, fluid residues and disposal:

.....
.....

We confirm that the above data and information are correct and complete and that dispatch is effected in accordance with the relevant legal provisions.

.....
Place, date and signature

.....
Address

.....
Company stamp

³²⁾ Required field

Index

A

Abrasive fluids 47
Applications 9

B

Bearing temperature monitoring 42
Bearings 19

C

Certificate of Decontamination 114
Commissioning/start-up 44

D

Design 19
Designation 18
Dismantling 63
Disposal 17
Drive 19

E

Electrical connection 42
Electromagnetic compatibility 39
Event of damage 7
 Ordering spare parts 79
Explosion protection 38, 40, 42, 45, 56

F

Faults
 Causes and remedies 81
Fluid handled
 Density 46

G

Grease lubrication
 Grease quality 61

I

Impeller type 19
Installation 23
Intended use 9
Interference immunity 39

K

Key to safety symbols/markings 8

L

Leakage monitoring 41
Level control 38
Lubricant 56
 Quantity 57

M

Maintenance 51
Mechanical seal leakage 41

O

Operation on a frequency inverter 39, 45
Order number 7
Other applicable documents 7
Overload protection 38

P

Partly completed machinery 7
Preservation 15
Product description 18

R

Reassembly 63, 69
Return to supplier 16
Returning to service 48

S

Safety 9
Safety awareness 10
Scope of supply 22
Sensors 40
Shaft seal 19
Shutdown 48
Spare part
 Ordering spare parts 79
Spare parts stock 79
Start-up 44
Storage 15, 48
Supply voltage 45

T

Tightening torques 78

W

Warnings 8
Warranty claims 7



KSB SE & Co. KGaA

Johann-Klein-Straße 9 • 67227 Frankenthal (Germany)

Tel. +49 6233 86-0

www.ksb.com